

RUBBER HAND STAMPS
AND THE MANIPULATION OF INDIA RUBBER

T. O'CONOR SLOANE, A. M., E. M., Ph. D.



Class TS 1920

Book S 6

Copyright No. 1912

COPYRIGHT DEPOSIT.

RUBBER HAND STAMPS

AND THE MANIPULATION OF RUBBER

A PRACTICAL TREATISE ON THE MANUFACTURE OF
INDIA RUBBER HAND STAMPS, SMALL ARTICLES
OF INDIA RUBBER, THE USE OF RUBBER IN
SURGERY AND DENTISTRY, RUBBER TIRES,
THE HEKTOGRAPH, SPECIAL INKS,
CEMENTS AND ALLIED SUBJECTS


ALSO

Giving the Sources of India Rubber and Its History—Its
Collection—Properties of Unvulcanized and Vulcanized
Rubber—The Manufacture of Masticated Mixed Sheet,
and Vulcanized India Rubber—Various Vulcanizing
and Curing Processes—The Solution of India Rub-
ber—Ebonite—Vulcanite—Gutta Percha, Etc.

BY

T. O'CONOR SLOANE, A.M., E.M., Ph.D.

Author of "Arithmetic of Electricity," "Electricity Simplified,"
"Standard Electrical Dictionary," etc.

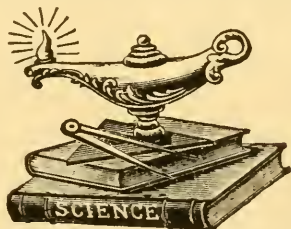

REVISED THIRD EDITION FULLY ILLUSTRATED

NEW YORK
THE NORMAN W. HENLEY PUBLISHING CO.
132 Nassau Street

1912

TS1920
56
1912

COPYRIGHT, 1890, BY
NORMAN W. HENLEY & CO.
COPYRIGHT, 1912, BY
THE NORMAN W. HENLEY PUBLISHING CO.

12-14/69

orig. given 11, 1917.

PREFACE.

THE present work hardly needs a preface. The object is to present in the simplest form the subject of the manipulation of india rubber. To mould and cure the mixed gum but few appliances are needed, and these can be made at home. The articles produced are of more than ordinary utility. These two facts give value to the art and furnish a *raison d'être* for this book. If its instructions do not prove practical it will have missed its object.

For some reason the methods of moulding the material are not generally known. Experiment has taught many the futility of attempting to melt and cast it. While thus intractable by the usual methods, it is the most plastic of materials when properly treated. Its power of reproducing the finest details of a mould, of entering all the intricacies and undercuttings of a design, cause one to feel a peculiar pleasure in working with so responsive a material. It is not saying too much to affirm that to some readers this book will disclose a long hidden secret. To make it more generally useful it is writ-

ten for such readers, to meet the want of those knowing of the subject. It was felt that in following this course, and in treating the subject from its first steps, including the simplest as well as most advanced methods, the book would appeal to a larger body of readers.

The allied subjects to which some chapters are devoted will be acceptable to many readers. The hektograph is given in several modifications. A substitute for rubber stamps which stands the severe usage of the Post Office has very distinct merits, and the manufacture is accordingly described in detail. Cements and inks embody many special formulæ. In the last chapter interesting and practical notes will be found.

For the use of certain cuts we are under obligations to the Buffalo Dental Manufacturing Co., Messrs. E. & F. N. Spon & Co., and to Mr. L. Spangenberg.

Preface to Third Revised Edition

This work has been revised and enlarged by the addition of chapters on the Use of Rubber in Surgery and Dentistry and the Construction and Repairing of Rubber Tires. The addition of this matter, we believe, will greatly interest the reader.

JUNE, 1912.

CONTENTS.

CHAPTER I.

PAGE

THE SOURCES OF INDIA RUBBER AND ITS HISTORY.

The Trees—The Sap—Caoutchouc—Early Uses by the Indians—First knowledge of it in Europe—Good-year, Day, and Mackintosh..... 9

CHAPTER II.

THE NATURAL HISTORY AND COLLECTION OF INDIA RUBBER.

African, East Indian, Central and South American Gums—Different Methods of Collection and Coagulation 15

CHAPTER III.

PROPERTIES OF UNVULCANIZED AND VULCANIZED INDIA RUBBER.

Properties of Unvulcanized Rubber; its Cohesion and importance of this property—Analysis of Sap and Caoutchouc—Effects of Heat and Cold—Distillation Products—Vulcanized Rubber, and its Properties..... 24

CHAPTER IV.

THE MANUFACTURE OF MASTICATED, MIXED SHEET AND VULCANIZED INDIA RUBBER.

Treatment by the Manufacturer—Washing and Sheet-

ing—Masticating—Making Sheetting and Threads—Mix- ing—Curing—Coated Tissues.....	35
---	----

CHAPTER V.

INDIA RUBBER STAMP MAKING.

Mixed Sheet—Outlines of Moulding—Home-Made Vulcanizing Press—Further Simplifications of Same— Securing Accurate Parallelism of Platen and Bed—Dis- tance Pieces—Wood vs. Iron as Material for Press— Use of Springs on the Home-Made Press—Metal Flask Clamps—Large Gas-Heated Vulcanizing Press—Prepar- ing Type Model—The Matrix—Plaster of Paris and Dental Plaster as Substances for Matrices—Dextrine and Gum Arabic Solutions for Mixing Matrix—How Matrix is made—Shellac Solution for Matrix—Matrix Press and Spring-Chase—How to retard the Setting of Plaster of Paris—Oxychloride of Zinc Matrices—Talc Powder—Moulding and Curing the Stamp—Kerosene Heating Stove—Manipulation of Press—Degree of Heat —Simple Test of Curing—Time Required—Combined Matrix Making and Vulcanizing Apparatus—Chamber Vulcanizers—Object of Steam in Vulcanizers—Temper- ature Corresponding to Different Steam Pressures— Jacketed Vulcanizers—Gas Regulator—Flower Pot Vulcanizer—Fish Kettle Vulcanizer—Making Stamps without any Apparatus Whatever—Notes on Type, Quadrats and Spaces—Autograph Stamps.....	47
---	----

CHAPTER VI.

INDIA RUBBER TYPE MAKING.

Movable Type Making—Simple Flask and Matrix— Precautions as to Quantity of Rubber—Moulding— Curing—Cutting Type Apart—Special Steel Moulds— Wooden Bodied Type.....	73
--	----

CHAPTER VII.

THE MAKING OF STAMPS AND TYPE FROM VULCANIZED INDIA RUBBER.

Ready Vulcanized Gum as Material for Stamps—Simplicity of the Process of Using It—Advantages and Disadvantages—Availability for Type..... 77

CHAPTER VIII.

VARIOUS TYPE MATRICES FOR RUBBER STAMPS AND TYPES.

Electrotype Matrices—Papier Maché—Flong Paste—Flong Matrices—Beating into Model—Drying and Baking—Struck-up Matrices—Chalk Plates..... 80

CHAPTER IX.

THE MAKING OF VARIOUS SMALL ARTICLES OF INDIA RUBBER.

Suction Discs—Pencil Tips—Cane and Chair Leg Tips—Corks—Mats—Cord and Tubes—Bulbs and Hollow Toys..... 85

CHAPTER X.

THE MANIPULATION OF SHEET RUBBER GOODS.

Sheet Rubber Articles—Toy Balloons—Uses of Sheet Rubber in the Laboratory..... 94

CHAPTER XI.

VARIOUS VULCANIZING AND CURING PROCESSES.

Liquid Curing Baths—Sulphur Bath—Haloids and Nitric Acid as Vulcanizers—Alkaline Sulphides—Sulphur Absorption Process—Parke's Process..... 97

CHAPTER XII.

THE SOLUTION OF INDIA RUBBER.

Mastication with Solvent—Peculiarities of the Pro-

cess—Different Solvents and their Properties—Paraffin—Vulcanized Rubber Solution—Aqueous Solution.....	103
--	-----

CHAPTER XIII.

EBONITE, VULCANITE AND GUTTA PERCHA.

Ebonite and Vulcanite—Manufacture—Manipulation—Gutta Percha and its Manipulation.....	108
---	-----

CHAPTER XIV.

GLUE OR COMPOSITION STAMPS.

Substitute for Rubber Stamps—The United States Government Formula—Models and Moulds—Dating—Handles.....	113
---	-----

CHAPTER XV.

RUBBER IN SURGERY AND DENTISTRY.

Rubber in Surgery and Dentistry.	121
---------------------------------------	-----

CHAPTER XVI.

RUBBER TIRES.

Constructing and Repairing Rubber Vehicle Tires—Rubber Preparations—Chemical or Cold Vulcanizing	127
--	-----

CHAPTER XVII.

THE HEKTOGRAPH.

How Made—The French Government Formula—Hektograph Sheets.....	142
---	-----

CHAPTER XVIII.

CEMENTS.

Marine Glue, and other special Cements.....	146
---	-----

CHAPTER XIX.

INKS.

Hektograph, Stencil and Marking Inks—White and Metallic Inks.....	150
---	-----

CHAPTER XX.

MISCELLANEOUS.

Preservation and Renovation of India Rubber—Burned Rubber for Artists—India Rubber Substitutes—General Notes of Interest.....	155
---	-----

RUBBER HAND STAMP MAKING AND THE MANIPULATION OF RUBBER.

CHAPTER I.

THE SOURCES OF INDIA RUBBER AND ITS HISTORY.

INDIA rubber or caoutchouc is a very peculiar product, which is found in and extracted from the juice of certain trees and shrubs. These are quite numerous and are referred for the most part to the following families: Euphorbiaceæd, Urticaceæd, Artocarpeæd, Asclepiadaceæd, and Cinchonaceæd. It is evident that a considerable number of trees are utilized in commerce for its production, and it is certain that it exists, quite widely distributed, in many cases as a constituent of the juice of plants not recognized as containing it.

When an india rubber tree is tapped, which is effected by making incisions in the bark, the sap of the tree exudes. It is a milky substance and is collected in various ways; it may be in vessels of

clay, in shells, or in other receptacles by the india rubber hunters. If this substance is examined it is found to be of very remarkable and characteristic constitution, resembling in its physical features ordinary milk. It is composed of from fifty to ninety per cent. of water, in which is suspended in microscopic globules, like the cream in milk, the desired caoutchouc or india rubber. If the juice is left to stand in vessels, like milk in a creamery, the globules rise to the surface, and a cream of india rubber can be skimmed off from the surface. If the juice is evaporated over a fire, the water escapes and the india rubber remains. By dipping an article repeatedly in the juice and drying it, a thick or thin coating of india rubber can be developed. Before the modern methods for the manipulation of the gum had been developed, and before the invention of vulcanization, this method was adopted for the manufacture of shoes. The original "india rubbers" for protection of the feet in wet weather were made in this manner. A clay last was used, upon which the india rubber was deposited as described. The clay last was then broken out and removed. Great quantities of overshoes were thus made in South America, and many were exported to Europe.

When caoutchouc has once been removed from this watery emulsion, which for all practical purposes is a solution, it cannot be restored to the former state of liquidity; it remains solid. It will

absorb a considerable quantity of water, but will not enter again into the *quasi* solution or combination. This property of permanent coagulation, which interferes to a degree with its easy manipulation, was early discovered. In the last century quantities of the natural milk were exported to Europe to be used in what may be termed the natural process of manufacture, because once solidified it could not be redissolved, and because the manufacturers of those days had not the present methods of dealing with the apparently intractable gum.

The natives of South America before the advent of Europeans, were familiar with the treatment of the juice by evaporation just described and used to make bottles, shoes and syringes of it for their own use. The name *Siphonia* applied to several species of rubber tree, and *seringa* (caoutchouc) and *seringari* (caoutchouc gatherer) in Spanish recall the old Indian syringes and tubes.

The gum is now collected for export in many parts of the world. South and Central America are, as they have always been, the greatest producers. Some is collected in Africa, Java and India. The best comes from Para. However carefully treated a great difference is found in the product from different countries. The Brazilian india rubber, known as Para, from the port of shipment, ranks as the best in the market.

Its history as far as recorded, does not go back of the last century. Le Condamine, who explored the

Amazon River, sent from South America in 1736 to the *Institute de France*, in Paris, the first sample of india rubber ever seen in Europe. He accompanied the sample with a communication. He said that the Indians of that country used the gum in making several domestic objects of utility, such as vessels, bottles, boots, waterproof clothing, etc. He stated that it was attacked and to a certain extent dissolved by warm nut oil. In 1751 and 1768 other samples were received through MM. Fresnau and Maequer, who sent them to the Academy of Sciences, Paris, from Cayenne in Guiana.

Although from this period numerous experiments were tried with the new substance little of importance was done with it for many years. Its first use was to rub out pencil marks, whence it derived its name of "india rubber." As late as 1820 this continued to be its principal use.

An interesting reminiscence of its early history is given by Joseph Priestley, the great English chemist of the last century, celebrated as the discoverer of oxygen. In 1770 he mentioned the use of the gum for erasing pencil marks, and speaks of its cost being three shillings, about seventy cents, for "a cubical piece of about half an inch."

As we have seen, its solubility was early studied. In 1761 Hérissant added turpentine, ether and "huile de Dippel" to the list of solvents. In 1793 its solubility was utilized in France by Besson, who made waterproof cloth. In 1797 Johnson intro-

duced for the same manufacture a solution in mixed turpentine and alcohol.

The year 1820 is the beginning of the period of its modern use on a more extended scale. Nadier developed the methods of cutting it into sheets and threads and of weaving the latter. Mackintosh in 1823 began the manufacture of waterproof cloth, using the solution of the gum in coal tar naphtha, which was caused to deposit by evaporation a layer of the gum upon a piece of cloth which was covered by a second one. This protected the wearer from the gummy and sticky coating of raw india rubber. At the best the original Mackintoshes must have been very disagreeable articles for wear.

In 1825 india rubber shoes of raw india rubber were imported from South America and formed for a while an important article of commerce.

In 1839 Charles Goodyear, of Massachusetts, invented the art of vulcanizing, or combining india rubber with sulphur. It was patented on June 15, 1844, and covers only the manufacture of soft rubber. Vulcanite or hard rubber (whalebone rubber) is disputed as to its origin, its invention being assigned by some to Nelson Goodyear and by others to Austin G. Day, of Connecticut. Goodyear however succeeded in obtaining a patent on May 6, 1851. Day obtained a patent on August 10, 1858.

Vulcanization is the most important invention ever made in connection with india rubber and may fairly rank as one of the greatest discoveries of the

present century. It is claimed by the English, an inventor named Hancock being cited as the rival of Charles Goodyear. The latter inventor had as an associate Nathaniel Hayward, who is probably entitled to some of the credit.

By vulcanization india rubber loses susceptibility to heat and cold, becomes non-adherent, and insoluble in almost all substances. It is converted from a comparatively useless substance into one of wide applicability.

The subject of india rubber is so interesting in its theoretical as well as practical bearings that it seems impossible that those who are workers in it should not feel an interest in its natural history. For such readers the chapter on the natural history and collection of india rubber has been written. As it is a product of widely separated lands on both hemispheres, and as it is yielded by an immense number of plants, it is impossible in the limits of a chapter to give a full outline of its natural history.

The chapter in question is, therefore, with this apology, inserted where it belongs, near the beginning of the book. Those who are entirely practical may pass it over. There is no doubt that the few minutes necessary for its perusal will be bestowed upon it by some.

CHAPTER II.

THE NATURAL HISTORY AND COLLECTION OF INDIA RUBBER.

AFRICAN india rubber is mostly exported from the west coast. The belt of country producing it extends nearly across the continent. Those who are familiar with the india rubber plants of our conservatories are apt to think of the gum as the product of trees, but in Africa it is largely yielded by climbing plants of very numerous varieties, belonging generally to the *Landolphia* species. It is collected by the natives by careless or desultory methods, probably less advanced than the ways followed by the South Americans. Possibly its marked inferiority may be partly attributed to this. It is also supposed by many that, were the gathering restricted to the vine producing the best gum, better results would follow. As it is now all gums are mixed indiscriminately. African gum is of very inferior quality.

The African india rubber vines grow often in dark moist ravines, where no valuable product other than themselves could be cultivated. They are entirely wild. The vines when cut exude an abun-

dance of sap, which differs from the South American product in its quickness of coagulation. As it escapes from the wound it at once solidifies and prevents the further escape of juice. The negroes are said to employ the following highly original method of collecting it. They make long gashes in the bark. As fast as the milky juice comes out they wipe it off with their fingers and wipe these in turn on their arms, shoulders, and body. In this way they form a thick covering of inspissated juice or caoutchouc over the upper part of their body. This from time to time is removed by peeling. It is then said to be cut up and boiled in water. This is one account. According to others the natives remove a large piece of bark, so that the juice runs out and is collected in holes in the earth or on leaves. Wooden vessels are said to be used elsewhere. Sometimes the juice is said to be collected upon the arms, the dried caoutchouc coming off in the shape of tubes. A clew to the inferiority of African india rubber is afforded by the statement that too deep a cut liberates a gum which deteriorates the regular product if it mixes with it. The drying of the gum is thought to have much to do with its quality and it is highly probable that this affects the African product. Some samples seem to be partly decomposed they are so highly offensive in odor. The South American rubber is often dried in thin layers, one over the other, by a smoky fire, which may have an antiseptic effect upon the newly

coagulated caoutchouc. No such process as far as known is used in Africa.


The African india rubber appears under different names in commerce. From the Congo region lumps of no particular shape called "knuckles"; from Sierra Leone smooth lumps, "negro-heads," and "balls" made up of small scrap; from the Portuguese ports "thimbles," "nuts," and "negro-heads;" from the gaboon "tongues;" and from Liberia "balls are received." It is all characterized by great adhesiveness and low elasticity.

From Assam, Java, Penang, and Rangoon there is considerable gum exported. It is supposed to be the product of trees of the *ficus* species, in all these places, as it is known to be in Java and Assam. In the latter place rigid restrictions are imposed as far as possible upon the gathering. In the case of wild trees scattered through the forest the carrying out of these restrictions is not practicable. The trees are cut with knives in long incisions through the bark and the juice is collected in holes dug in the ground, or often in leaves wrapped up into a conical form, somewhat as grocers form their wrapping paper into cornucopia shape for holding sugar, etc.

It has seemed reasonably certain that the india rubber producing plants might be cultivated with profit, and it is as certainly to be feared that without such cultivation they will become extinct. Efforts have been made in the direction of raising

them artificially but without much success. In Assam numerous experiments have been made to propagate the india rubber bearing *ficus* tree.

A good instance of the ill effects of carelessness in the original gathering of the crop is afforded by the Bornese collectors. The source of Borneo india rubber is a variety of creepers. These are cut down and divided into short sections from a few inches to a yard in length. The sap oozes out from the ends. To accelerate its escape the pieces are sometimes heated at one end. It is coagulated by salt water. Sometimes a salt called *nipa* salt, obtained by burning a certain plant (*nipa fruticans*), is used for the purpose. In either case it is coagulated

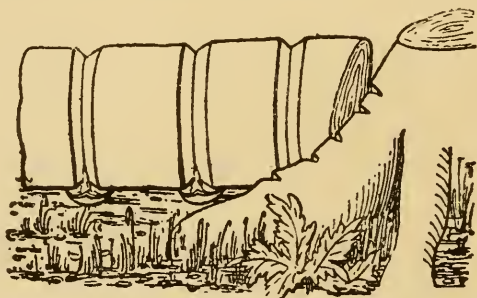

TREE FELLED FOR COLLECTION OF INDIA RUBBER.

into rough balls and masses. These masses are heavily charged with the salt water, often containing as much as fifty per cent., and rarely much less than twenty per cent.

Central America and Panama are great producers of the gum. In Panama the custom of felling the


trees is often adopted. In this case grooves are cut around the prostrate trunk, and under each groove as the trunk lies on the ground a vessel is placed to collect the sap. Its coagulation is often effected by leaving it for a couple of weeks standing at rest in a hole, excavated on the surface of the ground, and covered over with leaves. The caoutchouc separates under these conditions. A quicker method, but one yielding an inferior product, is obtained by adding to the fresh juice some bruised leaves of a plant (*ipomæa bona nox*) which acts something like acid upon milk, in separating the desired solid matter or caoutchouc. A jelly like accretion saturated with blackish water is thus obtained. By working it together a blackish liquid is caused to escape, and comparatively pure gum is gradually obtained. As much as one hundred pounds of india rubber may be obtained from a single tree where this destructive system is employed. Further north, where a better counsel has prevailed, the trees are only tapped, and the india rubber hunter is satisfied if from a tree eighteen inches in diameter he obtains twenty gallons of sap, giving fifty pounds of gum. Even where tapping is done the tree is often destroyed by carelessness or ignorance.

Two systems are followed in Nicaragua. The operator ascends by a ladder if he has one, or in any case climbs as high as he well can and begins to make a long incision. Sometimes he carries one long straight

cut clear down to the ground. This is made the starting point for a number of side cuts, short, and running diagonally into it. This is also one of the Brazilian methods. The Nicaraguan sometimes also makes two spiral incisions, one right-handed and the other left-handed, crossing each other as they descend so as to divide the surface of the tree into roughly outlined diamonds. In either case the juice flows down to an iron spout, placed at the bottom of the tree, which spout leads to an iron pail. The milk is gathered and passed through a sieve, and coagulated in barrels by the *ipomœa* plant as before mentioned. This gives three grades of rubber. The bulk is obtained from the barrels and is called often *méros*; the small lump which forms in the spout is rolled into a ball and called *cabezza*; the dried strips pulled out of the cuts is of very good quality and is called *bola* or *burucha*.

From Brazil is exported the famous Para india rubber. This is of very high quality, and is greatly esteemed by all manufacturers. No process can make a poor gum give a really good product. The system of gathering it varies. Sometimes the tree is cut into by gashes from an axe, such gashes extending in a row all around the trunk. Under each gash a small clay cup is luted fast with some fresh mixed clay. These collect from a tablespoonful of juice upward, which is collected, and the cups are removed on the same day. The next day a second row of cuts is made below the others, and the same

process is repeated. This is continued until from a point as high as a man can reach, down to the ground the tree is full of cuts. Sometimes a gutter of clay is found partly around the trunk with gashes above it. In other cases a vine is secured

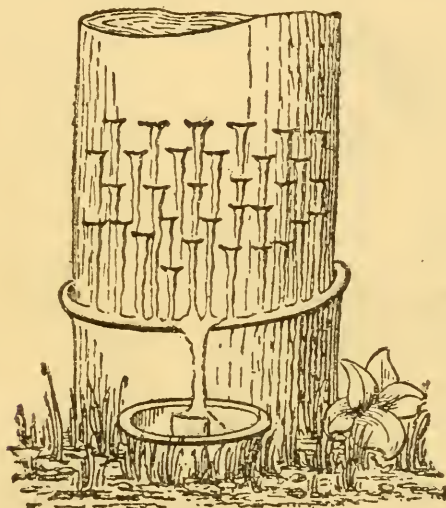

TREE TAPPED FOR INDIA RUBBER.

around the tree and a collecting gutter is worked with it for a basis.

The juice is coagulated in a smoky fire. A bottomless jar is placed over the fire and some palm nuts are mixed with the fuel. The mould, which is often a canoe paddle, is smeared with clay to prevent adhesion and is then heated. A cup of juice is poured over it, and after the excess has dropped off it is moved about rapidly over the smoke and

hot air which ascends from the mouth of the jar. This series of operations is repeated until the coating is quite thick; it may be as much as five inches. After solidifying over night it is cut open and the paddle or mould is removed. After a few days dry-



INDIAN DRYING AND SMOKING INDIA RUBBER.

ing it is sent to market. With all the heating, during which it sweats profusely, it still retains fifteen per cent. of water.

India rubber sap may be coagulated by an aqueous solution of alum. The process has been tried in Brazil, and is used to a considerable extent in

Pernambuco. It was proposed by an investigator named *Strauss*, and the process is still called by his name. One objection is that it gives a very wet product, and apparently one of inferior value to the smoked gum.

The feeling that india rubber suffers in the gathering has been so much felt that it has been recently suggested that if possible the uncoagulated juice should be exported to Europe there to be worked up from the beginning.

CHAPTER III.

PROPERTIES OF UNVULCANIZED AND VULCANIZED INDIA RUBBER.

THERE are two broad divisions to which all varieties of india rubber can be assigned—unvulcanized and vulcanized rubber. Speaking with a certain amount of license it may be said that more properties characterize the former than the latter. The vulcanized article is very slightly affected by ordinary changes of temperature, cannot to any considerable extent be changed by heat short of absolute destruction or decomposition, cannot be united or moulded except in simple forms, is highly elastic, and is insoluble in almost every solvent for ordinary caoutchouc.

Unvulcanized caoutchouc possesses very interesting and peculiar properties. The first part of the present chapter is devoted to this substance. Those who have never seen the crude gum as imported are familiar with the article almost pure in the form of sheet rubber and black rubber articles generally. These are of nearly pure caoutchouc, though recently the tendency is to vulcanize them to a considerable degree.

A piece of pure gum containing no combined sulphur, iodine, or other vulcanizing constituent will be found to exhibit a very striking peculiarity. Two freshly cut surfaces when placed in contact will adhere. This is not in consequence of any viscous or sticky coating. When india rubber is cut the surface is perfectly dry and non-adherent except to itself.

The writer once had this property of adhesion brought strongly to his attention. In some analytical investigations of coal gas he had proposed to use finely divided india rubber as an absorbent of sulphur. This constituent it absorbs from gas, and it seemed that a basis for a quantitative determination of sulphur might be found in such property. Accordingly some raw india rubber was procured and with some trouble was cut up into little pieces which were put into a bottle. A day or two afterwards the pieces united wherever they were in contact, and an irregular cavernous lump was the result. This involved no melting or softening or change of shape. Each little piece was there intact and distinct but firmly attached to its neighbors.

The analogy of this action is seen in lead. Two fresh surfaces brought together, preferably with a twisting or wrenching pressure, adhere quite firmly. The adherence of india rubber and of lead each to itself is often exhibited by physical lecturers as an illustration of cohesion. The cohesion of india rubber is however far more perfect than that of

lead, probably because of its comparatively great resistance to oxidation, and because, owing to its elasticity larger areas can be brought in contact. Comparatively great though this resistance to oxidation is, oxygen, especially in the allotropic modification known as ozone, may act quite powerfully on the gum. Sunlight also can affect it injuriously.

A more familiar illustration of the uniting of two pieces of the same material is seen in the welding of iron. The blacksmith heats two pieces of iron until they are nearly white hot and are pasty in consistency. On placing them in contact and hammering to force them together they unite so firmly as to be practically one. It is necessary that the surfaces of clean metal should be brought together. If the pressure induced by the hammering is insufficient to bring this about, a flux is added which dissolves the oxide and causes the metal to come in contact with metal and to weld. The analogy with india rubber in its cohesive action is evident. Surfaces long exposed or which are dusty do not cohere. The **regelation** of ice is similar in effect.

The cohesion of india rubber is important and should be thoroughly appreciated. It is not saying too much to assert that the entire treatment of the raw gum depends upon this interesting property. The great lumps of gum are torn to pieces and washed free from gravel and dirt without going to powder, because owing to their elasticity they yield

and as fast as torn apart the pieces tend to reunite. Again india rubber is mixed with pigments and vulcanizing reagents by a method practically one of grinding or masticating, but the material while it changes its shape, and by the admixture of the various ingredients becomes less strong or easier torn, still remains intact, as it welds together or coheres as fast as disintegrated.

As regards its chemical constitution the sap of a Para rubber tree has been analyzed with the following general results: (Faraday).

Caoutchouc	80.70
Albuminous, extractive, and saline matter, etc.....	12.93
Water	56.37
	<hr/>
	100.00

Its specific gravity is 1.012.

Caoutchouc itself or raw india rubber is a mixture of several hydrocarbons of the following composition in general:

Carbon.....	87.5
Hydrogen.....	12.5
	<hr/>
	100.0

Its specific gravity is from .912 to .942.

The hydrocarbons composing it are isomeric or polymeric with turpentine. This fact brings it well within the range of familiar vegetable products. As will be seen the products of its distillation fall among the same polymers and isomers.

When pure it is nearly colorless, the dark color being due to impurities. In thin sheets it is almost or quite transparent. It burns readily, and with a very luminous, smoky flame, as might have been anticipated from its composition. The action of heat and cold on it is dependent on the degree of the temperature. At ordinary temperature it is elastic and firm. It can be stretched and will return almost to its original size when released from tension. Yet the return to its shape is so liable to be incomplete, especially after long sustained stretching, that pure unvulcanized india rubber is considered imperfectly elastic.

Any elasticity it possesses is principally elasticity of shape as distinguished from elasticity of volume. In other words when pressed or stretched it may change shape to a great extent but hardly change its volume at all. A cube of $2\frac{1}{2}$ inches under a weight of 200 tons lost 1-10 of its volume only. This is largely due to the fact that it represents an approximately solid body, or one destitute of considerable physical pores. Solids and liquids are very slightly compressible. Whatever degree of compressibility caoutchouc possesses is due principally to its minute pores.

If the temperature is reduced to the freezing point of water a piece of raw india rubber becomes rigid and stiff. On application of heat it returns to its former pliable condition. The same return to flexibility may be brought about by stretching it

mechanically. This may be rather a fallacy. Stretching india rubber warms it, so that in this mechanically imparted rise of temperature we may find at least a probable cause of the softening.

If the temperature is raised several effects are produced, according to circumstances. A piece which has been stretched and held stretched, has its tension increased by a degree of heat considerably less than that of boiling water. Some offer the theory that it contains air enclosed in its pores which, expanding, produces this effect. As the boiling point is reached the material softens and becomes somewhat plastic, so that it can be moulded into shape to a considerable extent and stretched to threads of great fineness. Its elasticity also disappears as the heat is maintained. These effects increase in extent up to a heat of 248° F. (120° C.). The return to its original state is not immediate however. Some time is required before the reduction of temperature will have full effect.

If now a still higher degree of heat is applied, 392° F. (200° C.) the india rubber softens to a viscous body, or melts. From this state it cannot be restored. It remains permanently "burned" or melted whatever is done to it. Some attempt at hardening may be made by the use of vulcanizing chemicals, but the result will be very imperfect.

A further increase of heat brings about a destructive distillation. India rubber treated in a retort to a heat exceeding 400° F. (204° C.) evolves volatile

hydrocarbons of oily consistency, and it distills almost completely, a small residue of gummy matter or of coke if the final heat has been pushed far enough being left. The distillate is called caoutchoucine. According to Mr. Greville Williams it consists of two polymeric hydrocarbons: one, caoutchicin $C_{10}H_{16}$, boiling point 340° F. (171° C.); the other, isoprene C_5H_8 (in formula equal to one-half of caoutchicin), boiling point 99° F. (37° C.). The mixture has a strong naptha-like odor and has won considerable reputation as being the best solvent for india rubber. How far it deserves its reputation is a matter open to discussion.

The solution of india rubber like its fusion is a vexed point. There is little question that it can be dissolved by proper treatment. Usually naptha, carbon disulphide or benzole are used as solvents, the choice being guided by motives of cheapness and efficiency.

It is worthy of remark that the formula given for caoutchoucine is the same as that of the principal constituent of oil of turpentine, and that the latter is often recommended as a solvent. Turpentine is slightly more volatile than caoutchoucine, its boiling point being 322° F. (161° C.) Other hydrocarbons have been recognized in the distillate by Bouchardat, Himly and G. Williams, varying in boiling point from 32° F. (0° C.) to 599° F. (315° C.), and in specific gravity from 0.630 to 0.921.

Although it has been spoken of as approximately

solid it does possess microscopic pores, to which its limited amount of elasticity of volume is mostly due. Thus it is found to absorb water, in which it is quite insoluble. As it does this it acts like a dry sponge and increases in volume a little, owing to dilation of these minute pores. The water absorbed may be as much as 18.7 to 26.4 per cent. with an increase of volume of the gum of $\frac{1}{1000}$ to $\frac{1}{1000}$. When it has once absorbed water it is very hard to get rid of it. Although the minute surface orifices communicate with the entire system of capillary vessels and pores, the surface pores on drying contract and seal up the absorbed water within the mass. This is a clue to the impracticability of the gatherer shipping dry rubber, and to the great difficulty the manufacturer experiences in drying his washed and sheeted stock before working it up by masticating or mixing and curing.

By proper manipulation caoutchouc may be made inelastic. This can be done by the freezing process or by keeping it stretched for two or three weeks. In this way threads can be made to extend and to remain extended to seven or eight times their original length. They can then be woven into a fabric. On gentle heating their original elasticity reappears and they contract. In this way fluted braids can be made which will have a high capacity for stretching.

The solution of caoutchouc is difficult often to bring about. We have seen that in water it swells

a little without dissolving. In benzole it does the same, but swells to a greater extent, to 125 times its original volume or even more. Some authorities (*Watts*) go so far as to assert that no solvent completely dissolves it. Acting on it repeatedly with benzole or other solvent and taking care not to break up the swelled mass, from 49 to 60 per cent. of soluble matter can be extracted. On evaporation this is deposited as a ductile adherent film. The swelled up residue which remains undissolved is assumed to be the constituent giving strength and elasticity, and is only sparingly soluble. If the gum is masticated or kneaded at the temperature of boiling water a change occurs not well understood, by which its solubility is greatly increased. As solvents many liquids have been named. Oil of turpentine, caoutchoucine, coal-tar, naphtha, benzole, petroleum-naphtha, coal-tar-naphtha, anhydrous ether, many essential oils, chloroform, bisulphide of carbon, pure, or mixed with seven or eight per cent. of alcohol, are among the solvents recommended. A mixture of fifty parts of benzole and seventy parts of rectified turpentine has been given as a solvent for twenty-six parts of the gum. Mastication before or after immersion in the solvent is to be advised. More will be said on this subject in a succeeding chapter.

Vulcanized india rubber is unaffected by changes of temperature within ordinary range. It softens a little on heating. Even hard vulcanite when heated

can be bent and will retain the bend on cooling. It is exceedingly elastic with elasticity of shape but far less compressible as regards absolute change of volume than the raw gum. It melts at 392° F. (200° C.) It cannot be made to cohere, and no cement has yet been discovered that will satisfactorily unite two surfaces. It is unaffected by light, by ordinary acids and rubber solvents. In contact with the latter solvents it swells sometimes to nine times its original volume, but on heating returns to its original volume and shape. Of water it will absorb no more than four per cent. and often much less. If it is maintained at a high temperature 266° to 302° F. (130° to 150° C.) for a long time it gradually loses its flexibility, especially if in contact with metals. Often the escape of sulphuretted hydrogen may be observed under these conditions. A small admixture of coal tar operates to prevent this action.

Its composition and specific gravity vary widely as the most varied mixtures are added by the manufacturer. Its relation of carbon to hydrogen is unaffected by the mixtures added. While it may contain twenty per cent. or more of sulphur it is believed that but a very small quantity is combined with it, although the excess of sulphur or some equivalent, such as sulphide of antimony is essential to vulcanization. The combined sulphur is from one to two per cent. Some or all of the excess of sulphur is mechanically retained, and as the

rubber in ordinary use is worked about, keeps escaping and forms a whitish dust upon the surface. By treatment with alkali some of the excess of sulphur can be removed when the rubber acquires the power of absorbing a little more water, up to six and four-tenths per cent.

Boiling oil of turpentine is given as its solvent.

CHAPTER IV.

THE MANUFACTURE OF MASTICATED, MIXED SHEET, AND VULCANIZED INDIA RUBBER.

THE manufacture of india rubber relates to the production of two principal products. One is masticated unvulcanized sheet and thread rubber; the other is unmasticated mixed and cured rubber, otherwise vulcanized rubber. For the purposes of the rubber-stamp maker an intermediate product is required, namely, unmasticated mixed sheet which is uncured. This is really incompletely vulcanized india rubber.

It will be evident from the description to come that it is not advisable for any one without considerable apparatus to attempt to clean and to wash ("to sheet"), to masticate, or to mix india rubber. These operations are best accomplished in the factories. The partially vulcanized ("mixed sheet") or the pure masticated article are regular articles of commerce. Yet a full insight into the manipulation of india rubber can only be obtained by understanding its treatment from the gum up to the two separate lines of products we have indicated.

A third type of product is coated tissue, such as


Mackintosh. This really is a sequence of one of the other two processes and a few words will be said of it in concluding the chapter.

As the caoutchouc is received by the manufacturer it appears an utterly intractable mass. It occurs in lumps of every size, varying in color and odor, and very tough but elastic. In virtue however of the properties already described, its power of cohering when cut, and its softening when heated, it becomes amenable to treatment.

It is to some extent received in such assorted condition as to secure even grades, and then each grade may be washed by itself. It is thrown into water which is in many cases kept at the boiling point by steam-heat and left there for some hours. It absorbs some water and also softens. Some gum is so soft that it will not stand hot water. For such the water is kept cold. The purer gum floats; such pieces as have stones, dirt, iron, etc. in them, perhaps placed there purposely from fraudulent motives, sink and can be picked out for separate treatment.

The lumps are next cut up. A revolving circular knife driven by power is often used, and sometimes an ordinary knife is adopted. At this part of the operation there is frequently need for sorting, as the grades received may have inferior pieces mixed with the good. The cutting is mainly to secure good grading, and to remove concealed impurities. The gum then goes to the washing rollers, called the washer and sheeter. (See cut, p. 37.)

These are heavy corrugated rolls made very short, 9-18 inches in length, to prevent springing. They are grooved or corrugated and have a screw adjustment for regulating their distance apart. They are geared together so as to work in corresponding directions, like a clothes wringer or a rolling mill of any kind. The pieces of gum are fed into the

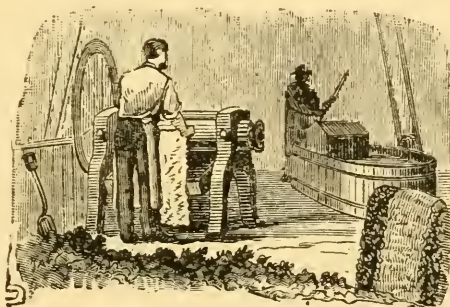


WASHER AND SHEETER.

rolls and are drawn between and through them. The friction tends to heat the gum. To prevent this and also to effect the washing, a supply of water, either hot or cold, is kept playing upon the mass. This dissolves out all soluble matter and washes away mechanically the chips, dirt, etc. which may be present. The whole operation is one of main force. The caoutchouc is torn and distended and delivered as a rough perforated sheet. It is passed repeatedly through the machine, the rollers being gradually brought closer together, or else different sets of rolls are used, set to different

degrees of fineness. The wash water passes through a screen which catches any small detached fragments of gum.

Other types of machines have been introduced; the above is a representative form.


The rough sheets must now be perfectly dried, as water impairs the final product. This is done in drying rooms by steam heat, generally, at a temperature of about 90° F. (32° C.) The windows, if there are any, are painted to exclude sunlight, which operates to deteriorate raw gum. When absolutely dry the caoutchouc is removed and stacked away for use.

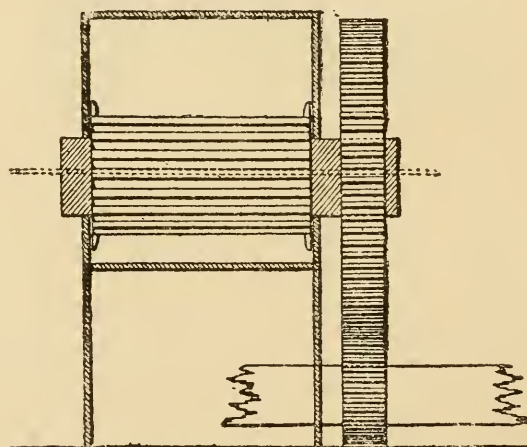

MASTICATING MACHINE.

To prepare pure gum for the manufacture of sheet rubber and as a starting point for many other preparations, the india rubber is “masticated” in

special apparatus. The machine consists of a fixed cylinder within which is a corrugated roller set eccentrically and rotated by power. The perfectly dry sheets in the masticator are pressed and rolled and ground and produce a mass of even consistency. Here the welding or cohering action again appears in its fullest development. The perfect dryness of the mass enables it to keep reuniting as fast as divided. The action is assisted by the heat generated, which is not inconsiderable. Sometimes the caoutchouc is warmed before introduction, and sometimes the roller is heated by passing steam through it.

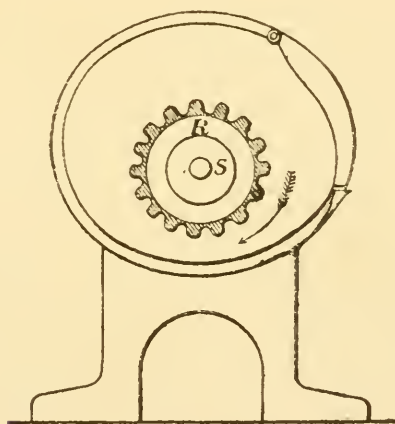

MASTICATING MACHINE.

The masticating machine the French picturesquely term the wolf (*loup*) or devil (*diable*). It is given from sixty to one hundred turns a minute, and a machine large enough to treat fifty pounds of

gum in a charge, requires five horse-power to drive it. In it the sheeted gum is ultimately brought to the state of a perfectly homogeneous dark brown translucent mass.

The masticated rubber is peculiarly amenable to mechanical and chemical treatment. It can be shaped by heat and pressure, and it is the most soluble form and is used for making cement and solution, and is moulded into blocks for the manufacture of sheet and thread rubber. In the process neutral body pigments, such as oxide of zinc, or soluble transparent ones, such as alkanine may be introduced; easily decomposed matter cannot be incorporated on account of the heat.

In all these machines special provision is made to prevent any oil from getting into the gum. There is no greater enemy to india rubber than oil or fats of any description. The flanges in the masticator that roll just inside the bearing are for this purpose.

Sheet rubber is made from the blocks of masticated gum by slicing. A machine is used for the purpose which carries a knife which works back and forth in the direction of its length at high speed, making two thousand cuts a minute. The knife is kept wet by a stream of water, and about sixty cuts are made per inch. In many articles made from this sheet the marks of the cuts can be seen as a fine ribbing. The appearance is familiar to many readers.

The sheet is often cut from rectangular blocks, but cylindrical blocks are also used. The latter are rotated in front of the knife edge and a long, continuous sheet can thus be obtained.

The sheet rubber can be cut into threads on webbing and braid. Everyone has noticed that these threads are usually square. The method of preparation accounts for it. Vulcanized sheet is now almost universally used for threads.

Round threads however can be made by forcing softened or partly dissolved gum through a die.


It is from unvulcanized masticated sheet that toy balloons, tobacco pouches, etc., are made. It is the starting point for india rubber bands. For the usual form of the latter article the sheet is cemented into a long tube which is afterwards cut transversely, giving bands of any desired width. To make any of these articles satisfactory vulcanization is imperative. Unvulcanized rubber for many years was used, but it is now completely displaced by the vulcanized product. Sheet rubber is made as above; is vulcanized by some of the absorption processes described in the chapter on vulcanization.

We now come to the second product: regularly mixed and cured rubber. Its starting point is the washed india rubber from the washer and sheeter.

We have seen that the pure gum or caoutchouc is very sensitive to changes of temperature. At the freezing point of water it is hard and rigid, and at

the boiling point is like putty in consistency. There are several substances which can be made to combine with the gum and which remove from it this susceptibility to change of temperature. The process of effecting this combination is called vulcanization, and the product is called vulcanized india rubber. Sulphur is the agent most generally employed.

In the factory the normal vulcanization is carried out in two steps, mixing and curing. The washed sheet india rubber which has not been masticated and which must be perfectly dry is the starting

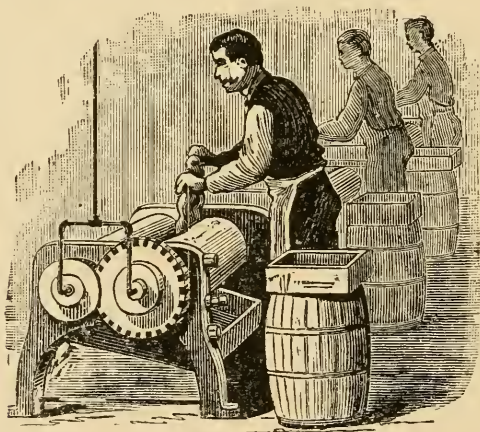

MAKING MIXED RUBBER.

point, and the mixing rolls shown in the cuts are the mechanism for carrying out the first step. These are a pair of powerful rollers which are geared so as to work like ordinary rolls, except that one revolves

about three times as fast as the other. They are heated by steam, which is introduced inside of them. The sheet is first passed through them a few times to secure its softness, and then the operative begins to sprinkle sulphur upon it as it enters the rolls. This is continued, the rubber passing and repassing until perfect incorporation is secured. About ten per cent. of sulphur is added, and a workman can take care of thirty pounds at a time.


This material is incompletely vulcanized. It is in its present condition very amenable to heat and is ready for any moulding process. Generally it is rolled out or "calendered" into sheets of different thickness from which articles are made in moulds by curing.

These sheets are of especial interest to the reader as they are the material from which most small articles are made, including rubber stamps.

This rolling of the mixed india rubber into sheets of definite thickness is done by special calendering rolls. The product is termed "mixed sheet."

In the mixing rolls the incorporation of other material is often brought about. Zinc white, lead sulphide, antimony sulphide, chalk, clay, talc, barium sulphate, plaster of paris, zinc sulphide, lead sulphate, white lead, oxides of lead, magnesia, silica, form a list of ordinary mixing ingredients. These lower the cost of the finished material and are often serious adulterants. For some cases the addition if not carried too far is not injurious, or even

may be beneficial. A proper admixture renders the gum more easily moulded and treated in the shaping processes.

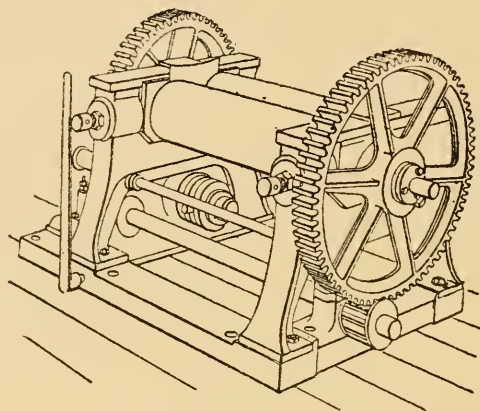

MIXING ROLLS.

The next step in the vulcanizing process is the heating of the mass, which step is called "curing." Up to a temperature in the neighborhood of that of boiling water the mixed rubber can be heated without change except as it is softened. But if the heat is increased it begins to get a little more elastic and less doughy, and eventually becomes "cured" or vulcanized. The temperature for vulcanization is about 284° F. (140° C.). The word "about" is used advisedly, for it is not only a question of heat but of time of exposure. After vulcanizing, including the curing, india rubber cannot be moulded to any great extent. In the manufacturing process, therefore, it is before curing placed in the moulds,

heated, shaped by pressure, and by exposure to a higher heat in a steam oven called a vulcanizer, is at once cured.

To prevent adherence to the moulds they are dusted over with ground soapstone, and the rubber itself is often thus coated.

The methods of vulcanization and curing, which may be of special use to the reader, are given in the chapters devoted to that subject (chapter XI.), and in the one devoted to rubber stamps.

Hard rubber, termed ebonite when black, and vulcanite when of other colors, is simply vulcanized rubber containing a large percentage of sulphur added in the mixing process.

The manufacture of coated tissues is effected in several ways. The following is a typical process. A mixture of one part washed and sheeted india rubber with one part zinc white, one fourth part sulphur, and about one third part naphtha is mixed into a dough-like mass and is spread upon the cloth by machinery. The latter is simple. It consists of a bare board arranged to move under a scraping bar. The cloth is placed on the board and carried under the bar. The coating mixture is fed on one side of the bar upon the surface of the cloth. As it passes under, a regulated amount, according to the set of the bar, adheres. It is then dried by steam heat and recoated, until ordinarily six coats, each about one one-hundreth of an inch in thickness, have been given. Three coats are given in each direction with

intermediate drying. The fabric is then cured by heat in vulcanizers.

Sometimes the sulphur is omitted from the mixture and cold curing, as described later, is adopted. When the goods are made up the seams are secured with rubber cement, a thick solution of masticated gum. Such seams have to be vulcanized.

Sometimes two such fabrics before curing or vulcanization, are placed face to face and allowed to adhere and are then cured or vulcanized.

Enough has been said in this outline of the manufacturer's treatment of india rubber to show that the first treatment requires machinery. Very little can be done with mortar and pestle, although in making up solution these simple instrumentalities are available. As a starting point for making small articles masticated sheet rubber and mixed sheet rubber are the staple materials. The preceding steps are best accomplished in the factory.

CHAPTER V.

INDIA RUBBER STAMP MAKING.

WE have seen that india rubber cannot be cast in moulds. Except in special cases deposition from solution is not available. It has to be shaped by a combination of heat and pressure. When gently heated it softens and can be pressed in a mould. As it cools it retains the shape thus given and is moulded. This applies to all unvulcanized india rubber. If mixed rubber is moulded and heated to a higher temperature without removal from the mould the curing process is brought about and the rubber may be not only moulded but cured and the product is moulded vulcanized india rubber. The mixed sheet whose manufacture is described in chapter IV. (page 42) is the starting point in rubber stamp making. It is made for this purpose by the manufacturers.

When the material is examined it looks like ordinary white india rubber, being firm in texture and quite strong. On heating to 280° F. to 290° F. (137° C. to 143° C.) it begins to become "cured," and if in a thin sheet one to ten minutes are sufficient for the process. As the heat is applied the in-


dia rubber first softens and becomes much like putty. It can now be pressed through the smallest orifice and will fill up the finest details of anything it is pressed against. It is at this point that pressure must be applied to drive it into the interstices of the mould.

As the heat continues it begins to lose its doughy or putty-like consistency. This marks the reaction of the vulcanizing materials. They gradually combine with and change the nature of the caoutchouc. The rubber while still quite soft is elastic. If pressed by the point of a knife it yields, but springs back to its shape when released from pressure. The india rubber is vulcanized.

On removal from the mould it will be found to reproduce its smallest detail. The color and appearance have not changed much, but its nature and properties are now those of vulcanized rubber. It is unaffected by heat or cold within ordinary ranges of temperature, and if the india rubber is of good quality and made by a proper formula it will last for years.

The first thing to be described is the mould, which includes the arrangements for pressing the sheet of india rubber while heated. A small press is needed for this purpose. It may be of the simplest description, and as an example of a home-made but perfectly efficient one the illustration may be referred to. The base of the press is a piece of iron, if heat is to be directly employed. Where a

chamber vulcanizer is used both base and platen may be of wood. But from every point of view iron is the best. It lasts forever, admits of direct heating, and does not split, warp, or char. Through two holes drilled near its opposite sides two ordinary bolts are thrust. It is best to use flat headed bolts, and to countersink a recess for the

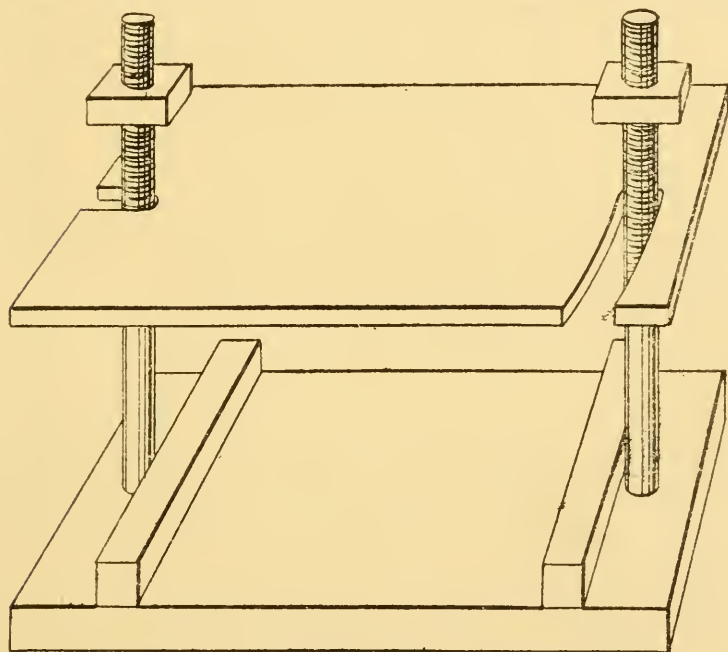

SIMPLE VULCANIZING PRESS FOR RUBBER STAMPS.

heads in order to keep the bottom level. The heads may need to be filed off so as to reduce their thickness, in order to secure this object. The bolts may be soldered in place. One thing should be care-

fully watched for—the bolts should be set true so as to rise vertically from the plane of the base.

The platen is best made of iron, cut of the shape shown. This is an excellent disposition of the screw-bolt slots, as by swinging the right end of the platen back it can be taken off without removing the nuts and lifting it over the ends of the screws. Besides the two nuts fitting the thread of the screws it is well to have half a dozen extra ones larger than the others, which will slip easily over the bolts, so as to act as washers. The object of these is to adapt the press to objects of different thickness. The thread upon an ordinary bolt does not extend clear to the head, but by slipping on some loose nuts the plates can be forced together if desired.

This press can be simplified. Both base and platen can be made of wood, the platen being simply bored for the bolts, and the latter driven tightly through the holes in the base so as to retain their place. Even this can be improved on as regards simplicity. Two blocks of wood screwed together by two or more long wood screws may be made to do efficient work.

One trouble is apparent with all these devices, and that is the want of parallelism of the opposed planes. The base and platen may be true and parallel or they may not. Perhaps the simplest way of securing this is the best. It consists in placing across the base two distance pieces, which may be slips of wood. These must have perfectly


parallel faces. As the press is screwed up they will be gripped between the platen and base and will not only ensure their parallelism but will keep them at an exact distance apart. Such distance pieces are shown in the same cut. Pieces of printers' "furniture," spaces, or "quads," may be used for this purpose. They should not be fastened in place if there is need to adapt the press to more than one thickness of material and matrix.

The above described apparatus is a vulcanizing press. A further improvement in it may be effected by the use of spring pressure. Two strong spiral springs may be dropped over the bolts, the nuts being screwed on above them, or a powerful spring of flat brass or steel ribband bent into the shape of a shallow letter V may intervene between nuts and platen, the centre of the bend bearing against the centre of the platen.

As regards the strength of the springs there is this to be said. The distance pieces will prevent a spring that would ordinarily be too powerful from doing any harm. Such distance pieces should be used, as the springs must be based upon giving a pressure of many pounds per square inch of surface to be acted on. They should have a range of an eighth of an inch or more. The greater the range the more evenly will they work.

The next cut shows an excellent little screw press, that is made for the purpose of pressing vulcanizing flasks. This is so simple that it will suggest to the

mechanical reader how he can make a single-screw press, which is by far the most convenient to use. In the stationery stores very small model cast iron copying presses designed for use as paper weights are sold. They are excellent for a limited amount of small sized work.

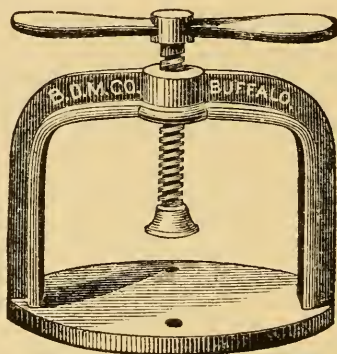


VULCANIZING FLASK CLAMP.

A large sized gas heated press, such as made for the purpose of manufacturing rubber stamps, is shown in the next cut, p. 53. Its construction is obvious. It is termed by the trade a vulcanizer. Its manipulation will be given further on.

Type are generally the object to be copied. These are best set up with high quads and spaces. Naturally rather a large type is chosen, with extra wide spaces between the letters. Some advise rubbing the type faces full of hard soap, afterwards brushing off the face, leaving the hollows filled. Sometimes wax is recommended for the same pur-

pose. This prevents the plaster of the matrix entering so deeply into the cavities of the letters.

The type forming the model to be reproduced, is locked in a frame. Two pieces of printers' furni-

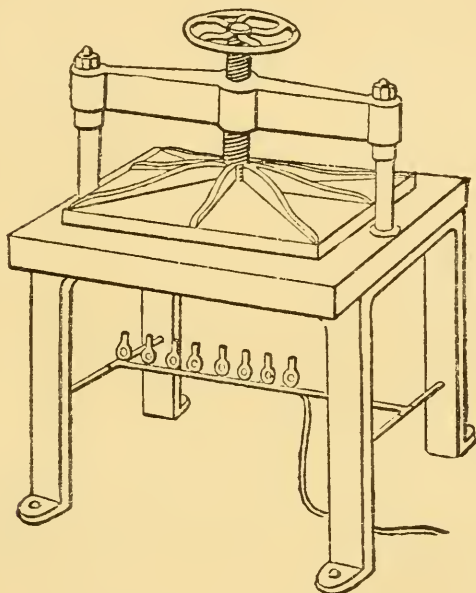

GAS-HEATED STAMP VULCANIZER.

ture or other wooden strips screwed together by wood screws at their ends will answer for a locking frame for small inscriptions.

The model to be copied need not be type, but any desired relief may be used, such as an electrotpe, a stereotype, an engraving or another rubber stamp. In any case it is to be placed upon a flat surface, best an "imposing stone" or piece of marble, with

the inscription upwards. On each side of it distance pieces reaching about one-eighth inch above its upper surface are to be placed.

The next shaping appliance is the matrix or mould, or reverse of the model which is to be copied. This in the case of rubber stamps is properly called the matrix. Those who have witnessed the stereotyping of a large daily newspaper have seen the matrices of the type made of paper and paste, the whole mixture being termed "flong." Such a matrix is required for rubber type, but paper is rather too susceptible to heat although good work can be done with it. It also does not enter as deeply into the cavities of the type as is desirable. As a rule a fine quality of plaster of paris is to be recommended. What is sold as dental plaster is the best, but common plaster can be used. It is mixed with water or with a solution of gum arabic or dextrine in water. For the latter enough gum should be added to make the mixing solution as thick as thin syrup.

A piece of iron, perfectly flat and true, is now to be taken, large enough to more than cover the inscription to be copied. Upon its surface a putty made of the plaster and the liquid used in mixing is to be spread. This should be rather stiff. The surface of the iron should not be too smooth as it is desirable that the plaster should adhere well on setting. The plaster should be smoothly spread to a depth of three-sixteenths or a quarter of an inch.

It is best applied with a palette knife or trowel, although a table knife will answer perfectly. If its surface does not become smooth it can be made so by applying a little of the solution with the knife or trowel.

Before this has been done the model must be oiled. Olive oil or other clear oil is applied to all parts of the type faces, and the excess is then wiped off and cleared out of the interstices with a piece of blotting paper.

Next the plate with the plaster is inverted and is pressed steadily down upon the model until it strikes the distance pieces. It is left to set. In about ten minutes it can be raised, when it will be found to give a beautiful impression true to the smallest detail of each letter.

It has been said that water may be used as the mixing fluid. If this is done it is well to strengthen the mould by saturating it with an alcoholic solution of shellac, after it has dried thoroughly, best for a few hours in an oven. This operates to strengthen the small projections that are liable to crumble or to break off in use.

The dealers in rubber stamp supplies sell a lever press for conducting the operation of producing the matrix. The type is locked in a special chase, which is carried on a bed that travels under and out from under the platen of the press upon rollers. From each corner of the chase in which the type model is locked, a pin rises which is encircled by a

spiral spring. A square frame of flat iron with holes at the corners for the pins to pass through, rests upon these springs well above the type. The pins pass through holes in its corners. The matrix plate with its coating of plaster is placed upon this frame, which supports it above and not touching the type. The whole is now rolled under the press and the lever pulled to produce the impression. As the pressure is released the frame with the matrix is raised from the type by the action of the springs. This can be done immediately, and before the plaster has set. It is almost impossible to raise it by hand with the requisite steadiness. The same chase with corner pins and springs can be used in a screw press, the one press answering for making the matrix and for moulding and curing the stamps. The plaster matrix can also be made by casting from a thinner mixture of plaster and water. After the type has been set up, or the model has been selected and placed face up and horizontal, a little ridge or projection must be made all around it. Paper can be pasted around it, and wound with thread for this purpose. It is oiled and wiped off as before. The plaster is now mixed with water to the consistency of cream, and is poured upon the model until it lies even with the projecting ledges or paper border. In an hour or less it can be removed. If water is used the mould should before use be treated with shellac solution as already described. The plaster may also be mixed

with gum arabic solution, or with three to ten per cent. of powdered marshmallow root. This increases its toughness.

What is known as the oxychloride of zinc cement appears to the author to be far preferable to common plaster of paris. It is a trifle more expensive, but it costs so little that it is well worth trying. It is made by mixing oxide of zinc with a solution of zinc chloride. No particular strength of solution or proportions are prescribed; the zinc chloride solution should be a strong one, and the mixture should be of about the consistency of soft putty.

Zinc chloride may be bought as a solid substance or in strong solution. The latter answers for the mixing directly. It may also be simply made by dissolving metallic zinc in strong hydrochloric acid. The manipulation is exactly the same as with plaster of paris.

The manufacture of papier maché and of other matrices is given in a special chapter. For all ordinary purposes the plaster or cement matrices are ample.


The stamp is made from the mixed uncured sheet rubber, whose preparation in the factory, including the operation of calendering it into sheets, has already been described. The best advice the reader can be given is not to attempt to make it except as a matter of interest and experiment. It can be purchased especially prepared for stamps from the dealers in india rubber.

A piece is cut from the sheet large enough to cover the face of the matrix. It should have a perfectly smooth surface, without cloth wrapper marks sometimes found impressed on it. The sheet as received from the maker is about one-eighth of an inch thick. It is thrown into a box of powdered soapstone or talc to secure a coating of the same on both sides. A little is dusted over the matrix and the excess is blown off. The matrix is now placed upon the base of the press, and heat is applied.

To carry out the process most simply the press if of metal may be placed upon a support over a gas burner or kerosene lamp, or even on a kitchen range or stove. It will in a few minutes become warm. The sheet of india rubber is now dusted off and is placed in the press upon the matrix. The platen of the press is screwed down upon it.

As the india rubber becomes hot it begins to soften and flow. By the action of the screw of the press it must be forced down from time to time as it softens. This drives the putty-like material into all the interstices of the mould. The excess escapes from the sides of the tympan in cases where the latter is of restricted area. The press theoretically should be heated to the vulcanizing temperature, which is 284° F. (140° C.). In practice the heat is not determined with a thermometer. The operator learns by experience how much heat to apply. The regulation type of gas heated press or stamp vulcanizer is shown in the illustration on page 53.

As some of the india rubber is sure to protrude, the progress of the work can be watched from its action. By pressing the point of a knife against it the period of vulcanization can be told. Before the material is heated it is elastic and resists the

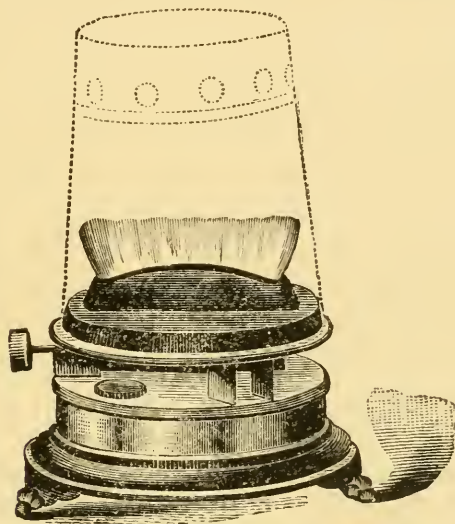

OIL STOVE FOR HEATING VULCANIZERS.

pressure of the knife; as heat is applied it becomes soft like putty; as the heat increases it again stiffens and becomes quite elastic. At this point the press can be opened and the sheet and matrix can be taken out or the platen swung aside. On pulling or stripping the sheet from the matrix it will be found to reproduce the model in elastic india rubber to the minutest detail.

As regards the minor details there is something

to be said. Distance pieces to gauge the thickness have been recommended for the home-made press, page 48. Care must be taken to have these low enough to provide for enough excess of material to produce a good impression. For ordinary stamp work they should allow about one-sixteenth of an inch for the "squeeze." It will be seen that by using the distance or gauge pieces both for making the matrix and for moulding and curing the stamp, absolute parallelism of surfaces will be secured.

The reader will have noticed in the description and will find at once in practice that the press has to be screwed up as the rubber softens. Where heavy iron presses are used the large mass of heated iron comprised in the platen of the press instantly heats the upper surface of the india rubber sheet and the heat immediately penetrates into it, while the heated matrix heats it from below. Thus it softens at once, and the press is directly turned down and the india rubber is driven into the mould and curing at once begins. But where small presses are used this manipulation is not so easy. For such the springs mentioned on page 51, are highly to be recommended. The matrix and india rubber can be put into the cold press, and the tympan with intervening springs can be screwed down so as to compress them. Then on applying heat the moulding takes place automatically.

With a hot press and good sheet a period of three to ten minutes is ample for moulding and curing.

Instead of sprinkling with talc the matrix may be oiled and sprinkled with plumbago and afterwards polished with a brush. This is not so clean a material as talc and is not to be recommended for general use, especially as oil is a bad substance to bring in contact with rubber.


The distance or gauge pieces whose use has been recommended are not necessary where presses working truly parallel as regards their opposing faces are used. But where home-made apparatus is used they will be found a valuable addition.

In describing the simple press it was said that it could be made of wood. It is evident that a wooden press could not be used for direct heating. Such a press must be used in a hot chamber or vulcanizer, properly so called. Originally rubber stamps were generally made in chamber vulcanizers.

The next cut shows a combined matrix making, moulding and vulcanizing apparatus of very convenient and compact form and adapted for rapid work. As the press stands in the cut the matrix press is seen in front. A box or chase is carried under its platen by two trunnions, so as to be free to oscillate to a limited extent. The type model is secured in this box. Above this box or chase is a cross-bar with screw and platen attached, connected at will to two standards or pillars, so as to constitute the matrix press.

A matrix plate swings on a hinge joint between the two presses. The hinge-pin is removable. Its

ends can be seen projecting to right and left of the press columns. The hinge is at such a height that when the matrix plate is swung forward over the type box it will rest upon it in a nearly horizontal position. The pivoted box will adjust itself so as to come into parallelism with the plate.

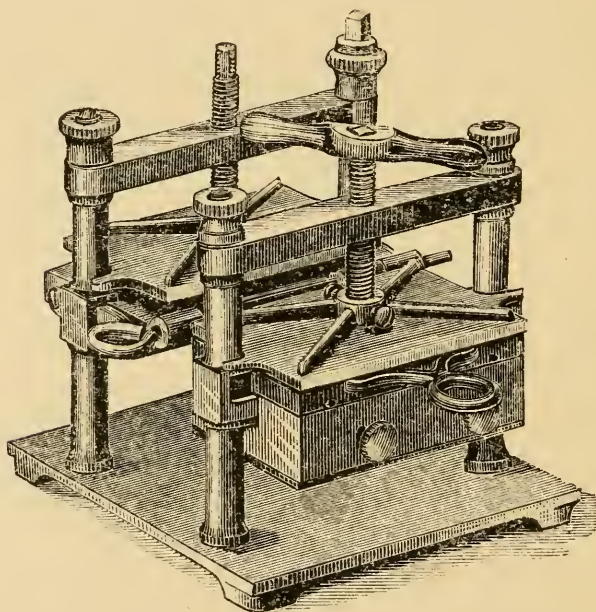

MATRIX MAKING, MOULDING AND VULCANIZING APPARATUS.

When the matrix plate is swung back it falls upon the base plate of the vulcanizing press seen in the rear.


In use the composition used for the matrix is spread upon the matrix plate, which may for this

purpose be removed from the apparatus. It is replaced and the hinge-pin is pushed home. This is done with the composition coated side facing the front of the apparatus as it stands in the cut. The plate is then swung forwards, the platen of the matrix press being turned forward out of the way, and is pressed down upon the type or other model that rests in the type box. If desired the press is used to force it home. The cross-bars of both the presses are arranged to swing each one on one of the pillars, so that the platens are turned to one side out of the way of the matrix plate as it is swung back and forth.

The pressure is released and the platens are turned aside. The matrix plate is swung over to the rear upon the bed-plate of the vulcanizing press. Here it lies with the composition-matrix upwards.

A lighted lamp, either alcohol or gas, is placed beneath the bed-plate of the vulcanizing press on which the matrix rests. This quickly dries it and brings it to a good curing temperature. The cross-bar and platen may be swung over it during the heating so as to be heated at the same time. The matrix is talced when dry and hot; the mixed sheet itself talced, is placed upon the matrix, the platen is screwed down upon it, and in a minute or two the moulding and curing is completed.

A vulcanizer, properly speaking, is a vessel arranged to heat to a definite degree any desired arti-

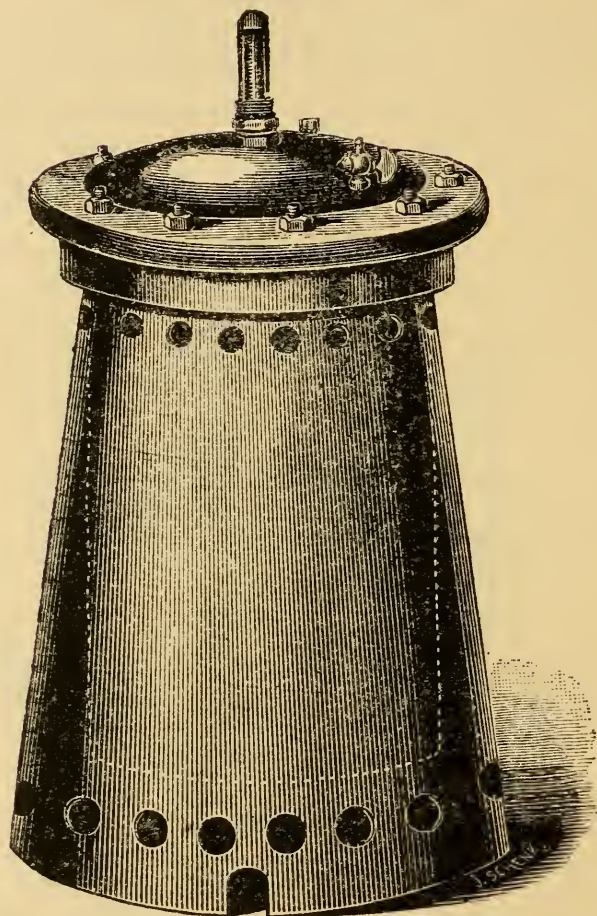

RUBBER STAMP VULCANIZER.


cles which are to be cured. The favorite type have been the steam vulcanizers. If steam is generated from water at a constant pressure, other things

being equal a constant temperature will be produced. By raising or lowering the pressure the temperature can be made to rise or fall. A steam vulcanizer is a tightly sealed vessel which contains water and which is provided with a thermometer or a pressure gauge as well as a safety-valve, safety disc or safety plug. By keeping the gauge at constant pressure or by keeping the thermometer constant the temperature can be limited and kept steady. The following table gives some pressure in pounds per square inch with temperatures corresponding to steam of such pressures:

Lbs. per square inch.	Temp. Fahr.	Temp. Cent.
45.512	275°	135°
52.548	284°	140°
60.442	293°	145°
67.408	300.2°	149°

The illustration, p. 64, shows a vulcanizer of modern type made for rubber stamp work. In some recent vulcanizers the water and steam are excluded from the vulcanizing chamber, being contained within double walls forming a steam jacket and maintaining a constant heat within the chamber. These illustrate a point that has been much misapprehended, namely that curing is independent of pressure or atmosphere. Because vulcanizers have generally been filled with steam at high pressure many have supposed that the steam or pressure had something to do with their action. The fact is that

it is only the heat due to the steam at such pressure that is instrumental. Steam is a very powerful radiator and absorber of so called radiant heat. For this reason an atmosphere of steam maintains all

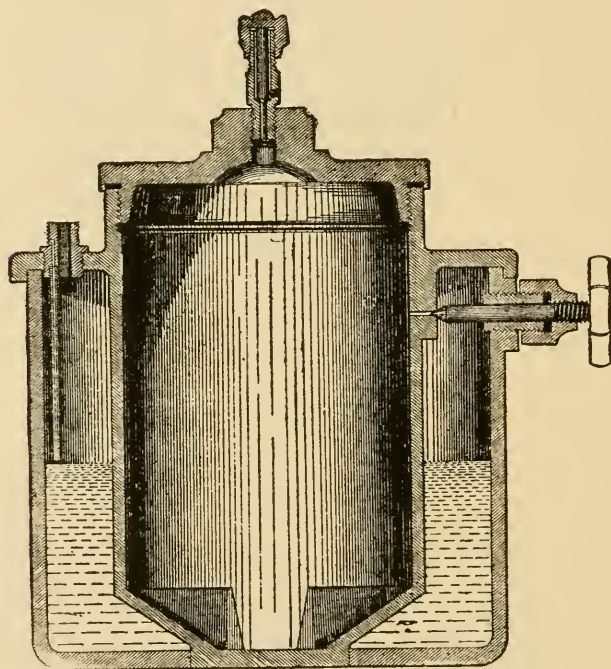

STEAM JACKET VULCANIZER.

parts of the vulcanizer at an even temperature and is to that extent advantageous. Its presence and the pressure it generates are not by any means required for vulcanizing. Its pressure is entirely without effect.

To use a steam vulcanizer, water is introduced,

the article in the press or mould is placed in it, and the top is secured. Heat is then applied, best if on the small scale, from a Bunsen gas burner gas, or oil stove. Either the pressure gauge or thermometer may be watched, and the flame turned up or down to keep it at the proper temperature.


Moulding cannot be executed in the ordinary closed chambers. The press must first be heated to the temperature of boiling water or thereabouts and the moulding is then effected by screwing down the mould screw, upon the sheet and matrix. It is then placed in the vulcanizer and cured.

The manufacturers supply gas regulators which automatically regulate the gas supply. These are worked by the steam pressure. If any one wishes to study the practical manipulation of small steam vulcanizers he can see them in use at any dentist's office.

There is no need of a steam vulcanizer for ordinary stamp work. The hot press system already described answers every purpose and is in use by the most advanced manufacturers for thin sheet work. But if a wooden moulding press is used then it must be heated in a vulcanizer or some kind of oven or hot chamber.

A very simple and reasonably satisfactory oven or air bath can be made from a flower pot and a couple of tin plates. A plate larger in diameter than the mouth of the flower pot forms the base of the apparatus. This is supported on a stand over the gas

lamp or other source of heat. A smokeless flame or one depositing no lampblack should be used. Alcohol or a kerosene oil stove illustrated on page 59 are excellent. On this plate a smaller plate is inverted, which latter must be so small as to be surrounded by the flower pot and to be included within it when the pot is placed over it like an extinguisher.

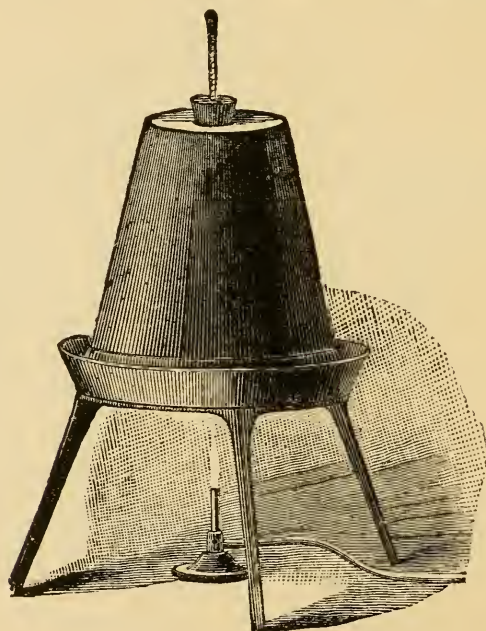


FLOWER POT VULCANIZER ON STAND.

A chemical or round stemmed thermometer is arranged to go through the aperture in the up-turned bottom of the pot. This may be hung from a support or it may be secured by passing through a hole in a cork or block of wood. Its bulb should

be near the part of the chamber to be occupied by the mould or press.

The press with the article to be cured is placed upon the inner plate. The temperature is maintained at the proper point by regulating the heat, and all the conditions for excellent work are supplied. The disposition of the apparatus is shown in the cuts.

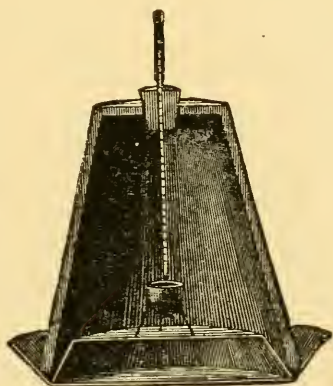


INTERIOR OF FLOWER POT VULCANIZER.

Another arrangement equally simple is given in the next cut. An iron kettle has a layer of type metal or lead poured an inch thick cast within it upon its bottom. A thermometer passing through a hole in the cover enters a cup of glycerine that stands upon the bottom. This gives the temperature.

The object of having a thick or a double bottom is to prevent excessive radiation of heat from any one part. The essential condition for good opera-

tion is to maintain an even temperature throughout the chamber.

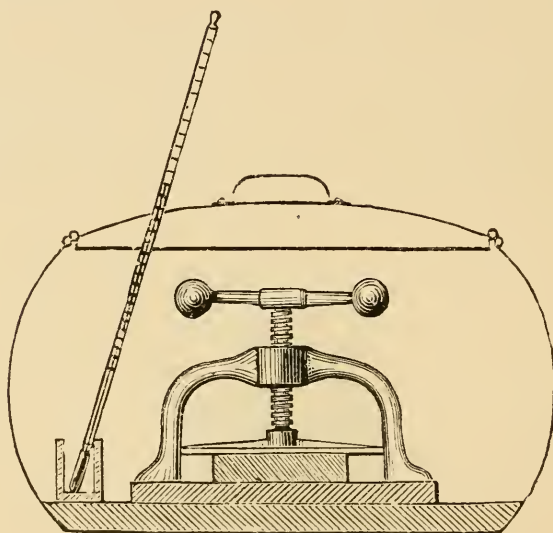

FISH KETTLE VULCANIZER.

The thermometer is not an absolute necessity. By removing the press from time to time and inspecting the overflow of india rubber the progress of the operation can be watched. An extra piece of india rubber may be placed on a piece of wood by the side of or upon the wooden portion of the press, and its condition can be taken as the criterion. Pressure with the point of a knife will tell the vulcanizing point.

By the press system of curing, a heat far above the vulcanizing temperature may be made to do good work by a very short application. There is

however danger of burning the work if left in too long. If the air-bath with thermometer or the steam vulcanizer is used, and the heat is kept down to the proper curing temperature, there is no danger of burning the india rubber even if the curing is considerably prolonged.

As the flower pot has often to be lifted off for introduction or removal of the press, and as it gets quite hot, a holder of some kind is requisite. A piece of heavy blotting paper is very convenient for this purpose.

The flower pot system with thermometer can be further simplified by being used on a stove or range. A china saucer inverted, or some similar support, should be placed under the pot. A part of the stove at very low heat will suffice. The kettle vulcanizer, can also be placed on a stove so as to dispense with gas or oil.

Finally, as the last step in simplifying the work, a stamp can be made without any special apparatus beyond a hot flat iron. The matrix may be placed on a stove where the heat is rather low, the talc-coated mixed rubber sheet placed upon it, and on this a hot flat iron. In a few minutes if the heat is sufficient the stamp will be finished.

A few words may be said about the type. High spaces and quads between the letters should be used, such as will come up to the shoulder of the type, as has been said. But a very nice effect is produced by using low quads between words. This leaves

each word elevated by itself, producing a good appearance.

Autograph stamps are made from a model cut in wood by a wood engraver. The autograph is written in some form of copying ink upon a piece of paper, and is transferred by moistening and pressure to a block of wood. With an engraver's tool the wood is cut away from the lines, as the block is routed after the inscription has been "outlined." The woodcut is used as a model for making a matrix.

It is evident that an autograph of fair quality could be obtained from a chalk plate. But in rubber stamp work to get good results certain essential parts should be of the best. These parts include the mixed rubber, model and matrix. A departure from excellence in any of these tends to the production of an inferior stamp. What is known as a "healthy cure" is above all essential to the appearance of the product.

The stamp thus made is attached to a wooden handle by common glue or by one of the rubber cements given in chapter XVI.

CHAPTER VI.

INDIA RUBBER TYPE MAKING.


INDIA rubber type are often used to set up different inscriptions in wooden handles, or different date figures in rubber stamps. The latter are in such cases made with slots or recesses to receive them. Rubber type are much shorter than regular type, and as a rule are larger in the body in proportion to the face of the letter. Where only a few are required the following process is the simplest way of making them from mixed rubber sheet.

The type which are to be copied are set up on a level base or imposing stone, and quads or spaces are put between them. High quads and spaces should be used; otherwise they should be pushed up until even with the shoulders of the type. After oiling the faces a matrix is produced exactly as described for stamps. Before it has set quite hard the plaster or cement is cut off so that it will just fit within a little "flask" or frame.

The latter may be made of tin or wood and may be rectangular or circular, provided it is large enough to include within its area the full working face of the matrix. It should be about half an inch

or five-eighths of an inch deep. Its object is to prevent the softened india rubber from spreading, so as to secure the requisite height of the type produced.

A piece of wood or metal is cut so as to fit closely within this frame like a plunger. It is provided with shoulders or cross pieces, so as to limit the depth to which it can be inserted. It will be seen that when matrix, flask, and plunger are all put together a complete mould for a block of type is

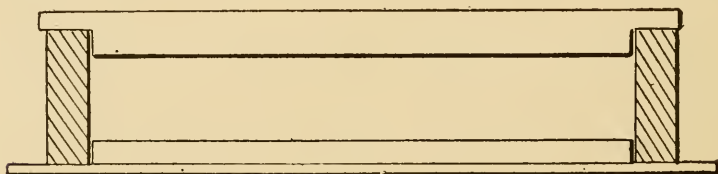

INDIA RUBBER TYPE MOULD.

produced, as shown in the illustration, the matrix with its plate forming the bottom of the box. After the flask is placed upon the matrix it is filled with the mixed uncured india rubber sheet. As a matter of preference thick sheet is used, but scraps of all shapes can be employed as it all fuses together. The mould and matrix are of course first well dusted with talc powder. The plunger is put on and the whole is pressed. Heat is next applied in a vulcanizer or hot air chamber, such as the flower pot arrangement, or in boiling water. As the sheet reaches the boiling point 212° F. (100° C.) the flask is removed and the plunger examined. If it

goes down to its seat without expelling any india rubber more of the latter is required and is accordingly inserted, the plunger being taken off for the purpose. The softened gum should ooze out around the sides of the plunger. The whole is again put under pressure, and the platen is screwed down, and if all is right an excess of rubber showing itself, the whole is put in the hot chamber, the heat is raised to 284° F. (140° C.), and is maintained there for half an hour.

It is almost a necessity to secure the matrix plate to the bottom of the flask. This for a single operation may be done by screws, or for several operations by hooks or catches.

When the curing is complete the mould is removed from the vulcanizer, is allowed to cool and is opened. The block of type will come out with perfect reproduction of the letters upon one side. If all the directions have been followed as regards distance pieces, level imposing surface, etc., both faces will be exactly parallel, and any number of other blocks can be reproduced of exactly the same height, not necessarily from the same matrix, although one good matrix can be used many times.

The type have now to be cut apart. This is done with a sharp knife which is kept wet. It is worked with a sawing motion, and if sharp and properly used will cut with regularity, and smoothly. Type with knife marks on the sides are always unmechanical in appearance and seem to be "home made."

The object of using high quads and spaces or of pushing them up, will now be evident. It secures the evenness of the general face of the block of letters, which otherwise would have a deep depression between each pair of letters. If the quads and leads are properly arranged, the letters will project upwards from a smooth, plane surface.

The dealers in rubber stamp maker's supplies sell special steel moulds for the purpose of making them. This does away with all necessity for making matrices, and making up a flask, etc. The general manipulation is that given above. Where many are to be made the regular mould is by all means to be recommended.

Sometimes type are made by cementing single letters made by the stamp process upon wooden bodies.

CHAPTER VII.

THE MAKING OF STAMPS AND TYPE FROM VULCANIZED INDIA RUBBER.

ALTHOUGH all reference hitherto in the matters of stamps and type has been to their manufacture from uncured india rubber, a good deal can be done with vulcanized and cured gum. The stock that is known in the trade as pure gum, such as is used for bicycle tyres, for steam packing and the like, can be made to yield to moulding to a certain degree. It will not flow and unite as will the uncured gum, but it is evident that in certain cases its stiffness is even an advantage. Thus with it, rubber type can be made without any flask or frame. The material has stiffness enough to support itself.

The manipulation is of the simplest. A piece is cut out with a knife so as to be of proper thickness and size. It should be a little thicker than will ultimately be required. The two opposite surfaces should be smooth and parallel. It is talced, and placed in the press with the matrix beneath it, and subjected to pressure by the screws being turned down. It is then placed in the vulcanizing chamber and heated to about 284° F. (140° C.).

After it has become hot it softens a little. The press is removed from the hot chamber and is again screwed down as hard as the matrix can stand. This point is largely a matter of judgment. The heat is largely indifferent as long as it is anywhere near the above temperature.

By one or two repetitions of the pressing and heating the softened india rubber can be made to take quite a deep impression from a suitable matrix. It is allowed to cool under full pressure. When removed from the press, it will retain the characters.

It is evident that impressions in as high relief or as deep and clear as those yielded by uncured india rubber need not be expected. But where the other cannot be had, or where some experimental or temporary work only is on hand, this process will be very convenient.

The material may be half an inch thick. From such india rubber type can be cut with advantage.

Old rubber can be thus used. The writer has obtained excellent results from pieces of an old discarded bicycle tyre.

The great point is to apply a heavy pressure to the hot material. Many other articles can be thus produced extemporaneously. At the same time it must be considered only a makeshift. One who has used the soft, easy flowing uncured gum would never be reconciled to the use of so rigid and difficultly moulded a material, one too that can never be trusted to reproduce intricate moulds of consid-

erable depth. In the slow yielding of the half melted uncured gum, so amenable to slight pressure, a quality of availability is found that is missed in the other. One is worked by main force where the other readily yields and takes the most complicated shapes.

By the above process stamps of such thickness may be made that they can be used without handles. It is also useful for impressing a designation of any kind upon ready cured articles. It suggests a very useful department of manipulation of india rubber.

The heating and moulding can be done also in a hot liquid bath such as described in chapter XI.

CHAPTER VIII.

VARIOUS TYPE MATRICES FOR RUBBER STAMPS AND TYPES.

MATRICES for stamp moulds can be made by several of the methods used by stereotypers. Thus an electrotype could be taken directly from the face of the type. There would be little or no utility in doing this where the simpler processes are available.

PAPIER MACHÉ MATRICES.

The stereotyper for daily newspaper work uses very generally the papier maché or “flong” process of reproducing the page. This is also available for rubber stamp making.

The first requirement is paste. This is made by softening twelve parts of whiting in forty parts of water, letting it soak for an hour or more. Nine parts of wheat flour are added. This is best mixed with a little water before adding to the main mixture. It is then brought to the boil and seven parts of glue softened by soaking in twenty-one parts of water, are added. For each gallon of such mixture, one ounce of white crystallized carbolic acid is added if it is to be kept for a long time.

The "flong" is made by pasting together, one on top of the other, a sheet of fine hard tissue paper, three sheets of blotting paper (about 23 pounds to the ream), and a heavy sheet of manilla paper. The pasting must be smooth and each layer must be pressed and rubbed down, but not too hard. It is very important to secure perfect smoothness and regularity, and entire absence of air bubbles.

Every printing office where the process is used has its own traditions as to the preparation of flong. As a great deal depends on manipulation, it would be well to endeavor to inspect its practical use in a newspaper printing office before making it. Ready prepared flong can also be procured.

The form of type must be very clean and there must be no paste on the tissue paper face of the flong. The type are lightly oiled, some powdered talc is dusted over the damp tissue paper face of the flong, and the mass is laid face downward on the type. With a stiff haired brush the paper is now beaten down against the type. Great care must be taken to beat vertically; a slight side action will ruin the resulting matrix. If the brown paper will not stand the beating, a cloth may be spread over it.

The progress of the work can be watched by raising up a corner from time to time. When sufficiently deep the last touch is given by the printer's planer. This is a block of hard wood. It is placed

upon the back of the flong and is hammered down. The operation is repeated until the entire area has been treated. For much rubber stamp work the area would be so restricted that shifting would be unnecessary.

The work is then put into a heated screw press, such as the vulcanizing and matrix press, and is dried for a period varying from some minutes up to half an hour. Some blotting paper is advantageously pressed on top of the whole in the press while drying. The press is opened, the flong removed, and dried in an oven. It is kept under a piece of wire net while drying to keep it flat. The net may be of wire, .064 inch thick, with six meshes to the inch. This baking is not strictly necessary for rubber stamp work.

This gives a matrix which may be used as rubber stamp moulds. In use it is recommended to place a piece of smooth tin foil over it. This tends to give a smoother surface to the rubber.

STRUCK UP MATRICES.

Didot's polytype process may be advantageously used for producing type metal matrices. The following is the method of applying it.

The type form is firmly locked and is backed up by and secured to a solid block of wood. It is suspended in a sort of gallows frame with the face of the type downward and exactly level a few inches above a table. Underneath it a shallow tray is

placed, into which some melted type metal is poured. The melted metal is carefully watched. The block and type are held by a catch so as to be released at will. Just as the type metal is on the point of solidifying, the block is released and drops upon the metal in the tray. The type should be slightly oiled. The force of the blow produces a matrix in the metal, and the form can at once be removed.

It is well to have accurately adjusted distance pieces for corresponding striking pieces on the type block to impinge upon. The process is highly spoken of, especially for small forms such as those mostly required for rubber stamps.

CHALK PLATES.

The base for this form of matrix is a metal plate whose surface is slightly roughened with sand-paper. It is next rubbed over with white of egg, and flooded with the chalk wash made as follows: Flong paste (described under *Papier Maché Matrices*, page 80), six ounces; whiting, twenty-four ounces; water, three pints. The whiting is softened by soaking for an hour or more. The whole must be intimately mixed. It should cover the plate to the depth of one-thirtieth to one-twentieth of an inch. The plate is dried in a perfectly horizontal position.

When dry the design or writing, etc., is made with a smooth steel point, the lines being carried

clear through the white layer to the metal. The mould is now baked at a temperature well above boiling water; as high as 392° F. (200° C.) may be reached without harm.

If the coating seems too thin, an extra coat can be given between the lines especially over the larger areas. This must be done before the baking. A pipette may be used for putting on this coat. This deepening has the bad effect of increasing the chance of the coating stripping from the metal.

The matrix thus prepared is used in the press just as is the ordinary plaster matrix. It is suited for reproduction of autographs, scrip, diagrams, etc.

CHAPTER IX.

THE MAKING OF VARIOUS SMALL ARTICLES OF INDIA RUBBER.

INDIA rubber can be so readily shaped in moulds and the latter are so readily made of plaster of paris that any one who is interested in such things will find endless amusement in working out different designs. Before suggesting any specific articles the following are the general points to be kept in mind.

The material may be uncured mixed sheet of any thickness. As we have seen this material when heated and pressed runs together. It can be forced into any shape by comparatively slight pressure. So exactly does it reproduce the smallest line or mark, that care must be taken to have the moulds very smooth and free from defect. Powdered soap-stone is used to prevent adherence to the mould, but great care must be taken not to mix it among the pieces of the india rubber, where several are used in one article, as it will prevent their coalescing or running together.

Another point is to contrive to introduce the proper quantity of rubber. The aim must be to

have a slight excess, but to avoid waste this should be as little as possible. Unless some rubber is squeezed out there is no certainty that the mould has been filled. Any projecting "fins" from the overflow are cut off with a knife or scissors after the article is removed from the mould.

Plaster of paris or dental plaster mixed with dextrine or gum arabic water or the zinc oxychloride cement, already described, is to be recommended for the moulds. They should be made, if deep, in frames or "flasks" of tin, as plaster if unsupported is liable to split open when the rubber is forced home.

For many articles the hot press can be used. Such articles are mats and other thin flat pieces. The rubber stamp sheet is a good material for them. For thicker articles a thicker sheet can be used, and sheet of any gauge can be procured from the maker. Much of what has been said about india rubber type applies to the making of miscellaneous shapes. It will also be understood where wooden moulds are spoken of that plaster, or, still better, metal can be substituted, and is to be recommended for nice work as the grain of the wood is very apt to show where the india rubber comes in contact with it.


Suction discs and similar small articles into which an extra thickness of india rubber enters are best cured in a vulcanizer. The flower pot arrangement is excellent for such. The time for curing may be somewhat extended on account of the greater thickness of material to be acted on.

Suction Discs.—For suction discs a mould is required which will produce a shallow cup with the edge feathered or reduced to a very slight thickness. Its outer surface should be raised in the centre so as to give a projection for attachment of the hook. The discs are generally made small, not over an inch in diameter, as they are not reliable for any heavy service. Their principal use is to suspend advertising cards and light articles to the glass of show windows. The following is a method of making a simple mould.

A hole to give the outside contour should be bored in a small piece of wood. A marble which will exactly fit the hole is next required. Some plaster of paris is mixed with water and put into the bottom of the hole, and the oiled marble is pressed down until the plaster rises and fills the entire space under the marble. After it has set the marble is removed. The proportions should be so arranged that the plaster will have risen at the sides within an eighth of an inch of the surface of the wood. This gives the exterior mould. For the cup or hollow a marble a shade too large to enter the hole may be used.

One or if necessary two thicknesses of mixed sheet rubber cut into disc shape so as to fit the hole are inserted in the block, and the larger marble is placed on top and screwed down by the press. Heat is now applied in the vulcanizer. When the thermometer indicates 212° F. (100° C.), or better a

little more, the mould is withdrawn and the screws turned until the rubber is forced down and the excess begins to squeeze out between the marble and the wood, which two should now nearly touch. It is replaced and the heat is brought up to the curing temperature 284° F. (140° C.). It is possible that a second screwing up may be needed. The spring press is in such cases particularly convenient as it avoids the necessity for removing the press from the vulcanizing chamber. After half an hour it will be thoroughly cured. A hole is made through its centre from side to side thereof, but not penetrating the disc, and through this hole a brass nail is thrust and bent into hook form.

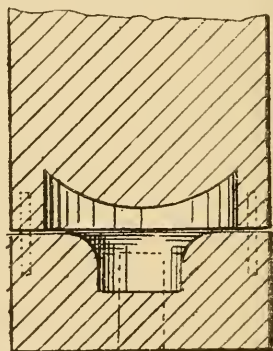

MOULD FOR SUCTION DISCS.

In the cut the correct shape for the mould and consequently for a suction disc is shown. This can be easily secured where a disc already made is procurable by casting in plaster, or, with a little ingenuity the template for the mould and the plunger to be used instead of the marble can be whittled out of wood. The lower body of the mould in such a case can be made of plaster of paris. To secure the alignment of the two parts of the mould, dowel pins, indicated in dotted lines, should be placed near the periphery. The gum should be introduced in a lump


near the centre, in order that it may sink well downwards to the bottom of the mould before spreading laterally. Sometimes the tips have a recessed end. This is secured by the use of a mandrel, shown in dotted lines in the axis of the mould. Such discs are sometimes made to be cemented to arrows to be discharged against smooth surfaced targets, to which they adhere on impact by atmospheric pressure, giving rise to a very interesting game.

Another use of suction discs is as photographic negative holders. They can be fastened to a wooden handle and be attached by suction to the back of a negative under treatment. For this purpose they should be at least two inches in diameter.

Pencil Tips.—These are generally little cylinders of india rubber, which fit into a tube that slides over the end of the pencil. They can be thus simply made. A hole is bored in a piece of wood the diameter of and a little more than the depth of the pencil tip. A short cylinder that exactly fits the hole is required for plunger. The gum is put into the hole in little discs, or rolled up into a cylinder, the plunger is placed on top, and the mould put in the press. It is shaped by pressure and cured as described.

Sometimes the tips are cup shaped. For these the mould is made in two sections fastened by catches or by pins set in the plaster as shown in the cut. The hole is made larger at bottom than at

top, and at the top is a little smaller than the shaft of the pencil. A plunger that nearly fits the small end is provided. The india rubber is placed in the mould and heated. When soft, the plunger is forced down to the proper distance in the press and the article is cured. Care must be taken to

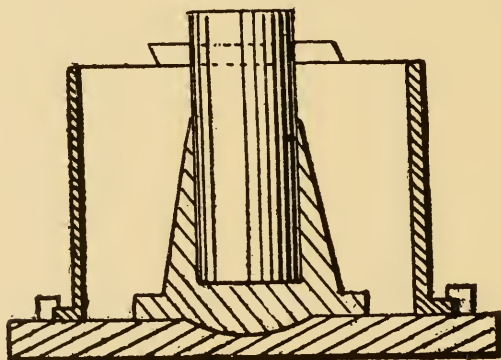


MOULD FOR PENCIL TIPS.

give the plunger a good coating of talc, and it must be made to sit vertically. The arrangement of a cylindrical hole shown in the cut secures this result perfectly. As distance piece a pin is passed through the plunger.

Cane and Chair Leg Tips, etc.—By carrying out the process just described with larger moulds and of slightly different section very convenient tips for chair legs and walking canes can be made. Such tips can be modified in size and thickness to answer as covers for the mouths of bottles, test-tubes, etc.

Corks.—These may be made in moulds tapering

from top to bottom. The india rubber must be packed in with great care to secure as solid filling as possible. A plunger is used that enters the larger end and is a very little smaller in diameter, so as to descend a little way into the mould. This distance determines the length of the cork. As the perimeter of the plunger strikes the walls of the mould it cuts off almost completely the excess of rubber

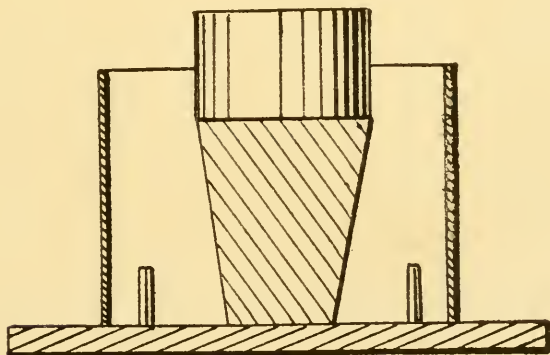

MOULD FOR RUBBER CORKS.

that has squeezed up past it. An excellent modification of the mould is shown in the cut. The upper part with parallel sides serves as a guide for the plunger. It is a similar extension as the one recommended to be used for the plunger in the hollow pencil and chair leg tip moulds just spoken of.

Mats.—These may generally be made in the hot press. Designs for them in great variety may be found in cut glass and pressed glass dishes. Many

of these have patterns on their bottoms that can be moulded in plaster to serve as matrices.

Cord, Thread and Seamless Tube.—By placing the mixed india rubber in a cylindrical mould fitted with piston and with one or more round holes in the bottom, the material may be softened by heat and forced out of the holes by depressing the piston. This will form cylindrical thread or cord. As it descends it may be received in a box of powdered talc and be afterwards cured. By providing the hole with a mandrel seamless tubing may be thus made. In making such the mandrel usually remains in place during the curing. Plenty of powdered talc must be used.

Skeletonized Leaves as Models.—These would form interesting models from which matrices could be made in plaster. It would be possible to produce some very pretty stamps or mats from these and similar models.

After some experience inspection of any article will show how it was moulded. The fin will indicate the joint in the mould, and with this as a clue the mould can be almost certainly constructed like the original.

India Rubber Bulbs.—Bulbs and hollow articles generally, such as dolls, toys and the like, cannot be made without special high pressure hollow moulds. The general process consists in cutting out gores from mixed sheet as for a balloon. The edges are coated with cement (thick benzole or car-

bon disulphide india rubber solution) and while the rubber is warm the seams are pressed and knitted together with the fingers. A hole is left in one place through which some pure water or water of ammonia is introduced. The bulb is now blown up with the mouth or otherwise, and while inflated the hole is pressed shut. This is often done with the teeth. Any projections around the seams are cut off with curved scissors. The mould is of iron and in two halves. Powdered talc is applied, and the bulb is placed in and shut up in the mould which it should exactly fill. The mould is clamped together and the whole is put into a vulcanizer, and the rubber is cured. The steam and vapor formed by its liquid contents expand it and press it with great force against the sides of the mould. After curing the mould and bulb are removed from the vulcanizer, cooled by a shower bath of cold water, the mould is opened and the bulb is removed. Often an iron pin is left projecting through the side during the vulcanizing, which pin, when withdrawn, leaves the necessary aperture, or it is perforated. The bulbs are polished by tumbling in a revolving cylinder. Considerable skill and practice are needed to succeed in making hollow bulbs. Great accuracy is needed in cutting out the gores and in joining the seams.

CHAPTER X.

THE MANIPULATION OF MASTICATED SHEET RUBBER.

THE manipulation of pure sheet rubber is simple, yet is liable to lead to disappointment. When two pieces are laid face to face and cut across with a sharp knife, or scissors, the edges will adhere with considerable tenacity. This may be increased by applying some thick solution of india rubber in a volatile solvent, and by manipulating the sheets so as to bring the entire surfaces of the cuts together. Finally the material may be charged with sulphur by absorption or by Parkes' process, and cured in a glycerine or calcium chloride bath, all of which are described in chapter XI. The same treatment will affect the cement used in making the joint also, bringing about its vulcanization.

Such in a few words is the main process in the treatment of this class of goods. Where it is desired to prevent adherence, soapy water or powdered talc is used.

Adherence may be produced between the surfaces of the sheets if they are clean, by pressure and a little warmth. The method of making toy balloons

will give an example of how the article is dealt with by the manufacturer.

A pile of pieces of masticated sheet rubber is made. Every piece has one side coated with powdered talc, and two talc-coated sides are placed in contact in each pair. As they are piled up, the outer surfaces of each pair are moistened with water. A steel punch or die, pear shaped in outline, is used to cut down through the pile, cutting all the pieces into that shape.

The pile is then taken apart in pairs. The separation takes place between the wet surfaces, the edges of each pair adhering slightly so as to enclose the talc-coated surfaces. The neck is opened if necessary. A rather weak or thin solution of india rubber in benzole is now brushed over the freshly cut edges. By pulling out the centre of each piece the edges are brought into contact, and adherence is produced.

If the Parkes process of vulcanizing, chapter XI., is employed they are cured to the slight extent necessary upon a tray coated with talc. The balloons are then ready for inflation.

They are rather delicate articles to make except for immediate use as the thin material is liable to become over vulcanized.

In the chemical laboratory sheet rubber can be used for covering the ends of glass stirring rods. These answer very nicely for cleaning out from beakers the last particles of a precipitate. The

sheet is cut of proper size and is bent around the end of the rod and cut off close with a pair of scissors. It adheres where cut. It is then pinched with the fingers to bring the edges into better contact and the operation is complete. A slight heat makes it adhere better.

To connect glass tubes in setting up laboratory apparatus the same material was formerly used. It was wrapped around the joint, tied with thread and slightly warmed. At present this form of connection is wholly displaced by ready made rubber tubing.

It is interesting to observe in all articles made from this sheet the marks of the original cutting knife. These may be observed in inflated balloons, as parallel lines running all over the surface, and magnified by the expansion due to the inflation.

CHAPTER XI.

VARIOUS VULCANIZING AND CURING METHODS.

THE regular methods of vulcanizing and curing can be departed from and good results obtained. A few excellent methods differing essentially from the ordinary ones are described which will be of service to workers on the small scale, as they enable one to dispense with vulcanizer and air bath entirely.

One type of curing process does away with the air or steam vulcanizer, and substitutes, as the curing agency, a hot bath of liquid. For this purpose a fluid is required that will not act injuriously upon the india rubber, and which will give a curing temperature without boiling away. One favorite liquid is glycerine. This can be heated to the necessary degree and is an excellent substitute for the expensive apparatus often used. For experimental work it is exceedingly convenient.

In use it is placed in a vessel of proper size and a thermometer is suspended so that its bulb dips into the liquid near one side and does not touch the bottom of the vessel. The heat is applied by a gas burner, alcohol lamp or oil stove. Of

course the vessel may be placed on an ordinary cooking stove or range, and the heat may be graduated and adjusted by moving it about until it reaches a part of the stove where the proper heat will be maintained.

The mould with its contents is immersed in the glycerine, care being taken to see that it so placed as to assume the mean temperature of the liquid and not to be heated too hot. This might happen if it stood on the bottom of the vessel, so it is well to have it supported or suspended a little above it.

It is easy to see that the whole may be so arranged that the screw handle or pressure nuts of the mould will rise above the liquid. In this case the press can be screwed down while the article is heating.

Instead of glycerine a strong solution of some salt in water has been recommended. A solution of calcium chloride, or some other salt can be substituted. Either are very cheap and will be quite satisfactory.

Another treatment which applies also to the mixing operation is by the sulphur bath. Sulphur is melted in an iron vessel and brought to a temperature of 248° F. (120° C.). A piece of unmixed pure caoutchouc immersed in this bath will gradually absorb sulphur. The case is almost parallel with the absorption of water or benzole by the gum. The piece swells and thickens as it is acted on and eventually will contain enough sulphur for vulcani-

zation. It may absorb as much as fifty per cent. The point of proper absorption must be settled more or less empirically or by successive trials.

After enough has been taken up the piece is removed and dipped into cold water, which cracks the adherent sulphur so that it can be brushed or rubbed off. This gives a piece of mixed rubber ready for moulding and curing. It can be heated and moulded and may be cured as desired, in a liquid bath, hot press or vulcanizer.

It will be observed that this provides for the admixture of sulphur only; no talc or other solid can be thus introduced. The addition of these solids tends to make the rubber of a more attractive color and their use is not to be deprecated in all cases. Hence the sulphur bath process is not to be considered a perfect one.

In the sulphur bath the mixing and curing processes can be combined. If the liquid sulphur is heated to the vulcanizing temperature, 284° F. (140° C.), a thin strip of gum immersed in it will be vulcanized completely in a few minutes. A heating of several hours at the lower temperature will effect the same result.

The sulphur bath processes must be regarded as unsatisfactory. It is not easy to feel that any dependence can be placed upon them as regards reliability or constancy of product. The sulphur also will mostly effect the surface. Thin pieces may be satisfactorily treated, but the same confidence can-

not be felt as is experienced when specific amounts of ingredients have been mixed in with pure caoutchouc in a regular mixing machine.

The sulphur bath is of value to the experimenter, enabling him to do his own mixing without expensive apparatus.

Bromine, iodine, chlorine and nitric acid are vulcanizers. A piece of sheet rubber dipped into liquid bromine is instantly vulcanized. Iodine and nitric acid have also been used in commercial work.

Alkaline or alkaline earth sulphides can be employed in solution under pressure for vulcanizing. At a vulcanizing temperature their solutions will answer for thin sheet very well. Polysulphides of calcium have thus been employed.

By simply lying embedded in finely divided sulphur at a temperature of 233° F. (112° C.) as much as ten per cent. of sulphur may be absorbed by thin sheet rubber. This is one of the processes peculiarly suited for work on the small scale. It may be used instead of the Parkes process next to be described.

Chloride of sulphur is an orange red mobile liquid of a peculiar and disagreeable odor. It boils at 276° F. (136° C.). It dissolves both sulphur and chlorine so that it is not easy to obtain it in a pure state. If unmixed india rubber is exposed to its action it will quickly become vulcanized. At ordinary temperatures the mixing action takes place,

though it is much accelerated by a slight application of heat.

It is quite possible that this action may be of use to the reader in his manipulation of india rubber. Thin sheet may be vulcanized by being immersed in a solution of this substance in bisulphide of carbon followed by slight heating. The thin layer of caoutchouc left by evaporation of the chloroform solution of india rubber may thus be vulcanized so as to become comparatively strong and elastic. Where the same solution has been used as a cement or for patching overshoes and finishing the patch, a vulcanization can thus be given to it.

The process is known as Parkes' cold curing process.

A solution of one part of chloride of sulphur in forty parts of bisulphide of carbon is of good strength for rapid work. A thin article needs but an instant of immersion. It then is placed in a box or tray upon some talc powder and is heated to about 104° F., (40° C.). One minute of curing will suffice. It is advisable to wash off the articles afterwards in water or in weak lye to remove any traces of acid.

Petroleum naptha can be used as the solvent instead of bisulphide of carbon. The latter substance has an exceedingly disagreeable odor, and its vapors must be considered rather injurious especially to those who are not accustomed to them.

When thick articles are to be cured by this pro-

cess a much more diluted solution is used. One per cent. or less of the chloride of sulphur is the proportion used. The object of this is to enable a longer immersion to be employed so that the interior will be affected before the outer layers become too much charged with the vulcanizing material.

In this short description of the Parkes curing process hints for a useful method may be found. The process is beyond doubt by far the simplest known for treatment of india rubber. Exactly what reaction takes place is unknown. Whether the sulphur or the chlorine is the acting vulcanizer has not as yet been determined.

Its defect is that it produces surface action, analogous to casehardening. One method of avoiding this is to remove the articles from the sulphur chloride bath and at once to immerse them in water. This prevents the rapid volatilization of the solvent and an equalizing of the absorption ensues.

CHAPTER XII.

THE SOLUTION OF INDIA RUBBER.

INDIA rubber presents some difficulties in its solution. If a piece of pure gum just as received by the factory is placed in hot water it will swell and whiten after a while, but will not dissolve. If a similar piece is placed in benzole a similar but greatly exaggerated action takes place. The piece if left to soak for a day or more swells enormously, but very little solution is effected.

The swollen india rubber can be removed from the benzole in a single piece. It will display all the layers and marks of the original piece which was perhaps of not one hundredth part of its volume. Some parts will be a perfect transparent jelly.

It has been found that masticated india rubber dissolves with comparatively little difficulty. If the experimenter will place in a porcelain mortar, the jelly-like mass obtained as above detailed, and will rub it up thoroughly, it will be effectually masticated. This requires a little patience, as the slippery material seems to elude the pestle. Yet eventually it will all be reduced to a perfectly homogeneous mass. Its action while being rubbed up is

very peculiar. At first no progress seems to be made. After a little the lumps yield to the friction. The rubber then begins to attach itself to the pestle and mortar, and begins to be drawn out into ever changing webs and threads. As the operation approaches completion the material makes a snapping, crackling noise familiar to all rubber workers. When complete there will be no lump left, and the whole will be a uniform pulp.

If benzole or a volatile solvent has been used, the rubber will easily be removed from the mortar with a spatula or palette knife. If turpentine was the solvent it will be impossible to remove the last traces except after long standing or by solution.

If replaced in the original solvent it will now come into nearly or quite perfect solution. This is the best way of masticating on the small scale. It is almost impossible to masticate untreated gum in an ordinary mortar.

The dealers sell a special india rubber for the manufacture of cement and solutions. This is so treated by mastication that it dissolves with great readiness. It is also said that heating under pressure is used to dissolve it in some factories.

Many solvents have been used and none work without some difficulty. Benzole, coal tar naphtha, petroleum naphtha, carbon disulphide, ether and chloroform, oil of turpentine and caoutchoucine are the best known. The naphtha best suited for its solution is termed solvent naphtha. It has a specific

gravity of .850 at 60° F. (15½° C.); it boils at from 240° F. (115½° C.) to 250° F. (121° C.) and on evaporation should leave no more than ten per cent. of residue at 320° F. (160° C.)

Payen recommends a mixture of 95 parts bisulphide of carbon with 5 parts of absolute alcohol.

Commercial chloroform is apt to be too impure to act as a good solvent. It is apt to contain alcohol mixed with it as a preservative, which impairs its effectiveness.

Some of these solutions are better suited than others for the deposition of thin layers by evaporation. Turpentine gives a very sticky and unmanageable solution, which dries very slowly. Payen's solution and the chloroform and the benzole solutions may be cited as especially adapted for this purpose. Careful vulcanization by the cold curing method can be applied to articles made by such deposition from evaporation.

In the case of all of them some form of mastication for the india rubber is needed. The simple mortar grinding of the gum swelled by the solvent is the only practical treatment without special apparatus.

When it is remembered that fixed oils are destroyers of vulcanized or unvulcanized india rubber it will be obvious how important it is to use pure solvents. Too great care cannot be taken to preserve the liquids pure and free from such matter.

A solid hydrocarbon may be used. Thus paraffin wax, such as candles are made of, when melted acts

as a solvent. The resulting liquid solidifies when it cools, retaining an almost greasy feel.

Boiling oil of turpentine is recommended by some for the solution of vulcanized india rubber. Phenyle sulphide, it is stated, will soften it so as to render it workable. The latter discovery is credited to Dr. Stenhouse.

It is stated that a solution or pasty mixture of one part of caoutchouc in eleven parts of turpentine with one half part of a hot concentrated solution of sulphur (potassium sulphide) gives on evaporation a film neither tacky nor soft, a species of vulcanization taking place.

It is of much interest to note that an aqueous solution of india rubber has been proposed in which the vehicle is a solution of borax in water. This is well known to be a solvent for shellac and other resins. It has been recommended often as a vehicle for rubbing up india ink. The ink made by mixing lampblack with the shellac solution is nearly waterproof. A shellac varnish is given by the plain solution.

The experiments upon india rubber were published in a recent trade paper. One method of making the solution is as follows.

A solution of borax two fifths saturated is made by adding to two volumes of saturated solution three volumes of water. To this is added a solution of india rubber in benzole or other hydrocarbon of such strength and in such quantity as to contain

from three and one-half to four and one-half per cent. of india rubber referred to the borax solution. It is now vigorously shaken and heated to 120°-140° F. (49°-60° C.) and the agitation, not too violent, is continued until it cools. Ceara or Madagascar rubber answers best; Para is not so good for this formula. This may be termed the indirect or emulsion method.

For direct solution from two to three volumes of water may be added to three volumes of saturated borax solution. The india rubber is added in extremely thin shavings and the solution is heated. For weak solutions the boiling point need not be reached. For strong solutions the heating should be done under pressure so as to bring up the pressure to one to three atmospheres.

Such solutions may contain as much as eight per cent. of the gum. The mixture is liable to coagulate or gelatinize just at the wrong time, but it may be of value as a vehicle or as a waterproofing agent. It deserves further investigation, which it is to be hoped it will duly receive.

Great care is necessary in working with naphtha, benzole, carbon disulphide and similar liquids. Their vapor is given off at ordinary temperatures and may travel some distance to a lamp or fire and become ignited and carry the flame back to the vessel. Their vapors are also anæsthetic and should be avoided as regards inhalation.

CHAPTER XIII.

EBONITE, VULCANITE AND GUTTA-PERCHA.

Ebonite and Vulcanite.—These two well known substances are india rubber, in which the vulcanization process has been intensified. From twenty-five to fifty per cent. of sulphur is added in the mixing, and the curing is prolonged to several hours. A temperature of 275° F. (135° C.) for six to ten hours is sometimes recommended, but generally a shorter period at the regular temperature, 284° F. (140° C.), may be employed.

The mixed sheet is made and sold extensively for dentists' use. It is soft and flexible and very easily moulded. It is treated like the regular mixed sheet in every respect, except that plumbago brushed on the slightly oiled surface of the mould is recommended instead of the light colored talc, to prevent adherence. Wax where available is better than oil.

Sometimes specimens are built up in sections. About an hour before full vulcanization in the fourth stage, new material can be added and will attach itself to the old. The stages of vulcanization are thus given by Bolas.

“Several distinct stages or steps may be traced during the curing of ebonite; and I wish to call your attention to some specimens illustrating these various stages.

“Here, in the first place, is the plain mixture of sulphur and rubber, this being nearly white, and capable of becoming quite plastic or soft by the application of a gentle heat.

“The second specimen illustrates the action of a very moderate degree of heat on the mixed material, this particular sample having been heated to 128° Centigrade for twenty minutes. It is, as you see, somewhat darkened, and has lost a little of its original softness; while a degree of heat which would have rendered the original mixture plastic, like putty, fails to make much impression upon it.

“The third specimen illustrates the effect of a more prolonged heating, this sample having been heated for an hour to 135° Centigrade. It is olive green in color, and has acquired a certain amount of elasticity, resembling that of a rather inferior quality of vulcanized caoutchouc.

“The fourth stage of curing is illustrated by this specimen, which you see is brown, and tolerably hard. Ebonite in this state refuses altogether to become plastic by heat, and a temperature of 150° maintained for half an hour or less would suffice to bring it to the fifth stage, or that of finished ebonite.

“The fifth stage, or that of properly cured

ebonite, is the goal to be arrived at in manufacturing the material. There should be no places where the curing is imperfect, a kind of defect which is likely to happen when articles of unusual thickness are vulcanized, and no portion of the ebonite should be spongy or honeycombed by air bubbles.

“The sixth, or spongy state, is generally the result of over-heating, bubbles of gas forming in the material, and converting it into a kind of porous, cinder-like mass.

“A specimen will now be handed round, which illustrates the third, fourth, fifth and sixth stages, as already described. The specimen in question was cured on a hot plate, this having probably been heated to 160° or 170° Centigrade; and you will be able to trace all gradations in the curing operation, from the first setting of the plastic material to the destruction of the ebonite by overheating.”

Cement for uniting pieces of the partially cured material may be made by rubbing up some of the untreated scrap with benzole.

At the heat of boiling water, ebonite can be bent to a certain extent, which bend it retains on cooling. When warm an impression of a coin or relief die may be made on it by heavy pressure which it will retain. On heating the image disappears. If before heating the surface is planed off and the piece is heated the image formerly in intaglio will expand into relief.

By the exact process of rubber stamp making

excellent stereotype plates may be made of ebonite.

It can be turned at high speed in a lathe and polished with fine 000 emery paper followed by a cloth bob with rotten stone, etc., and water or oil. Blotting paper, charged with the above or with tripoli, is excellent for polishing small surfaces by hand.

Ebonite is a good connecting material between softer rubber and iron, the whole being vulcanized together; the iron should be well roughened or cut into rasp-like or file-like projections.

Ebonite is properly the name for black hard rubber, and vulcanite for the colored products such as used by dentists and others. .

GUTTA-PERCHA.

Gutta-percha is prepared by coagulation from the juice or sap of several trees, among others the *Isonandra gutta*, of Borneo and the East Indian Archipelago. The product gutta-percha is identical in composition with india rubber. It is hard at all ordinary temperatures.

Its manufacture includes purification and mastication. It is far more amenable to treatment than is india rubber. Many materials are mixed with it as adulterants or otherwise in the factories.

It is more useful in the form of sheets. These when heated to 122° F. (50° C.) become pliable and can be moulded by pressure to any degree. At the

temperature of boiling water it becomes pasty and adhesive, and at 266° F. (130° C.) it is so soft that it may be considered as melted.

It is an admirable moulding material. Stereotypes and other relief or intaglio images can be made by pressing it while heated. These are often absolutely perfect reproductions of the original.

Dishes for photographic purposes, etc., are easily made out of the sheet. By gentle warming they become pliable, and a greater heat makes surfaces capable of adhering by pressure.

Tubes can be made by the squirting process, as used for india rubber. Wires are coated with it in a similar manner.

It has several defects. It is not durable if exposed to the air with consequent changes of temperature. It is also too easily softened by heat, as of course no hot liquid can be introduced into a gutta-percha vessel. The Parkes cold curing process can be applied to it, which makes it more indifferent to heat. This is applied by dipping an instant and drying. After several repetitions the period of dipping is prolonged and ultimately it is left immersed some time. If left immersed at first it would dissolve.

It is soluble in most caoutchouc solvents, particularly in carbon disulphide.


CHAPTER XIV.

GLUE OR COMPOSITION STAMPS.

STAMPS made from a mixture of glue, glycerine, and molasses or from similar mixtures are an excellent substitute for india rubber stamps. Properly made they possess all the flexibility that characterizes the rubber ones, while for fatty inks such as that used by printers and lithographers, which inks tend to destroy rubber stamps, they are much better. They are adopted by the United States government for making dating stamps for use in the Post Office Department ; by publishers of directories for printing advertisements on the edges of their publications, and in many other cases. Our description shall follow as closely as possible the process and methods used in the United States Post Office. They are there termed "composition blotters."

The composition of which they are made is printer's roller material. Nine and one-half pounds of fine quality glue are soaked in just enough soft water to cover it until it is thoroughly softened. It is then melted. In the Government Department a steam kettle is provided for the purpose. An ordinary glue pot will answer for smaller quantities.

When melted four and one-half pounds of best molasses and seven pounds of glycerine are added, and the whole is thoroughly mixed. The formula varies a little according to the prevailing temperature, less molasses being added when the weather is warm, and *vice versa*. Experience is here the best teacher. When well mixed it is poured out into tin pails whose inner walls or sides and bottom have been

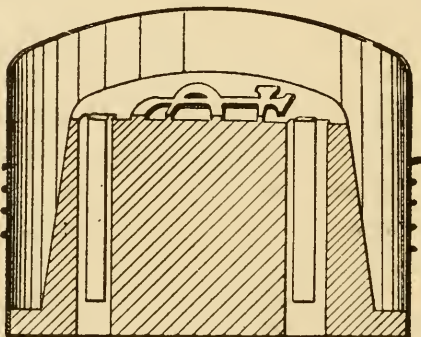


MODEL FOR COMPOSITION STAMP MOULD.

rubbed over with oil. It solidifies in cooling and becomes a clear brown jelly quite free from any stickiness or superficial moistness.

In use it is turned out of the pails to which, owing to the oiling, it does not adhere. It is cut off as wanted, melted by heat and cast in oiled moulds.

The latter are made of type metal to which one-third its weight of lead has been added. As model

for the mould or matrix a brass model of the stamp is employed. This represents a sort of oval based cut-off or truncated cone, about an inch high and a little over an inch long on its base. A flange extends outward from its base and a tube is provided to fit this flange. Its smaller end corresponds to the face of the stamp, and on it are engraved in full relief any permanent characters,

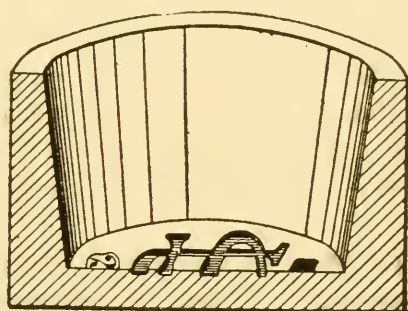

COMPOSITION STAMP MOULD.

circles or border lines, etc. Through its centre one or more apertures are made. Into these, changeable steel, iron or brass type may be introduced and set fast with plaster of paris.

To make the mould, the brass model with its movable type set as required is placed upon a flat table or plate, face upward, and surrounded by the tube, as shown in partial section in the cut, page 114. The tube is a strip of sheet iron, which is bent around the flange and is secured in place by a wire twisted around it. The melted alloy (type, metal and lead) is


poured into the space thus formed until it rises a quarter of an inch above the face of the model. In a few minutes it sets and is removed and allowed to cool. This gives a cup with the inscription and design depressed or in *intaglio* upon its inside base. This is shown in the cut, page 115, partly in section; it will of course be understood that the mould forms a complete cup.

To make the stamp the interior surface of the mould is oiled with a stiff brush. It is not material what oil is used. The composition melted by heat is then poured into the cup, and is allowed to solidify. Owing to the conical shape of the mould it is readily removed. The mould must be hot but not too much so.

In the Post Office stamps the date requires to be changed frequently. Some of the figures do duty for two or three days each month. Thus the figure 8 is in the designation of three days, the eighth, eighteenth, and twenty-eighth. There are three changes involved therefore in connection with this day numeral. When a stamp mould or matrix is cast the place of numerals that are to be changed is filled with a blank space in the part where the type would otherwise come. A number is stamped in this space when needed, by means of an ordinary steel number-punch.

When the number is to be changed the old character is scraped or cut out, leaving a small irregular hollow. A very small piece of soft lead, about one-

sixteenth of an inch on each side, is dropped into the hollow. With a flat faced punch it is flattened out, and on it the new number is impressed by a steel punch. This operation is repeated a great many times before the matrix is worn out.

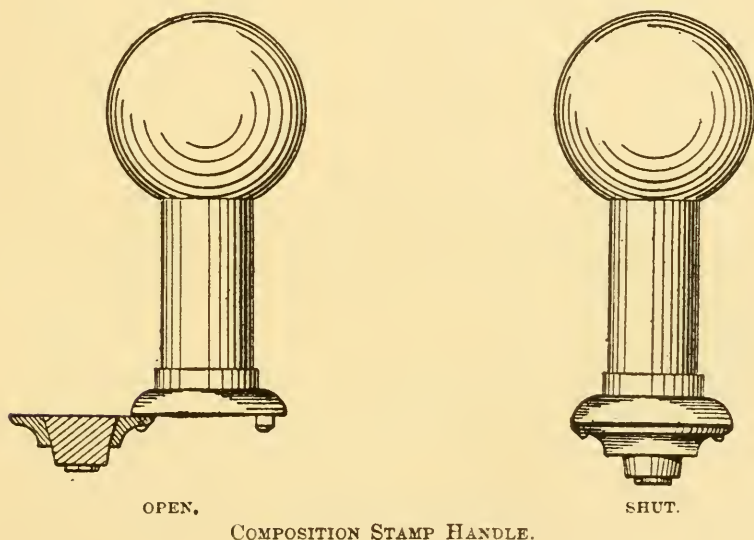

In the cut, page 115, one number is shown as stamped into the soft lead, and at the other end of the stamp is a blank space ready for a number.

The casting of a stamp is so extremely simple that no attempt is made to use movable type, as in permanent rubber dating stamps.

While it is obvious that these composition stamps could be attached directly to wooden handles, a spe-


cial style of handle, shown in the cuts, is employed by the Post Office. A wooden handle carries at its end a brass base, to which is pivotted a swinging piece that is perforated by a conical oval aperture a little larger than the small end of the stamp. The edges of this aperture are slightly rounded.

It is swung around as shown in the first figure, and the stamp, previously moistened on its sides, is forced in. If the stamp is properly made it is surprising how much force may be used to insert it. If the edges of the brass swinging piece are not rounded there is danger of the composition being cut. The stamp in its brass frame is then swung back over the brass base, where it is secured by a catch. The stamp is now ready for use, as shown in the second figure of the cut.

It is imperative that no aqueous or glycerine ink be employed for continuous work with such stamps. Common printers' ink is perfectly satisfactory, and the work may be nearly or quite as good as that executed by an india rubber stamp.

The Post Office manufactures a pad for use with printers' ink into whose manufacture the same composition enters. The ink retainer is a piece of fine felt, one-quarter to one-half an inch thick. This is placed in the bottom of a shallow steel mould, where it enters for half its depth into a recess that it accurately fits. The composition from old stamps, melted up, is then poured upon and around it, the mould being previously oiled. When it is full a

piece of strong manilla paper, of the area of the felt only, is placed upon the bottom of the glue pad on its centre, which as it lies in the mould is its uppermost part. The paper adheres strongly as the glue hardens. Eventually it is turned out of the mould, and a pad, shown in the cut, is produced. The dotted lines show the limits of the felt pad. The glue composition underlies, surrounds and extends outwards from the felt portion. It is found that the elasticity of the composition makes the pad

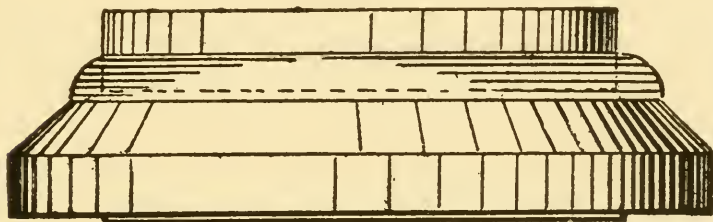

COMPOSITION INK PAD.

much pleasanter for rapid stamping.

The above description gives the clew to making any stamp of this description. The matrix may be of dental plaster, or of oxychloride of zinc cement. The mould may be built up of type of any kind.

The composition is so cheap that the stamp can be made quite thick. This gives it a high degree of elasticity and adaptability to uneven surfaces. It may be mounted by adherence upon a flat board or block, provided, if necessary, with handles. If the

board or block is placed upon the composition while it is still warm and liquid, as it solidifies the board and composition will adhere with great tenacity.

All moulds or surfaces to which it is desired that the melted composition shall not adhere must be oiled.

The moulds must not be cold or the composition will not enter the fine divisions. If on the other hand they are too hot the mixture will adhere. Experience will teach the right conditions for success.

Below are given other formulæ for roller composition. The formula already given in this chapter is that used by the United States Post Office Department.

I. "Old Home Receipt:" Glue 2 lbs., soaked over night, to New Orleans molasses 1 gallon. Not durable, but excellent while it lasts.

II. Glue $10\frac{1}{2}$ lbs., molasses $2\frac{1}{2}$ gal., Venice turpentine 2 oz., glycerine 12 oz.; mix as directed above.

CHAPTER XV.

RUBBER IN SURGERY AND DENTISTRY.

WHILE the preceding chapters of the present work are devoted almost exclusively to a description of the method of making rubber stamps and type, yet this is but one of the multitudinous uses to which rubber is adapted under modern manufacturing conditions. In almost every art and trade rubber plays an important part and each year and month the demand for this valuable natural product increases. The amount of rubber annually consumed is almost unbelievable and yet a large portion of the rubber used up or worn out is actually reclaimed. Quite recently an examination of the dust from streets and parks of cities, disclosed the fact that about 12 per cent of the dust was composed of rubber worn from the rubber tires of vehicles,—an amount well worth reclaiming and which would amply repay the trouble and cost of street cleaning.

Perhaps the most valuable and important use to which rubber is put, is the manufacture of

surgical and dental goods. Modern surgery would be practically impossible without rubber and the dentist could hardly succeed at all without the aid of this wonderful gum.

Rubber or gutta percha was apparently first used by the medical world in 1822 when a Mr. Montgomerie of Singapore found the natives using it for whips, and at once grasped its possibilities for use in making braces and similar surgical appliances, and in 1842 he recommended the use of rubber for splints, etc., to the medical board of Calcutta. In 1844, the Society of Arts of London awarded Mr. Montgomerie a gold medal in recognition of his useful discovery and the beneficial results from its use in surgery. After this time the use of rubber and gutta percha for surgical appliances and instruments rapidly increased and soon became universal.

India rubber has perhaps rendered its greatest service to modern medical practice in the form of drainage tubes. Upon the proper drainage of wounds depends to a great extent their healing. While many other substances have been used as drainage tubes, yet more drainage tubes of rubber are used than of all other substances combined. In the first place its elasticity renders it applicable to almost any shaped wound; it is not readily broken; it resists most chemicals; it is cheap

and is easily sterilized. As tourniquets, rubber bandages, ice-caps, water bottles, syringes, sheeting, aprons, gloves, instruments, handles, catheters, bougies, and in various other ways India rubber or gutta percha is widely and universally used in medicine and surgery.

A very valuable use to which rubber is also put in surgery is in the manufacture of artificial limbs. Many artificial limbs are composed entirely of rubber, while practically all modern artificial limbs have rubber in some form employed in their manufacture. Some of the best limbs made in America are wholly composed of rubber, with a small core of wood, while others use rubber only as buffers at the joints to take up or absorb the jar or concussion in the use of the artificial hands or feet. So excellently made and so well adapted to the purpose are rubber hands, that many wearers of these artificial members can use them to handle small articles and can write almost as well as with the hands provided by nature. Artificial rubber feet defy detection and can be used in riding bicycles, walking, running, dancing and other ways with practically the same security and ease as real feet.

The introduction of vulcanized rubber into dentistry marked the greatest epoch in its advancement and opened a new field for dental surgery.

While artificial teeth of ivory, bone, wood and metal were actually known and used by the old Egyptians yet the art of dental surgery practically died out until the middle of the 17th century. Even then dentistry was crude and primitive and it was not until the advent of rubber and the discovery of vulcanization that dentistry, as now known, came into existence.

Hard rubber as a material for plates for holding artificial teeth has no superior, and even gold, which is far more costly, is no more durable and far less comfortable. Rubber is exceedingly durable and will last for years without suffering injury or change from the secretions of the mouth or foods, and possesses the great advantage of being readily colored to match the real gums while undergoing vulcanization. Another most important point in favor of rubber plates for teeth is its cheapness; thousands of people who could not afford gold plates are rendered happy and able to eat their daily bread in comfort by the use of hard rubber plates for their teeth. Aside from its use in making artificial teeth, rubber is also used by dentists for dams and sheeting while gutta percha is often used in filling teeth.

It is estimated that over thirty-five tons of rubber are annually used in the manufacture of artificial teeth alone, and soft rubber has a still

wider field in surgery and medicine, so that the total consumption of the gum in these lines of work is enormous.

Practically all rubber articles used in surgery and dentistry are moulded or pressed into shape while the unvulcanized rubber is hot, and are then vulcanized,—much in the same manner as in the manufacture of rubber stamps already described. Plates for teeth are made in plaster moulds, which are in turn made from impressions of the roof of the mouth made by pressing a special form of moulding wax against the flesh. The wax used is readily softened in warm or hot water, and while still warm and plastic, is pressed firmly against the roof of the mouth and from the impression thus obtained a plaster matrix is cast in fine dental plaster. The position of the teeth on the other jaw is obtained by biting firmly into another strip of wax held in a specially designed metal holder. The plaster moulds being ready, the false teeth of porcelain are set in position, the raw rubber pressed in the mould, the whole clamped firmly together and placed in the vulcanizer until thoroughly “cured.”

The process is very simple and requires no more skill or technical knowledge than in making stamps or similar objects, but to facilitate matters, and render the operations more successful

and certain, forms, moulds, teeth and rubber come prepared in various forms, colors and sizes to suit all variations in the patients' mouths or teeth.

CHAPTER XVI.

RUBBER TIRES.

CONSTRUCTING AND REPAIRING RUBBER VEHICLE TIRES, RUBBER PREPARATIONS, CHEMICAL OR COLD VULCANIZING.

WIDE and important as are the uses of rubber in surgery and dentistry, yet of almost equal importance and of far greater volume and cash value is its use in the manufacture of rubber tires for modern vehicles. Automobiles, bicycles, motorcycles, etc., were made practical and possible through the use of rubber as tires for the wheels and the comfort, speed and life of all motor vehicles depend largely upon the quality of the rubber used for tires and the care taken in its manufacture.

Rubber tires may be broadly divided into two distinct classes; solid tires and pneumatic tires. In the former, the tire consists of a solid, or hollow, band or rim of rubber strengthened by strips of metal, fiber or wires placed within its mass and the whole cemented or vulcanized on the wheel (Fig. 1). Such tires answer very well for small

vehicles, as baby carriages, velocipedes and invalid chairs, and are also largely used on commercial vehicles, trucks, etc., as well as on many horse-

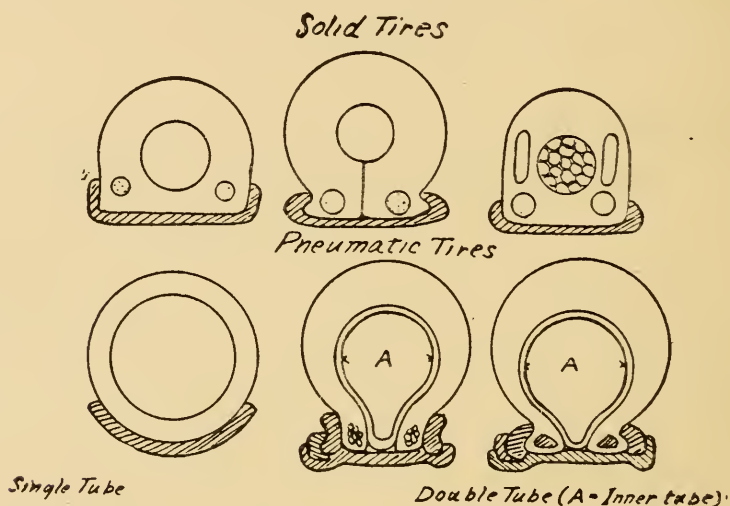


Fig. 1.—SECTIONS OF RUBBER TIRES OF VARIOUS TYPES.

drawn carriages, hacks, cabs and light wagons. The solid tires wear away rather rapidly, are heavy and cost a great deal if made of solid rubber of good quality, and do not possess the resiliency and cushion effect of the pneumatic tires. These consist of a hollow casing, or shoe, of rubber and fabric which is inflated by air and may be readily attached to or detached from the wheel itself. In the early days of rubber tires the pneumatic tires were made in the form known as "single

tube" and were merely an endless tube of rubber and fabric inflated with air. Such tires soon became leaky and were then useless, and consequently proved very expensive and unsatisfactory. The system of "double tube" or "inner tube" construction was then invented, and to-day practically all the pneumatic tires in use are of this character of construction.

The inner tube, or double tube tire, consists of a heavy casing of rubber and fabric made in semicircular or circular section, with the inner side open. Within the cavity of this casing, a thin rubber tube is placed, and when the whole is attached to the wheel of the vehicle the inner tube is inflated. By this method much longer life is insured than by the single tube system, for in case of wear or injury to either inner tube or the outer casing the tire may be removed and a new tube or a new casing substituted as required. Pneumatic tires were first made in Europe, and were first introduced into the United States by Mr. E. J. Willis of New York in 1889. Since that date the use of the pneumatic tire has spread, and hundreds of factories are now manufacturing these goods throughout the country, while the number annually used runs into millions,—in fact a single factory sold over one million tires during the year of 1911. As the rubber used in

these tires must be of the best grade, and free from reclaimed or "shoddy" stock, each tire made must be built from new rubber and it can therefore be readily seen what an enormous amount of rubber is annually consumed in this branch of the rubber industry alone. In the details of construction, each maker of tires has his own ideas and system, but in all the process is more

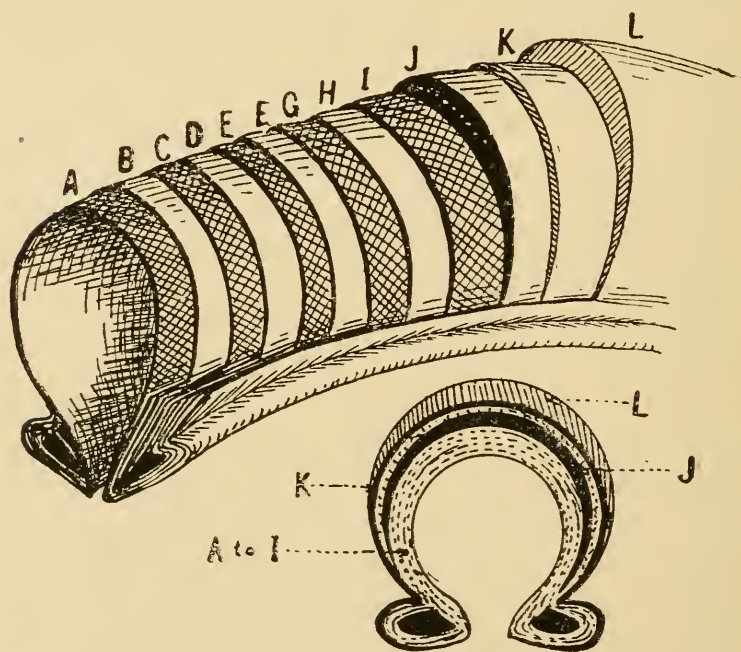


Fig. 2.—CONSTRUCTION OF PNEUMATIC TIRE.

or less similar. In Fig. 2 is illustrated a section and diagram of a well-made tire, showing how

it is built up of alternating layers of rubber and fabric. The inner layer *A* is 17½-ounce Sea Island cotton duck or fabric, cut on the bias and placed over a form or mould. This fabric is thoroughly impregnated with pure rubber and over it is moulded a layer of pure Para rubber, *B*; *C* is another layer of cotton duck, with the lap or seam started exactly opposite from the layer *A*; *D* is another layer of rubber, the same as *B*, and *E* another layer of duck, while *F*, *G*, *H*, and *I* are likewise alternating layers of duck and rubber. Each layer of duck has a tensile strength of 450 pounds or more, and each joint in the fabric is opposite that of the layer beneath with a long overlap. Over the last layer of duck a heavy strip of soft, pure rubber is placed, *J*, and is known as the "cushion and breaker strip." This serves as a soft cushion to absorb the jar and blows to which the tire is subjected, and also prevents the various layers of cotton and rubber from loosening. Within the soft rubber cushion a strip of loosely-woven cotton fabric of extra strength is placed, and this "breaker strip" serves to bind the cushion rubber together and prevent its tearing or separating while in use. Over the whole of the various layers and cushion the binder strip, *K*, is then placed. This is a layer of specially prepared rubber which forms the outer wall of

the tire on the sides, and which binds all the other parts of the tire together. Over the central part of the binder a heavy "tread" of selected tough rubber is placed, *M*, and upon the toughness, composition and quality of this tread depend in great measure the life and durability of the whole tire. When the tire is completely moulded, or built up, it is thoroughly vulcanized, and in this operation the rubber-impregnated cotton, the rubber between the fabric and the cushion, binder and tread are all thoroughly and firmly united and formed into a solid, uniform mass.

Good tires require a great deal of time and labor to construct, to say nothing of the cost of material, and the high prices asked for such tires is therefore not surprising or unreasonable. Of course, many cheap, poorly-constructed tires are made, but such goods wear badly, and when once injured, broken or worn are useless; whereas, a really good tire may be repaired and used over and over until completely worn out. Most reliable makers guarantee their tires for 5,000 miles and many tires are frequently used for from 12,000 to 20,000 miles.

The commonest accidents to tires are "blow-outs" and "punctures." Blow-outs are caused by faulty construction, poor inflation, rotting of fabric, overloading or excessive speed, and consist

of a hole or tear blown clear through the casing from the inner side. Blow-outs, if not too large, may be repaired by relining and vulcanizing. Punctures are small holes made by running over nails, sharp stones, glass, etc., and are readily repaired. The greatest enemy to tires is heat, and this is usually caused by excessive speed, owing to the constant friction of the various fibers and threads of the cotton fabric rubbing against one another. More or less heat is also generated by the friction of the tire upon the road itself, but this is seldom sufficient to cause damage.

The harder a tire is inflated the less chance there is of friction occurring in the tire itself, and for this reason every tire should be kept properly inflated, according to the directions furnished by the maker.

The business of repairing tires has now grown to enormous proportions, and large factories are engaged solely in making appliances and materials for this industry. The usual method of repairing a broken or punctured tube is to place a raw rubber patch over the hole, cement it in place and vulcanize both patch and cement. In the case of outer casings the work is far more difficult and complex, for the casing may require either a new tread or a new lining, according to the

damage to be repaired. In the case of a new tread, the parts are thoroughly cleansed, soft rubber composition spread over the place to be repaired, the mass held in position by a winding of tape or cloth and the whole vulcanized.

Where a new inner lining or fabric is required, the webbing, impregnated with rubber, is moulded in the inside of the casing and is then vulcanized. Vulcanizing for repair work is usually accomplished by steam heat, but numerous portable vulcanizing outfits for use with gasoline, alcohol, gas, kerosene or electricity are now made and for sale at most reasonable prices, and with one of these outfits any user of rubber tires can readily make his own repairs.

Great advances have been made in the lines of rubber cements, rubber compounds and curing or vulcanizing methods, since the advent of the rubber-tired vehicle. Rubber cements are now on sale which are so easily used and of such excellent quality that vulcanization is entirely unnecessary under ordinary conditions, and by patching the rubber article with a prepared patch and one of the various standard cements, the article repaired will be as good as new.

Other patches and materials are made which are coated with strong adhesive rubber preparations requiring no cement, while various com-

positions of rubber for filling holes, cuts, tears, etc., in rubber articles are widely used. Such a great number of these preparations are now on the market that it is hard to know what to use or what is good and what not, but practically any of the various preparations put up by reliable firms will prove satisfactory for the purpose for which they are designed.

Among the various preparations the following have all been tested thoroughly by the writer and have been found to fulfill all the claims of the manufacturers and can be recommended most highly. Cements for patching: "Fisk," "Diamond," "Goodrich," "Stickfast," "Willis." Cements for patching (to be used with "acid cure"): "Goodrich," "Half and Half," "C.O.T.," "Congo," "M & M," "Pluto," "Hazenoid." Vulcanizing preparations (acid cures): "M & M," "Vulcanoid," "C.O.T." Cement for vulcanized work: "Goodrich," "Hazen-Brown," "M & M." Prepared patches for use without cement: "Wonder-Worker," "Victor," "Continental." Filling composition for cuts in casings: "Phil-Kut," "Gum-Gum," "Plastic," "M & M," "Kneadit," "Rubber-Tread," "Nu-Tread." Portable vulcanizing outfits, steam: "Shaler," "National." Portable vulcanizing outfits, electric: "Shaler." Portable vulcanizing outfits, alcohol: "Shaler." Portable

vulcanizing outfits, gasoline: "Shaler," "Stitch in Time," "Imperial," "Pig." By merely following the plain directions furnished with each of these various compositions or vulcanizing outfits, anyone can make satisfactory repairs in either casings or tubes, and aside from saving the cost of having it done outside, the satisfaction of knowing just how your repairs are made and how thoroughly the work is done, is of great importance.

Many excellent tires are constantly ruined through neglect of small cuts, bruises, etc., and these should always be cleaned and filled with one of the various plastic fillers mentioned above. In using any preparation of rubber however the greatest care should be taken to do the work thoroughly and properly, for a small neglect in cleansing the material to be repaired or in other small matters will result in a poor and unreliable job which cannot be depended upon.

Within the past few years great improvements have been made in methods of vulcanizing or "curing" rubber, especially when in the form of small patches or other repair work. Not only have the small compact and portable vulcanizers been highly perfected but various chemical methods of curing have been invented and brought into general use. These cold, or chemical, methods

are commonly known as "acid cures" and consist of certain chemicals containing some form of sulphur which applied to the raw rubber acts in the same manner as heating with sulphur. The preparations vary considerably in their composition but usually consist principally of sulphur chloride, benzine, and carbon bisulphide. They are highly inflammable and explosive and great care should be taken not to use them near a flame or in the vicinity of a hot stove or similar object.

The preparation is brushed over the raw rubber, and through the action of the sulphur contained in the solution the rubber is quite thoroughly vulcanized. For small work this method is far easier and cheaper than by the heating process and many rubber stamps and similar articles are now vulcanized by one of the various chemical methods.

So enormous has the consumption of rubber become that the demand has far exceeded the supply and in the constant search for new rubber-producing plants, various trees, shrubs and vines have been found to furnish rubber or rubber-like gums or sap that are now used extensively as a substitute for rubber or as an adulterant of pure rubber. Among these may be mentioned the Balata rubber from a large forest hardwood

tree of the West Indies and tropical America; Guayule rubber from a Mexican shrub; Sapota rubber from a tropical fruit tree, and Chicle rubber from another common fruit tree of tropical America. Balata rubber is very good and is widely used and for many purposes compares favorably with true Para rubber. Guayule is also extensively used and is produced in large quantities from a plant until quite recently considered worthless. The milky juice of the Sapota tree furnishes the Sapota rubber and Chicle of commerce and the latter is of great value for use in manufacturing various confections, such as chewing gums, etc.

Rubber articles, when kept in a warm, dry place or in a very cold spot, often grow quite hard and inelastic; and while excessive hardening of rubber goods is usually a sign of inferior quality in the rubber, yet the highest grade goods are at times subject to this trouble. Most rubber articles may be readily softened by treatment with dilute ammonia,—about one part of ammonia to two parts of water. Before treating with this solution the articles should be thoroughly cleansed by scrubbing with a stiff brush and warm water. Place the cleansed articles in the ammonia and let them remain until the ammonia has evaporated, usually from one to two hours. After treatment with ammonia the goods should be rinsed with

a dilute solution of glycerine and water, thoroughly wiped and dried and stored in a cool spot away from the light.

Another method for softening hard or brittle rubber goods is to place them in a hot aqueous solution of tannic acid and tartar emetic. Next transfer them to a cold solution of tannic acid and calcium sulphate. Mix the two solutions and heat to boiling point and place the rubber goods in this hot solution. The treatment should be continued for from one to four days, according to the size and nature of the articles.

Old rubber stoppers that have become hard and useless may be revived by soaking in a 5 per cent soda lye solution for about ten days at from 85 deg. Fahr. to 104 deg. Fahr., replacing the lye from time to time. The stoppers should then be thoroughly washed and the softened outer surface scraped off with a dull knife until the firm, elastic portion is reached. The stoppers should then be rinsed with warm water and will be found quite soft and flexible. They may be readily trimmed with a sharp knife wet with cold water and soft soap.

For many purposes reclaimed rubber is widely used and answers as well as new, pure rubber. The scraps, old rubber, waste, etc., is first boiled in strong caustic soda or in sulphuric and hydro-

chloric acid until all cloth, paint, fillers, etc., are dissolved and separated and the rubber is then ground and pulverized between rollers and pressed into sheets.

Other processes include mixing the reclaimed rubber with mineral oil or benzol and steam under hydraulic pressure while an adulterated mixture or composition rubber is formed by adding the reclaimed rubber to hot linseed oil until dissolved, when coal tar or asphalt is added. When thoroughly combined the mass is heated to a much greater temperature and air is forced through the mass. The resulting compound, when cool, is very tough and flexible and is of great value for insulating electric wires, cables, etc.

For many years various attempts have been made to discover or invent a satisfactory artificial rubbers but although various compounds have been made which in a way answer as a substitute, yet none fulfills all the requirements. The so-called "Kerite" consists of a mixture of:

Cottonseed oil.....	14	parts
Linseed oil.....	14	"
Asphalt.....	8	"
Coal tar.....	8	"
Sulphur.....	10	"
Camphor.....	$\frac{1}{2}$	"

By combining a mixture of:

Cottonseed oil.....	27 parts
Coal tar.....	30 “
Earthy matter.....	5 “

with:

Rubber.....	20 parts
Litharge.....	5 “
Sulphur.....	1 “

a tough, rubber-like mass is formed which is widely used in place of pure rubber for stoppers, bumpers, etc.

Recently, also, various experiments have been made with compounds obtained from turpentine and coal tar, and excellent results obtained, but the process is long and complicated and the artificial rubber thus produced has proved more expensive than the genuine article. While these various substitutes have proved valuable for many purposes, yet no one has yet discovered anything that will take the place of Nature's product, and a vast fortune awaits the fortunate discoverer of a true artificial rubber that can be produced as cheaply or cheaper than the real article.

CHAPTER XVII.

THE HEKTOGRAPH.

FOR obtaining multiple copies of writing, the apparatus called the Hektograph or Papyrograph has been extensively adopted. In general terms it consists of a tray filled with a jelly like composition. Any imprint made upon the surface with aniline ink can be transferred to paper by simple pressure. The tray filled with composition is called the tablet. It is thus prepared.

The tray may be made of tin or even of paste-board or paper, and should be about one half an inch deep. It may be of any size, according to the work it is to do. The composition is made from the best gelatine and glycerine. One ounce by weight of gelatine is soaked over night in cold water, and in the morning the water is poured off, leaving the swelled gelatine. Six and one-half fluid ounces of glycerine are now heated to about 200 F. (93 C.) on a water bath preferably, and the gelatine is added thereto. The heating is continued for several hours. This operates to expel the water and to give a clear glycerine solution of gelatine.

The composition is then poured into the tray,

which must be perfectly level in order to obtain a surface nearly even with the edge. It is then covered so as to keep off the dust. The cover of course must not come in contact with the smooth surface. In six hours it will be ready for use.

The original copy that is to be reproduced is made upon ordinary paper in aniline ink. One formula for the ink reads as follows: Aniline violet or blue (2 R B or 3 B) 1 oz., hot water 7 fluid oz.; dissolve. After cooling add alcohol 1 fluid oz. and glycerine $\frac{1}{4}$ fluid oz., a few drops of ether and a drop of carbolic acid. Keep in a corked bottle. Other formulæ are given in chapter XVII.


The writing is executed with an ordinary steel pen. The lines should be rather heavy so as to show a greenish color by reflected light.

The surface of the pad is slightly moistened with a wet sponge and is allowed to become nearly dry. The paper is then laid upon it and smoothed down. This is best done by placing a second sheet over it and rubbing this with the hand. No air bubbles must remain between the copy and the tablet, and the paper must not be shifted.

It is allowed to remain for a minute or less and is then raised by one corner and stripped from the gelatine surface. It will have left the reversed copy of its inscription perfectly reproduced upon the tablet.

At once a piece of ordinary writing paper of the desired size and quality is laid upon the tablet,

smoothed down, and stripped off, when it will be found to have taken with it a complete copy of the inscription or writing. This is repeated over

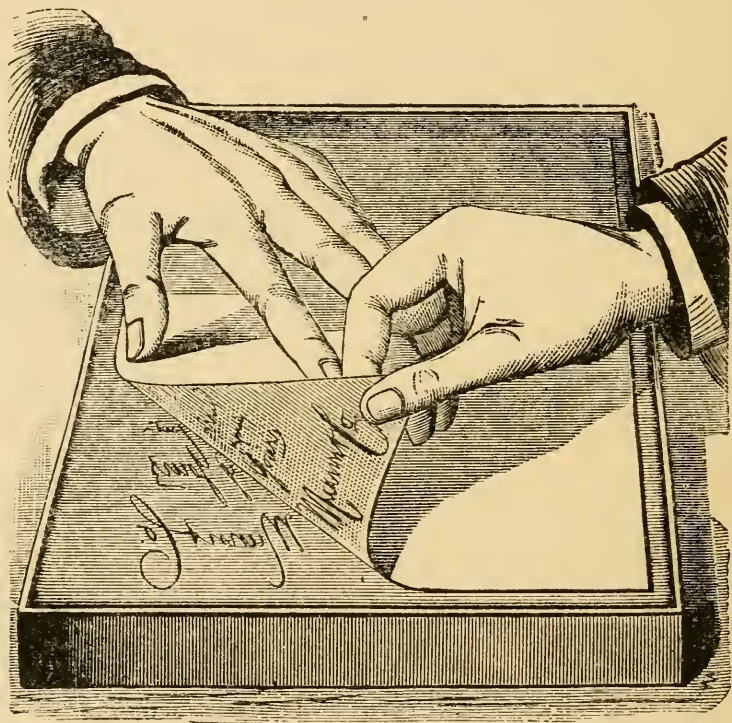

THE HEKTOGRAPH.

and over again with another sheet of paper, until the ink on the pad is exhausted. Fifty or more good copies can be thus obtained.

As soon as the work is completed the remains of the ink should be washed off with a moist sponge

and the tablet, after drying a little, will be ready for a second operation.

Some practice is required to ascertain the proper strength of the writing and degree of wetness of the surface. When the gelatine surface becomes impaired it can be remelted in a water bath if it is not too dark from absorption of ink.

French Ministry of Public Work Formula.—Glue 100 parts, glycerine 500 parts, finally powdered kaolin or barium sulphate 25 parts, water 375 parts. Use a little hydrochloric acid in the water for washing off the pad after use.

Hektograph Sheets.—Four parts of glue are soaked in five parts of water and three parts of ammonia until soft. It is then heated and there is added to it three parts of sugar and eight parts of glycerine. The mixture is applied to blotting paper. This is saturated with it, and successive coats added until a smooth surface is produced on one side. This is the side for reproduction. It is used like the regular tablet except that it is claimed that sponging off the writing is not necessary. Owing to the capillary action developed by the blotting paper it is supposed to be self-cleaning by standing.

CHAPTER XVIII.

CEMENTS.

BEFORE cementing vulcanized rubber the surface should be roughened or still better it may be seared with a red hot iron. For bicycle tyres this is especially to be recommended.

Cement for Cuts in Bicycle Tyres, Rubber Belts, etc.—Carbon bisulphide, 5 ounces; gutta-percha, 5 ounces; caoutchouc, 10 ounces; fish glue, $2\frac{1}{2}$ ounces. After it is applied and has dried the excess can be removed with a wet knife. Bad cuts should first be stitched up.

Bicycle Tyre Cement to fasten Tyres to Rims.—Equal parts of pitch and gutta-percha are melted together. Sometimes two parts of pitch are prescribed. This cement has extended application.

Cement for Paper Boats and for Mending Rubber Goods.—Fuse together equal parts of pitch and gutta-percha, and to this add about 2 parts of linseed oil containing 5 parts of litharge. Continue the heat until the ingredients are uniformly commingled. Apply warm.

Waterproof Cement.—Shellac, 4 oz; borax, 1 oz;

boil in a little water until dissolved, and concentrate by heat to a paste.

Another.—10 parts of carbon disulphide and one part of oil of turpentine are mixed, and as much gutta-percha is added as will readily dissolve.

Cement for Mending Hard Rubber.—Fuse together equal parts of gutta-percha and genuine asphaltum; apply hot to the joint, closing the latter immediately with pressure.

Glue to Fasten Leather, etc., to Metals.—1 part crushed nut galls digested 6 hours with 8 parts distilled water and strained. Glue is macerated in its own weight of water for 24 hours, and then dissolved. The warm infusion of nutgalls is spread on the leather; the glue solution upon the roughened surface of the warm metal; the moist leather is then pressed upon it and dried.

Marine Glue, Various Formulæ.—I. Dissolve 1 part of india rubber in 12 parts of benzole, and to the solution add 20 parts of powdered shellac, heating the mixture cautiously over a fire. There is great danger of conflagration. Apply with a brush.

II. Caoutchouc, 1 oz; genuine asphaltum, 2 oz; benzole or naptha, q. s. The caoutchouc is first dissolved (as described in chapter XII.), and the asphaltum is gradually added. The solution should have about the consistency of molasses.

Cement for Vulcanized India Rubber.—Stockholm pitch, 3 parts; American resin, 3 parts; unmixed india rubber, 6 parts; oil of turpentine, 12 parts.

Heat and mix very thoroughly. More oil of turpentine may be added as required.

Gutta-Percha Cement for Leather.—Soak gutta-percha in boiling water. Soften in benzole after cutting up for a day. Heat on a water bath until the greater part of the benzole is expelled. When cool it will solidify. Use by heating.

Cement for Rubber Shoes.—

(1) Chloroform.....	280 parts.
India rubber (masticated).....	10 “
(2) India rubber.....	10 “
Resin.....	4 “
Venice turpentine.....	2 “
Oil of turpentine.....	40 “

For first solution dissolve by mastication. For second, melt the finely divided gum with the resin, add the Venice turpentine and finally the oil of turpentine. Use heat if necessary. Mix both solutions finally. To apply, saturate a piece of linen with the cement and apply to the spot previously coated with the cement. As it dries apply a little more as required. A finishing varnish is given in the last chapter. Parkes' cold curing process may be applied as described in chapter XI.

Chatterton's Compound for uniting sheets of gutta-percha in cable cores and for general work with gutta-percha coated wires.—Stockholm tar, 1 part; resin, 1 part; gutta-percha, 2 parts.

Waterproofing for Wooden Battery Cells.—Resin, 4 parts; gutta-percha, 1 part; boiled oil, a little.

Another Formula.—Burgundy pitch, 150 parts; old gutta-percha in fine shreds, 25 parts; ground pumice stone, 75 parts. Melt the gutta-percha and mix with the pumice stone and then add the pitch, melting all together. Apply melted and smooth off with a hot iron.

Cement for Celluloid.—Shellac, 1 part is dissolved in spirits of camphor 1 part, with 3 to 4 parts strong alcohol. It is applied warm and the parts united must not be disturbed until the cement is hard.

CHAPTER XIX.

INKS.

RUBBER STAMP INK.

Aniline blue soluble, 1 B.....	3 parts.
Distilled water.....	10 “
Acetic acid.....	10 “
Alcohol.....	10 “
Glycerine.....	70 “

For other colors the following aniline colors may be substituted in proportions given:

Methyl violet, 3 B (violet).....	3 parts.
Diamond fuchsin I, (red).....	2 “
Methyl green yellowish.....	4 “
Vesuvius, B (brown).....	5 “
Nigrosin, W (blue black).....	4 “

For very bright red 3 parts of Eosin BBN. are used. In this case the acetic acid must be omitted. In all cases the colors should first be rubbed up with the water in a mortar, and the glycerine should be added gradually. These inks will answer for the hektograph.

Hektograph Ink.—Aniline color, 1 part; water, 7 parts; glycerine, 1 part. A little alcohol may be

used with advantage to dissolve the aniline color. It can be expelled by heating if it proves objectionable.

Aniline Ink Vehicle.—Prof. E. B. Shuttleworth, of Toronto, Ont., suggests the use of castor oil in place of vaseline and other vehicles for typewriter ink. The aniline colors may first be dissolved in alcohol, and the solution may be added to the oil. They may also be dissolved directly in the oil in which most of them are soluble.

Indelible Stamping Inks.—I. Asphaltum, 1 part; oil of turpentine, 4 parts; dissolve and temper with printer's ink. The ink may be omitted, and solid dry color added.

II. Sodium carbonate, 22 parts; glycerine, 85 parts; dissolve and rub up in a mortar with gum arabic, 20 parts. In a separate vessel dissolve silver nitrate, 11 parts; in officinal aqua ammonia, 20 parts. Mix the two solutions, and heat to the boiling point, 212° F. (100° C.). After it darkens, add Venice turpentine, 10 parts. After applying to the cloth, a hot iron should be applied, or it should be exposed to the sun.

III. Dr. W. Reissig's formula:

Boiled linseed oil varnish.....	16 parts.
Finest lamp black.....	6 “
Ferric chloride (sesquichloride of iron).....	2 to 5 “

Dilute a little for use with varnish. After this ink has been removed, no matter how completely it can be detected by dipping the paper into a solution of ammonium sulphide.

IV.

Aniline black in crystals.....	1 part.
Alcohol.....	30 “
Glycerine.....	30 “

Dissolve in the alcohol, and add the glycerine afterwards.

Show Card Ink.—

Pure asphaltum.....	16 parts.
Venice turpentine.....	18 “
Lamp-black.....	4 “
Oil of turpentine.....	64 “

Dissolve the asphaltum in the turpentine, and thoroughly mix.

Stencil Ink.—Shellac, 2 ounces; borax, 2 ounces; water, 25 ounces. Dissolve by heat if necessary, first the borax alone, and then adding the shellac. To the clear solution add gum arabic, 2 ounces. Color with lamp-black, with Venetian red, or with ultramarine, to suit the taste. Another formula gives shellac, 4 parts, borax, 1 part, and omits the gum arabic.

Copying Ink (for use without a press by simply pressing and rubbing with the hand), by Prof. Attfield, F.R.S.—Use ink of any kind of extra strength.

This in many cases can be made by evaporating common ink down to six tenths of its volume. Then mix with it two thirds of its volume of glycerine, so as to restore the original volume.

White Ink.—Barium sulphate, or “flake white” is mixed with gum arabic water of sufficient thickness to keep it suspended, at least while in use. Starch or magnesium carbonate or other white powder may be used instead of the barium sulphate. The powder must be of impalpable fineness.

White Ink on Blue Paper.—A solution of oxalic acid in water is used for this purpose. It may be applied with a rubber stamp or with a common pen. A quill or gold pen is the best as a steel pen is soon corroded. The ink bleaches the paper wherever it touches it, giving white lines on a blue ground.

Gold Ink.—Gold leaf with honey is ground up in a mortar, best an agate mortar, or on a painters’ slab with a muller. It is added to water, and thoroughly mixed and at once poured off from the first sediments, filtered out, and washed. This is done to secure the impalpably finely ground gold only. The resulting powder is mixed with a suitable vehicle, such as white varnish or gum arabic water.

Silver Ink.—As above, using silver leaf.

Zinc Label Ink.—I. Verdigris, 1 part; ammonium chloride, 1 part; lamp-black, $\frac{1}{2}$ part; water, 10 parts.

II. Platinum bichloride, 1 part; gum arabic, 1 part; water, 10 parts.

Diamond Ink for Etching Glass.—This consists essentially of hydrofluoric acid mixed with barium sulphate to the consistency of cream. The barium sulphate is quite inoperative except as giving a body to prevent the ink from spreading. It is applied with a rubber stamp or pen and allowed to remain for ten minutes or until dry. On removal of the white powder, the design will be found etched on the glass. The following is a formula for it.

Saturate hydrofluoric acid with ammonia, add an equal volume of hydrofluoric acid and thicken with barium sulphate in fine powder.

CHAPTER XX.

MISCELLANEOUS.

To Soften and Restore India Rubber Hose, etc.—I. Dip in petroleum and hang up for a couple of days. Repeat process if necessary.

II. The above process is applicable to all articles, but is specified for hose. It is stated that old rubber that has become hard may be softened by exposure first to vapor of carbon disulphide, followed by exposure to the vapor of kerosene. The latter vapor is found to be a general preservative for india rubber.

III. Dr. Pol recommends immersion in a solution of water of ammonia, 1 part, and water 2 parts, from a few minutes to an hour.

To Prevent Decay of Rubber Tubing.—The decay of rubber tubing has been attributed to the formation of sulphuric acid from the sulphur mixed with it. M. Ballard has suggested washing with water or weak alkaline solution five or six times in a year.

Joints between India Rubber Tubing and Metal.—Where tubing is temporarily slipped over metal gas pipes and similar connections, as in the chemical laboratory, it is well to apply glycerine to the metal.

It acts as a lubricant in slipping the tubing on, and assists in its withdrawal.

Preserving Vulcanite.—Wash occasionally with a solution of ammonia and rub with a rag slightly moistened with kerosene oil.

Effect of Copper upon Rubber.—In a paper read before the recent meeting of the British Association, Sir William Thomson stated that metallic copper, when heated to the temperature of boiling water, in contact with the rubber, exerted a destructive effect upon it. With a view to finding whether this was due to the copper *per se*, or to its power of conducting heat more rapidly to the rubber, he laid a sheet of rubber on a plate of glass, and on it placed four clean disks, one of copper, one of platinum, one of zinc and one of silver. After a few days in an incubator at 150° F., the rubber under the copper had become quite hard, that under the platinum had become slightly affected and hardened at different parts, while the rubber under the silver and under the zinc was quite hard and elastic. This would warrant the inference that the metallic copper had exerted a great oxidizing effect on the rubber, the platinum had exerted a slight effect, while the zinc and silver respectively had no injurious influence on it. The rubber thus hardened by the copper contained, strange enough, no appreciable trace of copper; the copper, therefore, presumably sets up the oxidizing action in the rubber without itself permeating it.

Gas Tight Tubings.—Fletcher has invented a gas tight rubber tubing in which a layer of tinfoil is interposed between two concentric rubber tubes, all vulcanized together.

Printing Colors upon India Rubber.—It may sometimes be desirable to have a surface of vulcanized india rubber so prepared that it will take colors such as are used for calico printing. This end is simply attained by sprinkling the article with farina before vulcanizing. A small quantity attaches itself and forms an excellent base for color printing.

Gutta-Percha for Coating Glass.—For focusing glass in photography and for similar purposes where ground glass or a translucent material is required, a solution of gutta-percha in chloroform is highly recommended. This is flowed over or painted on the glass and is allowed to evaporate afterwards.

Burned Rubber.—A very soft pure gum sold for artists' use is improperly termed burned rubber. It is used in crayon work for removing and lightening marks by dabbing it against the paper, cleaning the rubber from time to time. It is so soft that it picks up and removes crayon marks without the necessity of friction. Thus the rubbing out or more properly erasing operation can be localized and crayon tints can be lightened in tone without impairment or "smutting." It is a very elegant accessory to the artists' paraphernalia. To make it, pure virgin gum, preferably the best Para, is cut into pieces and soaked for some hours in benzole. A long soaking is ad-

visible. The pieces are then removed from the benzole and are ground in a mortar until perfectly homogeneous. The mass is gathered up with a spatula and is pressed into little tin boxes. If desired it may be dried upon a water bath. This is not necessary as, if the box is left open, it will rapidly season itself. It should be very soft, should tend to adhere to the fingers, yet should leave them easily, and should strip cleanly from the box. A very little turpentine makes it more adhesive. It may even be softened in turpentine alone. This gives a gum that seasons more slowly and is in some respects preferable to the benzole made preparation. It is sold at a high price by the dealers, as the demand for it is limited.

Rubber Sponge.—This is also an artist's rubber. It is also used for cleaning kid gloves. It is made by incorporating with the masticated or washed and sheeted gum any material or materials that will give off vapor in the curing process. Damp sawdust and crystallized alum are used as giving off vapor of water or steam, or ammonium carbonate as giving off vapors of ammonia carbonic acid gas and steam. The mixed gum may be cured in moulds, which it will fill by its expansion.

Shellac Varnish for India Rubber.—This is made by soaking powdered shellac in ten times its weight of strong aqua ammonia (26° B.). At first no change beyond a coloring of the solution is perceptible. After many days standing the bottle, which

should have a glass stopper, being tightly closed, the shellac disappears, having entered into solution. It may be a month before complete solution. This forms an excellent varnish for india rubber shoes and similar articles. It may be applied with a rag. It is also a good application for leather in some cases and doubtless many other uses could be made of it. It would act well as a vehicle for a dark pigment such as lamp-black. It will rejuvenate a pair of india rubbers very nicely. The ammonia exercises also a good influence on the rubber. It has been recommended as a cement for attaching rubber to metal, but its adhesive powers are not always satisfactory.

Simple Substitute for Stamps.—A very simple though rough and imperfect substitute may be made by gluing with common carpenter's glue pieces of thick string upon a piece of wood, the string being given the form of the desired letters. Care must be taken to avoid saturating and stiffening the string with the glue.

India Rubber Substitutes.—One of these under the name of vulcanized oil is thus described by Bolas:

“Vulcanized oil is, perhaps, of more interest, and many oils, such as linseed and others resembling it, may be vulcanized by being heated for some time to 150° Centigrade with twelve to twenty per cent. of sulphur. The product obtained is soft, and somewhat resembles very bad india rubber. By increas-

ing the proportion of sulphur very much indeed, say to four times the weight of the oil, and vulcanizing at a higher temperature, a hard substance, resembling inferior vulcanite, is obtained.

“Soft and hard vulcanized oil have been introduced into commerce at various times and under many names; but these materials never seem to have made very much headway.”

Another method of treating the oil consists in mixing it with a solution of chloride of sulphur in carbon disulphide or in naphtha. On standing, the volatile solvents escape, leaving a thick mass, which is the substitute.

In combinations of aluminum with the fatty acids, forming aluminum soaps, and of these, aluminum palmitate especially, a substitute for india rubber has been sought but without success.

Metallized Caoutchouc.—Unvulcanized gum is mixed with powdered lead, zinc, or antimony. The mixed india rubber is then cured as in the regular process.

EMERY WHEELS AND WHETSTONES.

Bolas thus describes their manufacture:

“When ordinary vulcanized rubber is heated to 230° Centigrade, (446° F.) or until it melts, a permanently viscous product is obtained, and this substance, if mixed with emery and sulphur to a kind of paste, forms a material out of which the so-called agglomerated emery wheels or grinders may be

formed, the mixed materials being next hardened or cured by the application of a steam heat. Emery wheels and hones made on this principle were introduced by Deplanque about twenty-three years ago.

“Thirty-five parts of old vulcanized caoutchouc having been placed in a kind of still, heat is applied to melt it, the operation being assisted by the gradual addition of about ten parts of heavy coal oil; but this latter is afterward distilled off. The softened caoutchouc is then incorporated with 500 parts of emery of the required degree of fineness and nine parts of sulphur. These materials having been thoroughly mixed, the hones or wheels are manufactured, and afterward cured or baked at a heat of 140° Centigrade, (284° F.) during a period of about eight hours. Grinding wheels, made in the above manner, can be worked at a speed of 2,000 revolutions per minute, and are extremely useful for the working of hardened steel or other obdurate materials.”

Etching on Metals and Glass.—India rubber stamps can be used for placing the ground upon knife blades and similar articles which are to be etched. The parts untouched by the stamp are attacked by the acid. In the case of glass, diamond ink (page 133) can be put on with a stamp. The acids for metal etching might be thickened with barium sulphate also and applied in the same way. In these cases the inscription of the stamp would be etched. Where ground is put on, whether on glass or

metal, the design for the stamp will be protected.

Etching Ground for Metals.—Equal parts of asphalt, Burgundy pitch and beeswax melted together and mixed thoroughly. It may be softened with mutton suet. Beeswax may be used, dissolved in ether or simply melted. Yellow soap is sufficient for ordinary work.

Etching Solutions for Biting in.—For steel and iron, *a.* sulphate of copper and common salt in solution. *b.* sulphate of copper, sulphate of alumina, and common salt, of each two drachms; acetic acid, $1\frac{1}{2}$ oz. *c.* sulphuric acid, diluted with five volumes of water with a little sulphate of copper. For other metals, except gold and platinum, nitric acid diluted with five volumes of water.

Etching Ground for Glass.—Melted beeswax is generally recommended. It can be removed with spirits of turpentine after as much as possible has been scraped off.

Etching Glass.—Glass may be conveniently etched by exposing it to the vapor of hydrofluoric acid. A shallow leaden tray, as large as the glass, is required. A quantity of fluorspar is placed in it and is moistened with concentrated sulphuric acid. The glass is placed face downward over the tray. It is supported over the mixture by resting on the edges of the tray or by any simple method, and the whole is covered with a towel. In half an hour or more the etching will be completed. The vapors

must not be allowed to escape into any room containing glass or metal articles as they corrode everything. Great care should be taken also not to let the mixture touch the hand, as painful ulcers are the result.

India Rubber Shoe Blacking.—Raw india rubber is given as a constituent of several shoe blackings. Formulæ are given as below for paste and liquid blackings.

I. Paste blacking: bone-black, 20 parts; molasses, 15 parts; vinegar, 4 parts; sulphuric acid, 4 parts; caoutchouc oil (as given below), 3 parts.

II. Liquid blacking: bone-black, 60 parts; molasses, 45 parts; gum arabic dissolved in water, 1 part; vinegar, 50 parts; sulphuric acid, 24 parts; caoutchouc oil, 9 parts.

Caoutchouc oil is made by dissolving or digesting virgin rubber 55 parts in linseed oil 450 parts.

Waterproof Composition for Boots.—One ounce of virgin rubber cut into pieces is digested in enough oil of turpentine to form a stiff paste. In applying heat take great care lest the contents of the vessel become ignited. When homogeneous, which condition may be brought about by rubbing in a porcelain mortar, as described in chapter XII., it is mixed with 5–6 ounces of boiled linseed oil. This gives an ointment almost of the consistency of butter.

INDEX.

	PAGE		PAGE
ABSORPTION of sulphur process.....	100	Cord, rubber.....	92
Absorption of water by india rubber.....	31	Corks.....	90-91
Africa, ways of collecting rubber sap.....	15-17	Curing.....	44
Analysis of sap of india rubber tree.....	27	Curing, how to judge of completion of.....	70
Apparatus for stamp making.....	61-63	Curing in liquid bath.....	97
Artificial limbs.....	123	Curing in sulphur bath.....	99
Artificial teeth.....	124	Curing, temperature of....	58
Artists' burned rubber. 157-158		Central America, ways of collecting rubber.	18-19
BALLOONS.....	95	Chair leg tips.....	90
Bands, india rubber.....	41	Chalk plates.....	83-84
Bicycle tire cement.....	146	Chlorine as vulcanizer....	100
Blacking, india rubber.....	163	Chloroform as a solvent....	105
Borax and water solution of rubber.....	106-107	Coagulation of sap by a plant.....	19
Brazil, ways of collecting sap.....	20-21	Coagulation of sap by alum.	22-23
Bromine as vulcanizer.....	100	Coagulation of sap by fire 21-22	
Bulbs, how made.....	92-93	Coagulation of sap by salt..	18
Burned rubber, artists'. 157-158		Cohesion of pure rubber....	25
CALENDERING.....	43	DATING stamps, composition.....	116-117
Cane tips.....	90	Didot's polytype for matrices.....	82-83
Caoutchin.....	30	Distillation products of india rubber.....	29-30
Caoutchouc.....	30	Dolls, how made.....	92-93
Caoutchouc (see India rubber).		EBONITE.....	108-111
Cements.....	146-149	Ebonite, polishing....	110-111
Clamp for vulcanizing press	52	Emery wheels and whetstones.....	160-161
Cleaning rubber goods.....	138	Emulsion of caoutchouc....	10
Cohesion of rubber, its importance to the manufacturer.....	26-27	Etching.....	140-163
Cold curing.....	100-102	FINS, removal of.....	86
Composition for stamps and its moulding.....	113-120	Flask for type moulding....	74
Composition inking pad. 118-119		Flong matrices.....	80-82
Composition stamp handle.	117-118	Flong paste.....	80
		Fluid for mixing with plaster for matrices.....	55
		GAS heated steam vulcanizer	53

- Glue, marine..... 126
 Glue stamps..... 113-120
 Glycerine bath for curing.. 97
 Goodyear, Charles..... 13-14
 Gutta-percha..... 111-112
 Gutta-percha, moulding.
 111-112
 Gutta-percha, vulcanizing. 111
- HEKTOGRAPH, composition.
 142, 143, 144
 Hektograph, how made and
 used..... 142-144
 Hektograph ink (also see
 inks)..... 142
 Hektograph sheets..... 145
- INDIA RUBBER, absorption
 of water by..... 31
 India rubber, African.... 15-17
 India rubber, artists'
 burned..... 157-158
 India rubber, availability
 for small articles..... 85
 India rubber, cohesion of
 unvulcanized..... 25
 India rubber, composition
 of..... 27
 India rubber, discovery of,
 etc..... 11-13
 India rubber, effects of tem-
 perature on..... 28-29
 India rubber, elasticity of 28-29
 India rubber sap, its coagu-
 lation..... 11
 India rubber sheet, how
 made..... 40
 India rubbers, original way
 of making..... 10
 India rubber stamp making
 without apparatus..... 71
 India rubber stamps, home-
 made mould..... 48-50
 India rubber stamps, start-
 ing point..... 47
- India rubber, trees produc-
 ing..... 9
 India rubber tree sap,
 analysis of..... 27
 India rubber type..... 73
 India rubber, vulcanized,
 general properties of... 32-33
 India rubber, where col-
 lected..... 11
 India rubber, nelastic, how
 made..... 31
 India rubber, its mastication..... 38-40
 India rubber, manufacture
 of..... 35-46
 India rubber, necessity of
 drying..... 38
 India rubber, points to be
 followed in moulding
 small articles..... 85
 India rubber, preliminary
 operations in manufac-
 turing..... 35-36
 India rubber, preserving,
 etc..... 155-156
 India rubber, properties of. 28
 India rubber sap..... 9-11
 India rubber stamp vulcan-
 izing..... 58-60
 Inelastic state of india rub-
 ber..... 31
 Inks, special for stamping,
 etc..... 150-154
 Inner tube..... 129
 Iodine and haloid vulcan-
 izers..... 100
 Isoprene..... 30
 "KERITE"..... 140
- LEAVES, skeletonized as
 models..... 92
 Liquid bath curing..... 97
- MACHINE for cutting sheet
 and threads..... 40

- Machine for making mixed sheet..... 42-43
Machine for masticating. 38-40
Machine for washing and sheeting..... 37
Mackintosh..... 13
Mackintoshes, how made. 45-46
Marshmallow not for mixture with plaster..... 57
Masticated rubber, its easy solution..... 103-104
Masticating in mortar with benzole..... 103-104
Mastication of rubber... 38-40
Materials mixed with india rubber..... 43
Matrices, various kinds of, for stamps..... 80-84
Matrix for stamp-making. 54-55
Matrix making by casting. 56-57
Matrix press..... 56
Matrix. process of making, for stamps..... 54-55
Mats..... 91-92
Metals, welding and cohesion of..... 25-26
Miscellaneous..... 155-163
Mixed sheet..... 42-44
Mixed sheet for stamps.. 47-48
Mould, home-made for stamps..... 48-50
Moulding and curing stamps..... 58-60
Moulds for composition stamps, temperature of.. 120
Moulds, material for..... 86
- NAPHTHA and volatile solvents, danger of..... 107
Naphtha, solvent..... 104-105
Nicaragua, ways of collecting sap..... 19-20
Nitric acid as vulcanizer... 100
- OIL for composition stamp moulds..... 119-120
Oil for mould face..... 55
Oils, fixed, bad effect on solutions..... 105
Oxychloride of zinc cement for matrices..... 57
- PAPIER mache matrices.. 80-82
Paraffin and rubber... 105-106
Parkes' process..... 100-102
Payen's solvent..... 105
Pencil tips, moulds for... 89-90
Phenyle sulphide as softener of vulcanized rubber.... 106
Plaster dental for matrices. 54
Press for moulding stamps, etc..... 51-52
Press, gas-heated..... 52-53
Press, home-made..... 49
Press, matrix making.... 55-56
Products, general division of..... 35-36
- REPAIRING tires..... 133
Rods, stirring for laboratory..... 95
Rubber in surgery and dentistry..... 121
Rubber, origin of name.... 12
Rubber (see India rubber).
Rubber tires..... 127
- SALT bath for curing..... 98
Sap of india rubber tree, analysis of..... 27
Sheeting and washing... 37-38
Sheet rubber, how made... 40
Sheet rubber, its joining... 94
Shellac for strengthening matrix..... 55
Shoes, blacking for..... 163
Shoes, india rubber, cement for..... 148
Siphonia, origin of name.. 11

- Solution, different views of 31-32
 Solution, difficulties of.... 103
 Solvents for rubber.... 104-105
 Spring chase for matrices... 56
 Springs for stamp moulds.. 51
 Springs on moulding press. 51
 Sponge india rubber..... 158
 Stamp making..... 47
 Stamps, rubber, substitute for..... 159
 Stamps (see India rubber, Composition and general titles).
 Strauss' method of coagulating sap..... 22-23
 Suction discs, regular mould for..... 88-89
 Suction discs, simple mould for..... 87-88
 Sulphides, alkaline as vulcanizers..... 100
 Sulphur, absorption process..... 100
 Sulphur bath for mixing and curing..... 98-100
 Sulphur chloride process. 100-102
 Sulphur, how mixed with gum..... 43
 Sulphur, its escape from vulcanized rubber.... 33-34
 Sunlight excluded from washed sheet rubber..... 38
 Syringes made by Indians.. 11

 TEST for curing with knife. 48
 Thread, rubber, cut..... 41
 Thread, rubber moulded... 92
 Tire construction..... 130-132
 Tires, rubber..... 127
 Tissues, coated, how made. 45-46
 Tubes, connecting glass.... 96
 Tube, seamless..... 92
 Turpentine, a solvent for vulcanized rubber..... 106
 Turpentine compared with caoutchoucine..... 30
 Turpentine, viscid nature of solution..... 104-105
 Type, india rubber..... 73
 Type moulding flask..... 74
 Type and stamps from vulcanized rubber..... 77
 Type, cutting apart..... 75
 Type, points in moulding.. 75
 Type, quads, and spaces for stamp models..... 71-72
 Type, steel moulds for.... 76


 UNITED States composition stamps..... 113-120

 VARNISH shellac for india rubber..... 158-159
 Vulcanite..... 108-111
 Vulcanization, its two steps. 42
 Vulcanization, steps in process..... 47-48
 Vulcanized rubber stamps and type..... 77
 Vulcanizer..... 52-53
 Vulcanizer, chamber..... 63
 Vulcanizer, fish kettle as a. 69-70
 Vulcanizer, flower pot... 68-70
 Vulcanizing and moulding stamps..... 58-60

 WASHING and sheeting.. 37-38
 Water absorbed by india rubber..... 31
 Waterproof composition for shoes..... 163
 Waterproofing for battery cells..... 148-149

 ZINC chloride..... 57

CATALOGUE OF STANDARD PRACTICAL AND SCIENTIFIC BOOKS

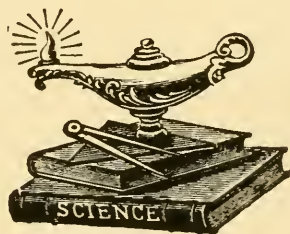


PUBLISHED AND FOR SALE BY

The Norman W. Henley Publishing Co.

132 Nassau St., New York, U. S. A.

INDEX OF SUBJECTS

Brazing and Soldering.....	3
Cams.....	11
Charts.....	3
Chemistry.....	4
Civil Engineering.....	4
Coke.....	4
Compressed Air.....	4
Concrete.....	5
Dictionaries.....	5
Dies—Metal Work.....	6
Drawing—Sketching Paper.....	6
Electricity.....	7
Enameling.....	9
Factory Management, etc.....	9
Fuel.....	10
Gas Engines and Gas.....	10
Gearing and Cams.....	11
Hydraulics.....	11
Ice and Refrigeration.....	11
Inventions—Patents.....	12
Lathe Practice.....	12
Liquid Air.....	12
Locomotive Engineering.....	12
Machine Shop Practice.....	14
Manual Training.....	17
Marine Engineering.....	17
Metal Work—Dies.....	6
Mining.....	17
Miscellaneous.....	18
Patents and Inventions.....	12
Pattern Making.....	18
Perfumery.....	18
Plumbing.....	19
Receipt Book.....	24
Refrigeration and Ice.....	11
Rubber.....	19
Saws.....	20
Screw Cutting.....	20
Sheet Metal Work.....	20
Soldering.....	3
Steam Engineering.....	20
Steam Heating and Ventilation.....	22
Steam Pipes.....	22
Steel.....	22
Watch Making.....	23
Wireless Telephones.....	23

 Any of these books will be sent prepaid to any part of the world, on receipt of price.

REMIT by Draft, Postal Money Order, Express Money Order
or by Registered Mail.

GOOD, USEFUL BOOKS

BRAZING AND SOLDERING

BRAZING AND SOLDERING. By JAMES F. HOBART. The only book that shows you just how to handle any job of brazing or soldering that comes along; tells you what mixture to use, how to make a furnace if you need one. Full of kinks. 4th edition. **25 cents**

CHARTS

BATTLESHIP CHART. An engraving which shows the details of a battleship as if the sides were of glass and you could see all the interior. The finest piece of work that has ever been done. So accurate that it is used at Annapolis for instruction purposes. Shows all details and gives correct name of every part. 28 x 42 inches—plate paper. **50 cents**

BOX CAR CHART. A chart showing the anatomy of a box car, having every part of the car numbered and its proper name given in a reference list. **20 cents**

GONDOLA CAR CHART. A chart showing the anatomy of a gondola car, having every part of the car numbered and its proper reference name given in a reference list. **20 cents**

PASSENGER CAR CHART. A chart showing the anatomy of a passenger car, having every part of the car numbered and its proper name given in a reference list. **20 cents**

TRACTIVE POWER CHART. A chart whereby you can find the tractive power or drawbar pull of any locomotive, without making a figure. Shows what cylinders are equal, how driving wheels and steam pressure affect the power. What sized engine you need to exert a given drawbar pull or anything you desire in this line. **50 cents**

WESTINGHOUSE AIR-BRAKE CHARTS. Chart I.—Shows (in colors) the most modern Westinghouse High Speed and Signal Equipment used on Passenger Engines, Passenger Engine Tenders, and Passenger Cars. Chart II.—Shows (in colors) the Standard Westinghouse Equipment for Freight and Switch Engines, Freight and Switch Engine Tenders, and Freight Cars. Price for the set. **50 cents**

CHEMISTRY

HENLEY'S TWENTIETH CENTURY BOOK OF RECEIPTS, FORMULAS AND PROCESSES. Edited by GARDNER D. HISCOX. The most valuable Techno-chemical Receipt Book published, including over 10,000 selected scientific chemical, technological, and practical receipts and processes. See page 24 for full description of this book. **\$3.00**

CIVIL ENGINEERING

HENLEY'S ENCYCLOPEDIA OF PRACTICAL ENGINEERING AND ALLIED TRADES. Edited by JOSEPH G. HORNER, A.M.I., M.E. This set of five volumes contains about 2,500 pages with thousands of illustrations, including diagrammatic and sectional drawings with full explanatory details. It covers the entire practice of Civil and Mechanical Engineering. It tells you all you want to know about engineering and tells it so simply, so clearly, so concisely that one cannot help but understand. **\$6.00** per volume or **\$25.00** for complete set of five volumes.

COKE

COKE—MODERN COKING PRACTICE; INCLUDING THE ANALYSIS OF MATERIALS AND PRODUCTS.

By T. H. BYROM, Fellow of the Institute of Chemistry, Fellow of The Chemical Society, etc., and J. E. CHRISTOPHER, Member of the Society of Chemical Industry, etc. A handbook for those engaged in Coke manufacture and the recovery of By-products. Fully illustrated with folding plates.

The subject of Coke Manufacture is of rapidly increasing interest and significance, embracing as it does the recovery of valuable by-products in which scientific control is of the first importance. It has been the aim of the authors, in preparing this book, to produce one which shall be of use and benefit to those who are associated with, or interested in, the modern developments of the industry.

Contents: Chap. I. Introductory. Chap. II. General Classification of Fuels. Chap. III. Coal Washing. Chap. IV. The Sampling and Valuation of Coal, Coke, etc. Chap. V. The Calorific Power of Coal and Coke. Chap. VI. Coke Ovens. Chap. VII. Coke Ovens, continued. Chap. VIII. Coke Ovens, continued. Chap. IX. Charging and Discharging of Coke Ovens. Chap. X. Cooling and Condensing Plant. Chap. XI. Gas Exhausters. Chap. XII. Composition and Analysis of Ammoniacal Liquor. Chap. XIII. Working up of Ammoniacal Liquor. Chap. XIV. Treatment of Waste Gases from Sulphate Plants. Chap. XV. Valuation of Ammonium Sulphate. Chap. XVI. Direct Recovery of Ammonia from Coke Oven Gases. Chap. XVII. Surplus Gas from Coke Oven. Useful Tables. Very fully illustrated. **\$3.50 net**

COMPRESSED AIR

COMPRESSED AIR IN ALL ITS APPLICATIONS. By GARDNER D. HISCOX. This is the most complete book on the subject of Air that has ever been issued, and its thirty-five chapters include about every phase of the subject one can think of. It may be called an encyclopedia of compressed air. It is written by an expert, who, in its 665 pages, has dealt with the subject in a comprehensive manner, no phase of it being omitted. Over 500 illustrations, 5th Edition, revised and enlarged. Cloth bound; **\$5.00**, Half morocco, **\$6.50**

CONCRETE

ORNAMENTAL CONCRETE WITHOUT MOLDS. By A. A. HOUGHTON. The process for making ornamental concrete without molds, has long been held as a secret and now, for the first time, this process is given to the public. The book reveals the secret and is the only book published which explains a simple, practical method whereby the concrete worker is enabled, by employing wood and metal templates of different designs, to mold or model in concrete any Cornice, Archivolt, Column, Pedestal, Base Cap, Urn or Pier in a monolithic form—right upon the job. These may be molded in units or blocks, and then built up to suit the specifications demanded. This work is fully illustrated, with detailed engravings. **\$2.00**

POPULAR HAND BOOK FOR CEMENT AND CONCRETE USERS. By MYRON H. LEWIS, C.E. This is a concise treatise of the principles and methods employed in the manufacture and use of cement in all classes of modern works. The author has brought together in this work, all the salient matter of interest to the user of concrete and its many diversified products. The matter is presented in logical and systematic order, clearly written, fully illustrated and free from involved mathematics. Everything of value to the concrete user is given. Among the chapters contained in the book are: I. Historical Development of the Uses of Cement and Concrete. II. Glossary of Terms employed in Cement and Concrete work. III. Kinds of Cement employed in Construction. IV. Limes, Ordinary and Hydraulic. V. Lime Plasters. VI. Natural Cements. VII. Portland Cements. VIII. Inspection and Testing. IX. Adulteration; or Foreign Substances in Cement. X. Sand, Gravel and Broken Stone. XI. Mortar. XII. Grout. XIII. Concrete (Plain). XIV. Concrete (Reinforced). XV. Methods and Kinds of Reinforcements. XVI. Forms for Plain and Reinforced Concrete. XVII. Concrete Blocks. XVIII. Artificial Stone. XIX. Concrete Tiles. XX. Concrete Pipes and Conduits. XXI. Concrete Piles. XXII. Concrete Buildings. XXIII. Concrete in Water Works. XXIV. Concrete in Sewer Works. XXV. Concrete in Highway Construction. XXVI. Concrete Retaining Walls. XXVII. Concrete Arches and Abutments. XXVIII. Concrete in Subway and Tunnels. XXIX. Concrete in Bridge Work. XXX. Concrete in Docks and Wharves. XXXI. Concrete Construction under Water. XXXII. Concrete on the Farm. XXXIII. Concrete Chimneys. XXXIV. Concrete for Ornamentation. XXXV. Concrete Mausoleums and Miscellaneous Uses. XXXVI. Inspection for Concrete Work. XXXVII. Waterproofing Concrete Work. XXXVIII. Coloring and Painting Concrete Work. XXXIX. Method of Finishing Concrete Surfaces. XL. Specifications and Estimates for Concrete Work. **\$2.50**

DICTIONARIES

STANDARD ELECTRICAL DICTIONARY. By T. O'CONOR SLOANE. An indispensable work to all interested in electrical science. Suitable alike for the student and professional. A practical hand-book of reference containing definitions of about 5,000 distinct words, terms and phrases. The definitions are terse and concise and include every term used in electrical science. Recently issued. An entirely new edition. Should be in the possession of all who desire to keep abreast with the progress of this branch of science. Complete concise and convenient. 682 pages—393 illustrations. **\$3.50**

DIES—METAL WORK

DIES, THEIR CONSTRUCTION AND USE FOR THE MODERN WORKING OF SHEET METALS. By J. V. WOODWORTH. A new book by a practical man, for those who wish to know the latest practice in the working of sheet metals. It shows how dies are designed, made and used, and those who are engaged in this line of work can secure many valuable suggestions. **\$3.00.**

PUNCHES, DIES AND TOOLS FOR MANUFACTURING IN PRESSES. By J. V. WOODWORTH. An encyclopedia of die-making, punch-making, die-sinking, sheet-metal working, and making of special tools, subpresses, devices and mechanical combinations for punching, cutting, bending, forming, piercing, drawing, compressing, and assembling sheet-metal parts and also articles of other materials in machine tools. This is a distinct work from the author's book entitled "Dies; Their Construction and Use." 500 pages, 700 engravings. **\$4.00.**

DRAWING—SKETCHING PAPER

LINEAR PERSPECTIVE SELF-TAUGHT. By HERMAN T. C. KRAUS. This work gives the theory and practice of linear perspective, as used in architectural, engineering, and mechanical drawings. Persons taking up the study of the subject by themselves, without the aid of a teacher, will be able by the use of the instruction given to readily grasp the subject, and by reasonable practice become good perspective draftsmen. The arrangement of the book is good; the plate is on the left-hand, while the descriptive text follows on the opposite page, so as to be readily referred to. The drawings are on sufficiently large scale to show the work clearly and are plainly figured. The whole work makes a very complete course on perspective drawing, and will be found of great value to architects, civil and mechanical engineers, patent attorneys, art designers, engravers, and draftsmen. **\$2.50.**

PRACTICAL PERSPECTIVE. By RICHARDS and COLVIN. Shows just how to make all kinds of mechanical drawings in the only practical perspective isometric. Makes everything plain so that any mechanic can understand a sketch or drawing in this way. Saves time in the drawing room and mistakes in the shops. Contains practical examples of various classes of work. **50 cents**

SELF-TAUGHT MECHANICAL DRAWING AND ELEMENTARY MACHINE DESIGN. By F. L. SYLVESTER, M.E., Draftsman, with additions by Erik Oberg, associate editor of "Machinery." A practical elementary treatise on Mechanical Drawing and Machine Design, comprising the first principles of geometric and mechanical drawing, workshop mathematics, mechanics, strength of materials and the calculation and design of machine details, compiled for the use of practical mechanics and young draftsmen. **\$2.00.**

A NEW SKETCHING PAPER. A new specially ruled paper to enable you to make sketches or drawings in isometric perspective without any figuring or fussing. It is being used for shop details as well as for assembly drawings, as it makes one sketch do the work of three, and no workman can help seeing just what is wanted. Pads of 40 sheets 6 x 9 inches, **25 cents.** Pads of 40 sheets, 9 x 12 inches, **50 cents.**

ELECTRICITY

ARITHMETIC OF ELECTRICITY. By Prof. T. O'CONOR SLOANE. A practical treatise on electrical calculations of all kinds reduced to a series of rules, all of the simplest forms, and involving only ordinary arithmetic; each rule illustrated by one or more practical problems, with detailed solution of each one. This book is classed among the most useful works published on the science of electricity covering as it does the mathematics of electricity in a manner that will attract the attention of those who are not familiar with algebraical formulas. 160 pages. **\$1.00.**

COMMUTATOR CONSTRUCTION. By WM. BAXTER, JR. The business end of any dynamo or motor of the direct-current type is the commutator. This book goes into the designing, building, and maintenance of commutators, shows how to locate troubles and how to remedy them; everyone who fusses with dynamos needs this. **25 cents**

DYNAMO BUILDING FOR AMATEURS, OR HOW TO CONSTRUCT A FIFTY WATT DYNAMO. By ARTHUR J. WEED, Member of N. Y. Electrical Society. This book is a practical treatise showing in detail the construction of a small dynamo or motor, the entire machine work of which can be done on a small foot lathe.

Dimensioned working drawings are given for each piece of machine work and each operation is clearly described.

This machine when used as a dynamo has an output of fifty watts; when used as a motor it will drive a small drill press or lathe. It can be used to drive a sewing machine on any and all ordinary work.

The book is illustrated with more than sixty original engravings showing the actual construction of the different parts. Paper. **Paper 50 cents Cloth \$1.00**

ELECTRIC FURNACES AND THEIR INDUSTRIAL APPLICATIONS. By J. WRIGHT. This is a book which will prove of interest to many classes of people; the manufacturer who desires to know what product can be manufactured successfully in the electric furnace, the chemist who wishes to post himself on the electro-chemistry, and the student of science who merely looks into the subject from curiosity. 288 pages. **\$3.00**

ELECTRIC LIGHTING AND HEATING POCKET BOOK. By SYDNEY F. WALKER. This book puts in convenient form useful information regarding the apparatus which is likely to be attached to the mains of an electrical company. Tables of units and equivalents are included and useful electrical laws and formulas are stated. 438 pages, 300 engravings. **\$3.00**

ELECTRIC TOY MAKING, DYNAMO BUILDING, AND ELECTRIC MOTOR CONSTRUCTION. This work treats of the making at home of electrical toys, electrical apparatus, motors, dynamos, and instruments in general, and is designed to bring within the reach of young and old the manufacture of genuine and useful electrical appliances. 185 pages. Fully illustrated. **\$1.00**

ELECTRIC WIRING, DIAGRAMS AND SWITCH-BOARDS. By NEWTON HARRISON. This is the only complete work issued showing and telling you what you should know about direct and alternating current wiring. It is a ready reference. The work is free from advanced technicalities and mathematics. Arithmetic being used throughout. It is in every respect a handy, well-written, instructive, comprehensive volume on wiring for the wireman, foreman, contractor or electrician. 272 pages, 105 illustrations. **\$1.50**

ELECTRICIAN'S HANDY BOOK. By PROF. T. O'CONOR SLOANE. This work is intended for the practical electrician, who has to make things go. The entire field of Electricity is covered within its pages. It contains no useless theory; everything is to the point. It teaches you just what you should know about electricity. It is the standard work published on the subject. Forty-one chapters, 610 engravings, handsomely bound in red leather with titles and edges in gold. **\$3.50**

ELECTRICITY IN FACTORIES AND WORKSHOPS, ITS COST AND CONVENIENCE. By ARTHUR P. HASLAM. A practical book for power producers and power users showing what a convenience the electric motor, in its various forms, has become to the modern manufacturer. It also deals with the conditions which determine the cost of electric driving, and compares this with other methods of producing and utilizing power. 312 pages. Very fully illustrated. **\$2.50**

ELECTRICITY SIMPLIFIED. By PROF. T. O'CONOR SLOANE. The object of "Electricity Simplified" is to make the subject as plain as possible and to show what the modern conception of electricity is; to show how two plates of different metals immersed in acid can send a message around the globe; to explain how a bundle of copper wire rotated by a steam engine can be the agent in lighting our streets, to tell what the volt, ohm and ampere are, and what high and low tension mean; and to answer the questions that perpetually arise in the mind in this age of electricity. 172 pages. Illustrated. **\$1.00**

HOW TO BECOME A SUCCESSFUL ELECTRICIAN. By PROF. T. O'CONOR SLOANE. An interesting book from cover to cover. Telling in simplest language the surest and easiest way to become a successful electrician. The studies to be followed, methods of work, field of operation and the requirements of the successful electrician are pointed out and fully explained. 202 pages. Illustrated. **\$1.00**

MANAGEMENT OF DYNAMOS. By LUMMIS-PATERSON. A handbook of theory and practice. This work is arranged in three parts. The first part covers the elementary theory of the dynamo. The second part, the construction and action of the different classes of dynamos in common use are described; while the third part relates to such matters as affect the practical management and working of dynamos and motors. 292 pages, 117 illustrations. **\$1.50**

STANDARD ELECTRICAL DICTIONARY. By Prof. T. O'CONOR SLOANE. A practical handbook of reference containing definitions of about 5,000 distinct words, terms and phrases. The definitions are terse and concise and include every term used in electrical science. 682 pages, 393 illustrations. **\$3.00**

SWITCHBOARDS. By WILLIAM BAXTER, JR. This book appeals to every engineer and electrician who wants to know the practical side of things. All sorts and conditions of dynamos, connections and circuits are shown by diagram and illustrate just how the switchboard should be connected. Includes direct and alternating current boards, also those for arc lighting, incandescent, and power circuits. Special treatment on high voltage boards for power transmission. 190 pages. Illustrated. **\$1.50**

TELEPHONE CONSTRUCTION, INSTALLATION, WIRING, OPERATION AND MAINTENANCE. By W. H. RADCLIFFE and H. C. CUSHING. This book gives the principles of construction and operation of both the Bell and Independent instruments; approved methods of installing and wiring them; the means of protecting them from lightning and abnormal currents; their connection together for operation as series or bridging stations; and rules for their inspection and maintenance. Line wiring and the wiring and operation of special telephone systems are also treated. 180 pages, 125 illustrations. **\$1.00**

WIRING A HOUSE. By HERBERT PRATT. Shows a house already built; tells just how to start about wiring it. Where to begin; what wire to use; how to run it according to insurance rules, in fact just the information you need. Directions apply equally to a shop. Fourth edition. **25 cents**

WIRELESS TELEPHONES AND HOW THEY WORK. By JAMES ERSKINE-MURRAY. This work is free from elaborate details and aims at giving a clear survey of the way in which Wireless Telephones work. It is intended for amateur workers and for those whose knowledge of Electricity is slight. Chapters contained: How We Hear—Historical—The Conversion of Sound into Electric Waves—Wireless Transmission—The Production of Alternating Currents of High Frequency—How the Electric Waves are Radiated and Received—The Receiving Instruments—Detectors—Achievements and Expectations—Glossary of Technical Work. Cloth. **\$1.00**

ENAMELING

HENLEY'S TWENTIETH CENTURY RECEIPT BOOK. Edited by GARDNER D. HISCOX. A work of 10,000 practical receipts, including enameling receipts for hollow ware, for metals, for signs, for china and porcelain, for wood, etc. Thorough and practical. See page 24 for full description of this book. **\$3.00**

FACTORY MANAGEMENT, ETC.

MODERN MACHINE SHOP CONSTRUCTION, EQUIPMENT AND MANAGEMENT. By O. E. PERRIGO, M.E. A work designed for the practical and every-day use of the Architect who designs, the Manufacturers who build, the Engineers who plan and equip, the Superintendents who organize and direct, and for the information of every stockholder, director, officer, accountant, clerk, superintendent, foreman, and workman of the modern machine shop and manufacturing plant of Industrial America. **\$5.00**

FUEL

COMBUSTION OF COAL AND THE PREVENTION OF SMOKE. By WM. M. BARR. To be a success a fireman must be "Light on Coal." He must keep his fire in good condition, and prevent, as far as possible, the smoke nuisance. To do this, he should know how coal burns, how smoke is formed and the proper burning of fuel to obtain the best results. He can learn this, and more too, from Barr's "Combustion of Coal." It is an absolute authority on all questions relating to the Firing of a Locomotive. Nearly 350 pages, fully illustrated. **\$1.00**

SMOKE PREVENTION AND FUEL ECONOMY. By BOOTH and KERSHAW. As the title indicates, this book of 197 pages and 75 illustrations deals with the problem of complete combustion, which it treats from the chemical and mechanical standpoints, besides pointing out the economical and humanitarian aspects of the question. **\$2.50**

GAS ENGINES AND GAS

CHEMISTRY OF GAS MANUFACTURE. By H. M. ROYLES. A practical treatise for the use of gas engineers, gas managers and students. Including among its contents—Preparations of Standard Solutions, Coal, Furnaces, Testing and Regulation. Products of Carbonization. Analysis of Crude Coal Gas. Analysis of Lime. Ammonia. Analysis of Oxide of Iron. Naphthalene. Analysis of Fire-Bricks and Fire-Clay. Weldom and Spent Oxide. Photometry and Gas Testing. Carburetted Water Gas. Metropolis Gas. Miscellaneous Extracts. Useful Tables. **\$4.50**

GAS ENGINE CONSTRUCTION, Or How to Build a Half-Horse-power Gas Engine. By PARSELL and WEED. A practical treatise describing the theory and principles of the action of gas engines of various types, and the design and construction of a half-horse-power gas engine, with illustrations of the work in actual progress, together with dimensioned working drawings giving clearly the sizes of the various details. 300 pages. **\$2.50**

GAS, GASOLINE, AND OIL ENGINES. By GARDNER D. HISCOX. Just issued, 18th revised and enlarged edition. Every user of a gas engine needs this book. Simple, instructive, and right up-to-date. The only complete work on the subject. Tells all about the running and management of gas, gasoline and oil engines as designed and manufactured in the United States. Explosive motors for stationary, marine and vehicle power are fully treated, together with illustrations of their parts and tabulated sizes, also their care and running are included. Electric Ignition by Induction Coil and Jump Sparks are fully explained and illustrated, including valuable information on the testing for economy and power and the erection of power plants.

The special information on PRODUCER and SUCTION GASES included cannot fail to prove of value to all interested in the generation of producer gas and its utilization in gas engines.

The rules and regulations of the Board of Fire Underwriters in regard to the installation and management of Gasoline Motors is given in full, suggesting the safe installation of explosive motor power. A list of United States Patents issued on Gas, Gasoline and Oil Engines and their adjuncts from 1875 to date is included. 484 pages. 410 engravings. **\$2.50 net**

MODERN GAS ENGINES AND PRODUCER GAS PLANTS. By R. E. MATHOT, M.E. A practical treatise of 320 pages, fully illustrated by 175 detailed illustrations, setting forth the principles of gas engines and producer design, the selection and installation of an engine, conditions of perfect operation, producer-gas engines and their possibilities, the care of gas engines and producer-gas plants, with a chapter on volatile hydrocarbon and oil engines. This book has been endorsed by Dugal Clerk as a most useful work for all interested in Gas Engine installation and Producer Gas. **\$2.50**

GEARING AND CAMS

BEVEL GEAR TABLES. By D. AG. ENGSTROM. No one who has to do with bevel gears in any way should be without this book. The designer and draftsman will find it a great convenience, while to the machinist who turns up the blanks or cuts the teeth, it is invaluable, as all needed dimensions are given and no fancy figuring need be done. **\$1.00**

CHANGE GEAR DEVICES. By OSCAR E. PERRIGO. A book for every designer, draftsman and mechanic who is interested in feed changes for any kind of machines. This shows what has been done and how. Gives plans, patents and all information that you need. Saves hunting through patent records and reinventing old ideas. A standard work of reference. **\$1.00**

DRAFTING OF CAMS. By LOUIS ROUILLION. The laying out of cams is a serious problem unless you know how to go at it right. This puts you on the right road for practically any kind of cam you are likely to run up against. **25 cents**

HYDRAULICS

HYDRAULIC ENGINEERING. By GARDNER D. HISCOX. A treatise on the properties, power, and resources of water for all purposes. Including the measurement of streams; the flow of water in pipes or conduits; the horse-power of falling water; turbine and impact water-wheels; wave-motors, centrifugal, reciprocating, and air-lift pumps. With 300 figures and diagrams and 36 practical tables. 320 pages. **\$4.00**

ICE AND REFRIGERATION

POCKET BOOK OF REFRIGERATION AND ICE MAKING. By A. J. WALLIS-TAYLOR. This is one of the latest and most comprehensive reference books published on the subject of refrigeration and cold storage. It explains the properties and refrigerating effect of the different fluids in use, the management of refrigerating machinery and the construction and insulation of cold rooms with their required pipe surface for different degrees of cold; freezing mixtures and non-freezing brines, temperatures of cold rooms for all kinds of provisions, cold storage charges for all classes of goods, ice making and storage of ice, data and memoranda for constant reference by refrigerating engineers, with nearly one hundred tables containing valuable references to every fact and condition required in the installation and operation of a refrigerating plant. **\$1.50**

INVENTIONS—PATENTS

INVENTOR'S MANUAL, HOW TO MAKE A PATENT PAY. This is a book designed as a guide to inventors in perfecting their inventions, taking out their patents, and disposing of them. It is not in any sense a Patent Solicitor's Circular, nor a Patent Broker's Advertisement. No advertisements of any description appear in the work. It is a book containing a quarter of a century's experience of a successful inventor, together with notes based upon the experience of many other inventors. **\$1.00**

LATHE PRACTICE

MODERN AMERICAN LATHE PRACTICE. By OSCAR E. PERRIGO. An up-to-date book on American Lathe Work, describing and illustrating the very latest practice in lathe and boring-mill operations, as well as the construction of and latest developments in the manufacture of these important classes of machine tools. 300 pages, fully illustrated. **\$2.50**

PRACTICAL METAL TURNING. By JOSEPH G. HORNER. A work of 404 pages, fully illustrated, covering in a comprehensive manner the modern practice of machining metal parts in the lathe, including the regular engine lathe, its essential design, its uses, its tools, its attachments, and the manner of holding the work and performing the operations. The modernized engine lathe, its methods, tools, and great range of accurate work. The Turret Lathe, its tools, accessories and methods of performing its functions. Chapters on special work, grinding, tool holders, speeds, feeds, modern tool steels, etc., etc. **\$3.50**

TURNING AND BORING TAPERS. By FRED H. COLVIN. There are two ways to turn tapers; the right way and one other. This treatise has to do with the right way; it tells you how to start the work properly, how to set the lathe, what tools to use and how to use them, and forty and one other little things that you should know. Fourth edition. **25 cents**

LIQUID AIR

LIQUID AIR AND THE LIQUEFACTION OF GASES. By T. O'CONOR SLOANE. Theory, history, biography, practical applications, manufacture. 365 pages. Illustrated. **\$2.00**

LOCOMOTIVE ENGINEERING

AIR-BRAKE CATECHISM. By ROBERT H. BLACKALL. This book is a standard text book. It covers the Westinghouse Air-Brake Equipment, including the No. 5 and the No. 6 E T Locomotive Brake Equipment; the K (Quick-Service) Triple Valve for Freight Service; and the Cross-Compound Pump. The operation of all parts of the apparatus is explained in detail, and a practical way of finding their peculiarities and defects, with a proper remedy, is given. It contains 2,000 questions with their answers, which will enable any railroad man to pass any examination on the subject of Air Brakes. Endorsed and used by air-brake instructors and examiners on nearly every railroad in the United States. 23d Edition. 380 pages, fully illustrated with folding plates and diagrams. **\$2.00**

AMERICAN COMPOUND LOCOMOTIVES. By FRED H. COLVIN. The most complete book on compounds published. Shows all types, including the balanced compound. Makes everything clear by many illustrations, and shows valve setting, breakdowns and repairs. 142 pages. **\$1.00**

APPLICATION OF HIGHLY SUPERHEATED STEAM TO LOCOMOTIVES. By ROBERT GARBE. A practical book. Contains special chapters on Generation of Highly Superheated Steam; Superheated Steam and the Two-Cylinder Simple Engine; Compounding and Superheating; Designs of Locomotive Superheaters; Constructive Details of Locomotives using Highly Superheated Steam; Experimental and Working Results. Illustrated with folding plates and tables. **\$2.50**

COMBUSTION OF COAL AND THE PREVENTION OF SMOKE. By WM. M. BARR. To be a success a fireman must be "Light on Coal." He must keep his fire in good condition, and prevent as far as possible, the smoke nuisance. To do this, he should know how coal burns, how smoke is formed and the proper burning of fuel to obtain the best results. He can learn this, and more too, from Barr's "Combination of Coal." It is an absolute authority on all questions relating to the Firing of a Locomotive. Nearly 350 pages, fully illustrated. **\$1.00**

LINK MOTIONS, VALVES AND VALVE SETTING. By FRED H. COLVIN, Associate Editor of "American Machinist." A handy book that clears up the mysteries of valve setting. Shows the different valve gears in use, how they work, and why. Piston and slide valves of different types are illustrated and explained. A book that every railroad man in the motive-power department ought to have. Fully illustrated. **50 cents.**

LOCOMOTIVE BOILER CONSTRUCTION. By FRANK A. KLEINHANS. The only book showing how locomotive boilers are built in modern shops. Shows all types of boilers used; gives details of construction; practical facts, such as life of riveting punches and dies, work done per day, allowance for bending and flanging sheets and other data that means dollars to any railroad man. 421 pages, 334 illustrations. Six folding plates. **\$3.00**

LOCOMOTIVE BREAKDOWNS AND THEIR REMEDIES. By GEO. L. FOWLER. Revised by Wm. W. Wood, Air-Brake Instructor. Just issued 1910 Revised pocket edition. It is out of the question to try and tell you about every subject that is covered in this pocket edition of Locomotive Breakdowns. Just imagine all the common troubles that an engineer may expect to happen some time, and then add all of the unexpected ones, troubles that could occur, but that you had never thought about, and you will find that they are all treated with the very best methods of repair. Walschaert Locomotive Valve Gear Troubles, Electric Headlight Troubles, as well as Questions and Answers on the Air Brake are all included. 294 pages. Fully illustrated. **\$1.00**

LOCOMOTIVE CATECHISM. By ROBERT GRIMSHAW. 27th revised and enlarged edition. This may well be called an encyclopedia of the locomotive. Contains over 4,000 examination questions with their answers, including among them those asked at the First, Second and Third year's Examinations. 825 pages, 437 illustrations and 3 folding plates. **\$2.50**

NEW YORK AIR-BRAKE CATECHISM. By ROBERT H. BLACKALL. This is a complete treatise on the New York Air-Brake and Air-Signalling Apparatus, giving a detailed description of all the parts, their operation, troubles, and the methods of locating and remedying the same. 200 pages, fully illustrated. **\$1.00**

POCKET-RAILROAD DICTIONARY AND VADE MECUM. By FRED H. COLVIN, Associate Editor "American Machinist." Different from any book you ever saw. Gives clear and concise information on just the points you are interested in. It's really a pocket dictionary, fully illustrated, and so arranged that you can find just what you want in a second without an index. Whether you are interested in Axles or Acetylene; Compounds or Counter Balancing; Rails or Reducing Valves; Tires or Turntables, you'll find them in this little book. It's very complete. Flexible cloth cover, 200 pages. **\$1.00**

TRAIN RULES AND DESPATCHING. By H. A. DALBY. Contains the standard code for both single and double track and explains how trains are handled under all conditions. Gives all signals in colors, is illustrated wherever necessary, and the most complete book in print on this important subject. Bound in fine seal flexible leather. 221 pages. **\$1.50**

WALSCHAERT LOCOMOTIVE VALVE GEAR. By WM. W. WOOD. If you would thoroughly understand the Walschaert Valve Gear, you should possess a copy of this book. The author divides the subject into four divisions, as follows: I. Analysis of the gear. II. Designing and erecting of the gear. III. Advantages of the gear. IV. Questions and answers relating to the Walschaert Valve Gear. This book is specially valuable to those preparing for promotion. Nearly 200 pages. **\$1.50**

WESTINGHOUSE E T AIR-BRAKE INSTRUCTION POCKET BOOK CATECHISM. By WM. W. WOOD, Air-Brake Instructor. A practical work containing examination questions and answers on the E T Equipment. Covering what the E T Brake is. How it should be operated. What to do when defective. Not a question can be asked of the engineman up for promotion on either the No. 5 or the No. 6 E T equipment that is not asked and answered in the book. If you want to thoroughly understand the E T equipment get a copy of this book. It covers every detail. Makes Air-Brake troubles and examinations easy. Fully illustrated with colored plates, showing various pressures. **\$2.00**

MACHINE SHOP PRACTICE

AMERICAN TOOL MAKING AND INTERCHANGEABLE MANUFACTURING. By J. V. WOODWORTH. A practical treatise on the designing, constructing, use, and installation of tools, jigs, fixtures, devices, special appliances, sheet-metal working processes, automatic mechanisms, and labor-saving contrivances; together with their use in the lathe milling machine, turret lathe, screw machine, boring mill, power press, drill, subpress, drop hammer, etc., for the working of metals, the production of interchangeable machine parts, and the manufacture of repetition articles of metal. 560 pages, 600 illustrations. **\$4.00**

HENLEY'S ENCYCLOPEDIA OF PRACTICAL ENGINEERING AND ALLIED TRADES. Edited by JOSEPH G. HORNER. A.M.I.Mech.I. This work covers the entire practice of Civil and Mechanical Engineering. The best known experts in all branches of engineering have contributed to these volumes. The Cyclopedia is admirably well adapted to the needs of the beginner and the self-taught practical man, as well as the mechanical engineer, designer, draftsman, shop superintendent, foreman and machinist.

It is a modern treatise in five volumes. Handsomely bound in Half Morocco, each volume containing nearly 500 pages, with thousands of illustrations, including diagrammatic and sectional drawings with full explanatory details. \$25.00 for the complete set of five volumes. \$6.00 per volume, when ordered singly.

MACHINE SHOP ARITHMETIC. By COLVIN-CHENEY. Most popular book for shop men. Shows how all shop problems are worked out and "why." Includes change gears for cutting any threads; drills, taps, sink and force fits; metric system of measurements and threads. Used by all classes of mechanics and for instruction of Y. M. C. A. and other schools. Fifth edition. 131 pages. **50 cents**

MECHANICAL MOVEMENTS, POWERS, AND DEVICES. By GARDNER D. HISCOX. This is a collection of 1390 engravings of different mechanical motions and appliances, accompanied by appropriate text, making it a book of great value to the inventor, the draftsman, and to all readers with mechanical tastes. The book is divided into eighteen sections or chapters in which the subject matter is classified under the following heads: Mechanical Powers, Transmission of Power, Measurement of Power, Steam Power, Air Power Appliances, Electric Power and Construction, Navigation and Roads, Gearing, Motion and Devices, Controlling Motion, Horological, Mining, Mill and Factory Appliances, Construction and Devices, Drafting Devices, Miscellaneous Devices, etc. 11th edition. 400 octavo pages. **\$2.50**

MECHANICAL APPLIANCES, MECHANICAL MOVEMENTS AND NOVELTIES OF CONSTRUCTION. By GARDNER D. HISCOX. This is a supplementary volume to the one upon mechanical movements. Unlike the first volume, which is more elementary in character, this volume contains illustrations and descriptions of many combinations of motions and of mechanical devices and appliances found in different lines of Machinery. Each device being shown by a line drawing with a description showing its working parts and the method of operation. From the multitude of devices described, and illustrated, might be mentioned, in passing, such items as conveyors and elevators, Prony brakes, thermometers, various types of boilers, solar engines, oil-fuel burners, condensers, evaporators, Corliss and other valve gears, governors, gas engines, water motors of various descriptions, air ships, motors and dynamos, automobile and motor bicycles, railway block signals, car couples, link and gear motions, ball bearings, breech block mechanism for heavy guns, and a large accumulation of others of equal importance. 1,000 specially made engravings. 396 octavo pages. **\$2.50**

SPECIAL OFFER These two volumes sell for \$2.50 each, but when the two volumes are ordered at one time from us, we send them prepaid to any address in the world, on receipt of \$4.00. You save \$1 by ordering the two volumes of Mechanical Movements at one time.

MODERN MACHINE SHOP CONSTRUCTION, EQUIPMENT AND MANAGEMENT. By OSCAR E. PERRIGO. The only work published that describes the Modern Machine Shop or Manufacturing Plant from the time the grass is growing on the site intended for it until the finished product is shipped. Just the book needed by those contemplating the erection of modern shop buildings, the rebuilding and reorganization of old ones, or the introduction of Modern Shop Methods, Time and Cost Systems. It is a book written and illustrated by a practical shop man for practical shop men who are too busy to read theories and want facts. It is the most complete all-around book of its kind ever published. 400 large quarto pages, 225 original and specially-made illustrations. **\$5.00**

MODERN MACHINE SHOP TOOLS; THEIR CONSTRUCTION, OPERATION, AND MANIPULATION. By W. H. VANDERVOORT. A work of 555 pages and 673 illustrations, describing in every detail the construction, operation, and manipulation of both Hand and Machine Tools. Includes chapters on filing, fitting, and scraping surfaces; on drills, reamers, taps, and dies; the lathe and its tools; planers, shapers, and their tools; milling machines and cutters; gear cutters and gear cutting; drilling machines and drill work; grinding machines and their work; hardening and tempering; gearing, belting and transmission machinery; useful data and tables. **\$4.00**

THE MODERN MACHINIST. By JOHN T. USHER. This book might be called a compendium of shop methods, showing a variety of special tools and appliances which will give new ideas to many mechanics from the superintendent down to the man at the bench. It will be found a valuable addition to any machinist's library and should be consulted whenever a new or difficult job is to be done, whether it is boring, milling, turning, or planing, as they are all treated in a practical manner. Fifth edition. 320 pages, 250 illustrations. **\$2.50**

MODERN MECHANISM. Edited by PARK BENJAMIN. A practical treatise on machines, motors and the transmission of power, being a complete work and a supplementary volume to Appleton's Cyclopedia of Applied Mechanics. Deals solely with the principal and most useful advances of the past few years. 959 pages containing over 1,000 illustrations; bound in half morocco. **\$4.00**

MODERN MILLING MACHINES: THEIR DESIGN, CONSTRUCTION AND OPERATION. By JOSEPH G. HORNER. This book describes and illustrates the Milling Machine and its work in such a plain, clear, and forceful manner, and illustrates the subject so clearly and completely, that the up-to-date machinist, student, or mechanical engineer can not afford to do without the valuable information which it contains. It describes not only the early machines of this class, but notes their gradual development into the splendid machines of the present day, giving the design and construction of the various types, forms, and special features produced by prominent manufacturers, American and foreign. 304 pages, 300 illustrations. **\$4.00**

"SHOP KINKS." By ROBERT GRIMSHAW. This shows special methods of doing work of various kinds, and reducing cost of production. Has hints and kinks from some of the largest shops in this country and Europe. You are almost sure to find some that apply to your work, and in such a way as to save time and trouble. 400 pages. Fourth edition. **\$2.50**

TOOLS FOR MACHINISTS AND WOOD WORKERS, INCLUDING INSTRUMENTS OF MEASUREMENT. By JOSEPH G. HORNER. A practical treatise of 340 pages, fully illustrated and comprising a general description and classification of cutting tools and tool angles, allied cutting tools for machinists and woodworkers; shearing tools; scraping tools; saws; milling cutters; drilling and boring tools; taps and dies; punches and hammers; and the hardening, tempering and grinding of these tools. Tools for measuring and testing work, including standards of measurement; surface plates; levels; surface gauges; dividers; calipers; verniers; micrometers; snap, cylindrical and limit gauges; screw thread, wire and reference gauges, indicators, templets, etc. **\$3.50**

MANUAL TRAINING

ECONOMICS OF MANUAL TRAINING. By LOUIS ROUILLION. The only book that gives just the information needed by all interested in manual training, regarding buildings, equipment and supplies. Shows exactly what is needed for all grades of the work from the Kindergarten to the High and Normal School. Gives itemized lists of everything needed and tells just what it ought to cost. Also shows where to buy supplies. **\$1.50**

MARINE ENGINEERING

MARINE ENGINES AND BOILERS, THEIR DESIGN AND CONSTRUCTION. By DR. G. BAUER, LESLIE S. ROBERTSON, and S. BRYAN DONKIN. This work is clearly written, thoroughly systematic, theoretically sound; while the character of its plans, drawings, tables, and statistics is without reproach. The illustrations are careful reproductions from actual working drawings, with some well-executed photographic views of completed engines and boilers. **\$9.00 net**

MINING

ORE DEPOSITS OF SOUTH AFRICA WITH A CHAPTER ON HINTS TO PROSPECTORS. By J. P. JOHNSON. This book gives a condensed account of the ore-deposits at present known in South Africa. It is also intended as a guide to the prospector. Only an elementary knowledge of geology and some mining experience are necessary in order to understand this work. With these qualifications, it will materially assist one in his search for metalliferous mineral occurrences and, so far as simple ores are concerned, should enable one to form some idea of the possibilities of any they may find.

Among the chapters given are: Titaniferous and Chromiferous Iron Oxides—Nickel—Copper—Cobalt—Tin—Molybdenum—Tungsten—Lead—Mercury—Antimony—Iron—Hints to Prospectors. Illustrated. **\$2.00**

PRACTICAL COAL MINING. By T. H. COCKIN. An important work, containing 428 pages and 213 illustrations, complete with practical details, which will intuitively impart to the reader, not only a general knowledge of the principles of coal mining, but also considerable insight into allied subjects. The treatise is positively up to date in every instance, and should be in the hands of every colliery engineer, geologist, mine operator, superintendent, foreman, and all others who are interested in or connected with the industry. **\$2.50**

PHYSICS AND CHEMISTRY OF MINING. By T. H. BYROM. A practical work for the use of all preparing for examinations in mining or qualifying for colliery managers' certificates. The aim of the author in this excellent book is to place clearly before the reader useful and authoritative data which will render him valuable assistance in his studies. The only work of its kind published. The information incorporated in it will prove of the greatest practical utility to students, mining engineers, colliery managers, and all others who are specially interested in the present-day treatment of mining problems. 160 pages. Illustrated. **\$2.00**

MISCELLANEOUS

BRONZES. Henley's Twentieth Century Receipt Book contains many practical formulas on bronze casting, imitation bronze, bronze polishes, renovation of bronze. See page 24 for full description of this book. **\$3.00**

EMINENT ENGINEERS. By DWIGHT GODDARD. Everyone who appreciates the effect of such great inventions as the Steam Engine, Steamboat, Locomotive, Sewing Machine, Steel Working, and other fundamental discoveries, is interested in knowing a little about the men who made them and their achievements.

Mr. Goddard has selected thirty-two of the world's engineers who have contributed most largely to the advancement of our civilization by mechanical means, giving only such facts as are of general interest and in a way which appeals to all, whether mechanics or not. 280 pages, 35 illustrations. **\$1.50**

LAWS OF BUSINESS, By THEOPHILUS PARSONS, LL.D. The Best Book for Business Men ever Published. Treats clearly of Contracts, Sales, Notes, Bills of Exchange, Agency, Agreement, Stoppage in Transitu, Consideration, Limitations, Leases, Partnership, Executors, Interest, Hotel Keepers, Fire and Life Insurance, Collections, Bonds, Frauds, Receipts, Patents, Deeds, Mortgages, Liens, Assignments, Minors, Married Women, Arbitration, Guardians, Wills, etc. Three Hundred Approved Forms are given. Every Business Man should have a copy of this book for ready reference. The book is bound in full sheep, and contains 864 Octavo Pages. Our special price. **\$3.50**

PATTERN MAKING

PRACTICAL PATTERN MAKING. By F. W. BARROWS. This is a very complete and entirely practical treatise on the subject of pattern making, illustrating pattern work in wood and metal. From its pages you are taught just what you should know about pattern making. It contains a detailed description of the materials used by pattern makers, also the tools, both those for hand use, and the more interesting machine tools; having complete chapters on The Band Saw, The Buzz Saw, and The Lathe. Individual patterns of many different kinds are fully illustrated and described, and the mounting of metal patterns on plates for molding machines is included. **\$2.00**

PERFUMERY

HENLEY'S TWENTIETH CENTURY BOOK OF RECEIPTS, FORMULAS AND PROCESSES. Edited by G. D. HISCOX. The most valuable Techno-Chemical Receipt Book published. Contains over 10,000 practical Receipts many of which will prove of special value to the perfumer, a mine of information, up to date in every respect. Cloth, **\$3.00**; half morocco. See page 24 for full description of this book. **\$4.00**

PERFUMES AND THEIR PREPARATION. By G. W. ASKINSON, Perfumer. A comprehensive treatise, in which there has been nothing omitted that could be of value to the Perfumer. Complete directions for making handkerchief perfumes, smelling-salts, sachets, fumigating pastilles; preparations for the care of the skin, the mouth, the hair, cosmetics, hair dyes and other toilet articles are given, also a detailed description of aromatic substances; their nature, tests of purity, and wholesale manufacture. A book of general, as well as professional interest, meeting the wants not only of the druggist and perfume manufacturer, but also of the general public. Third edition. 312 pages. Illustrated. **\$3.00**

PLUMBING

MODERN PLUMBING ILLUSTRATED. By R. M. STARBUCK. The author of this book, Mr. R. M. Starbuck, is one of the leading authorities on plumbing in the United States. The book represents the highest standard of plumbing work. It has been adopted and used as a reference book by the United States Government, in its sanitary work in Cuba, Porto Rico and the Philippines, and by the principal Boards of Health of the United States and Canada.

It gives Connections, Sizes and Working Data for All Fixtures and Groups of Fixtures. It is helpful to the Master Plumber in Demonstrating to his customers and in figuring work. It gives the Mechanic and Student quick and easy Access to the best Modern Plumbing Practice. Suggestions for Estimating Plumbing Construction are contained in its pages. This book represents, in a word, the latest and best up-to-date practice, and should be in the hands of every architect, sanitary engineer and plumber who wishes to keep himself up to the minute on this important feature of construction. 400 octavo pages, fully illustrated by 55 full-page engravings. **\$4.00**

RUBBER

HENLEY'S TWENTIETH CENTURY BOOK OF RECEIPTS, FORMULAS AND PROCESSES. Edited by GARDNER D. HISCOX. Contains upward of 10,000 practical receipts, including among them formulas on artificial rubber. See page 24 for full description of this book. **\$3.00**

RUBBER HAND STAMPS AND THE MANIPULATION OF INDIA RUBBER. By T. O'CONOR SLOANE. This book gives full details on all points, treating in a concise and simple manner the elements of nearly everything it is necessary to understand for a commencement in any branch of the India Rubber Manufacture. The making of all kinds of Rubber Hand Stamps, Small Articles of India Rubber, U. S. Government Composition, Dating Hand Stamps, the Manipulation of Sheet Rubber, Toy Balloons, India Rubber Solutions, Cements, Blackings, Renovating Varnish, and Treatment for India Rubber Shoes, etc.; the Hektograph Stamp Inks, and Miscellaneous Notes, with a Short Account of the Discovery, Collection, and Manufacture of India Rubber are set forth in a manner designed to be readily understood, the explanations being plain and simple. Second edition. 144 pages. Illustrated. **\$1.00**

SAWS

SAW FILING AND MANAGEMENT OF SAWS. By ROBERT GRIMSHAW. A practical hand book on filing, gumming, swaging, hammering, and the brazing of band saws, the speed, work, and power to run circular saws, etc. A handy book for those who have charge of saws, or for those mechanics who do their own filing, as it deals with the proper shape and pitches of saw teeth of all kinds and gives many useful hints and rules for gumming, setting, and filing, and is a practical aid to those who use saws for any purpose. New edition, revised and enlarged. Illustrated. **\$1.00**

SCREW CUTTING

THREADS AND THREAD CUTTING. By COLVIN and STABEL. This clears up many of the mysteries of thread-cutting, such as double and triple threads, internal threads, catching threads, use of hobs, etc. Contains a lot of useful hints and several tables. **25 cents**

SHEET METAL WORK

DIES, THEIR CONSTRUCTION AND USE FOR THE MODERN WORKING OF SHEET METALS. By J. V. WOODWORTH. A new book by a practical man, for those who wish to know the latest practice in the working of sheet metals. It shows how dies are designed, made and used, and those who are engaged in this line of work can secure many valuable suggestions. **\$3.00**

PUNCHES, DIES AND TOOLS FOR MANUFACTURING IN PRESSES. By J. V. WOODWORTH. A work of 500 pages and illustrated by nearly 700 engravings, being an encyclopedia of die-making, punch-making, die sinking, sheet-metal working, and making of special tools, subpresses, devices and mechanical combinations for punching, cutting, bending, forming, piercing, drawing, compressing, and assembling sheet-metal parts and also articles of other materials in machine tools. **\$4.00**

STEAM ENGINEERING

AMERICAN STATIONARY ENGINEERING. By W. E. CRANE. A new book by a well-known author. Begins at the boiler room and takes in the whole power plant. Contains the result of years of practical experience in all sorts of engine rooms and gives exact information that cannot be found elsewhere. It's plain enough for practical men and yet of value to those high in the profession. Has a complete examination for a license. **\$2.00**

BOILER ROOM CHART. By GEO. L. FOWLER. A Chart—size 14 x 28 inches—showing in isometric perspective the mechanisms belonging in a modern boiler room. Water tube boilers, ordinary grates and mechanical stokers, feed water heaters and pumps comprise the equipment. The various parts are shown broken or removed, so that the internal construction is fully illustrated. Each part is given a reference number, and these, with the corresponding name, are given in a glossary printed at the sides. This chart is really a dictionary of the boiler room—the names of more than 200 parts being given. It is educational—worth many times its cost. **25 cents**

ENGINE RUNNER'S CATECHISM. By ROBERT GRIMSHAW. Tells how to erect, adjust, and run the principal steam engines in use in the United States. The work is of a handy size for the pocket. To young engineers this catechism will be of great value, especially to those who may be preparing to go forward to be examined for certificates of competency; and to engineers generally it will be of no little service as they will find in this volume more really practical and useful information than is to be found anywhere else within a like compass. 387 pages. Sixth edition. **\$2.00**

ENGINE TESTS AND BOILER EFFICIENCIES. By J. BUCHETTI. This work fully describes and illustrates the method of testing the power of steam engines, turbine and explosive motors. The properties of steam and the evaporative power of fuels. Combustion of fuel and chimney draft; with formulas explained or practically computed. 255 pages, 179 illustrations. **\$3.00**

HORSE POWER CHART. Shows the horse power of any stationary engine without calculation. No matter what the cylinder diameter or stroke; the steam pressure or cut-off; the revolutions, or whether condensing or non-condensing, it's all there. Easy to use, accurate, and saves time and calculations. Especially useful to engineers and designers. **50 cents**

MODERN STEAM ENGINEERING IN THEORY AND PRACTICE. By GARDNER D. HISCOX. This is a complete and practical work issued for Stationary Engineers and Firemen dealing with the care and management of Boilers, Engines, Pumps, Superheated Steam, Refrigerating Machinery, Dynamos, Motors, Elevators, Air Compressors, and all other branches with which the modern Engineer must be familiar. Nearly 200 Questions with their Answers on Steam and Electrical Engineering, likely to be asked by the Examining Board, are included. 487 pages, 405 engravings. **\$3.00**

STEAM ENGINE CATECHISM. By ROBERT GRIMSHAW. This volume of 413 pages is not only a catechism on the question and answer principle; but it contains formulas and worked-out answers for all the Steam problems that appertain to the operation and management of the Steam Engine. Illustrations of various valves and valve gear with their principles of operation are given. 34 tables that are indispensable to every engineer and fireman that wishes to be progressive and is ambitious to become master of his calling are within its pages. It is a most valuable instructor in the service of Steam Engineering. Leading engineers have recommended it as a valuable educator for the beginner as well as a reference book for the engineer. Sixteenth edition. **\$2.00**

STEAM ENGINEER'S ARITHMETIC. By COLVIN-CHENEY. A practical pocket book for the Steam Engineer. Shows how to work the problems of the engine room and shows "why." Tells how to figure horse-power of engines and boilers; area of boilers; has tables of areas and circumferences; steam tables; has a dictionary of engineering terms. Puts you onto all of the little kinks in figuring whatever there is to figure around a power plant. Tells you about the heat unit; absolute zero; adiabatic expansion; duty of engines; factor of safety; and 1,001 other things; and everything is plain and simple—not the hardest way to figure, but the easiest. **50 cents**

STEAM HEATING AND VENTILATION

PRACTICAL STEAM, HOT-WATER HEATING AND VENTILATION. By A. G. KING. This book is the standard and latest work published on the subject and has been prepared for the use of all engaged in the business of steam, hot-water heating and ventilation. It is an original and exhaustive work. Tells how to get heating contracts, how to install heating and ventilating apparatus, the best business methods to be used, with "Tricks of the Trade" for shop use. Rules and data for estimating radiation and cost and such tables and information as make it an indispensable work for everyone interested in steam, hot-water heating and ventilation. It describes all the principal systems of steam, hot-water, vacuum, vapor and vacuum-vapor heating, together with the new accelerated systems of hot-water circulation, including chapters on up-to-date methods of ventilation and the fan or blower system of heating and ventilation.

You should secure a copy of this book, as each chapter contains a mine of practical information. 367 pages, 300 detailed engravings. **\$3.00**

STEAM PIPES

STEAM PIPES: THEIR DESIGN AND CONSTRUCTION. By WM. H. BOOTH. The work is well illustrated in regard to pipe joints, expansion offsets, flexible joints, and self-contained sliding joints for taking up the expansion of long pipes. In fact, the chapters on the flow of Steam and expansion of pipes are most valuable to all steam fitters and users. The pressure strength of pipes and method of hanging them is well treated and illustrated. Valves and by-passes are fully illustrated and described, as are also flange joints and their proper proportions. Exhaust heads and separators. One of the most valuable chapters is that on superheated steam and the saving of steam by insulation with the various kinds of felting and other materials, with comparison tables of the loss of heat in thermal units from naked and felted steam pipes. Contains 187 pages. **\$2.00**

STEEL

AMERICAN STEEL WORKER. By E. R. MARKHAM. The standard work on hardening, tempering and annealing steel of all kinds. A practical book for the machinist, tool maker or superintendent. Shows just how to secure best results in any case that comes along. How to make and use furnaces and case harden; how to handle high-speed steel and how to temper for all classes of work. **\$2.50**

HARDENING, TEMPERING, ANNEALING, AND FORGING OF STEEL. By J. V. WOODWORTH. A new book containing special directions for the successful hardening and tempering of all steel tools. Milling cutters, taps, thread dies, reamers, both solid and shell, hollow mills, punches and dies, and all kinds of sheet-metal working tools, shear blades, saws, fine cutlery and metal-cutting tools of all descriptions, as well as for all implements of steel both large and small, the simplest, and most satisfactory hardening and tempering processes are presented. The uses to which the leading brands of steel may be adapted are concisely presented, and their treatment for working under different conditions explained, as are also the special methods for the hardening and tempering of special brands. 320 pages, 250 illustrations. **\$2.50**

HENLEY'S TWENTIETH CENTURY BOOK OF RECEIPTS, FORMULAS AND PROCESSES. Edited by GARDNER D. HISCOX. The most valuable techno-chemical Receipt book published, giving, among other practical receipts, methods of annealing, coloring, tempering, welding, plating, polishing and cleaning steel. See page 24 for full description of this book. **\$3.00**

WATCH MAKING

HENLEY'S TWENTIETH CENTURY BOOK OF RECEIPTS, FORMULAS AND PROCESSES. Edited by GARDNER D. HISCOX. Contains upwards of 10,000 practical formulas including many watchmakers' formulas. **\$3.00**

WATCHMAKER'S HANDBOOK. By CLAUDIUS SAUNIER. No work issued can compare with this book for clearness and completeness. It contains 498 pages and is intended as a workshop companion for those engaged in Watchmaking and allied Mechanical Arts. Nearly 250 engravings and fourteen plates are included. **\$3.00**

WIRELESS TELEPHONES

WIRELESS TELEPHONES AND HOW THEY WORK. By JAMES ERSKINE-MURRAY. This work is free from elaborate details and aims at giving a clear survey of the way in which Wireless Telephones work. It is intended for amateur workers and for those whose knowledge of Electricity is slight. Chapters contained: How We Hear—Historical—The Conversion of Sound into Electric Waves—Wireless Transmission—The Production of Alternating Currents of High Frequency—How the Electric Waves are Radiated and Received—The Receiving Instruments—Detectors—Achievements and Expectations—Glossary of Technical Words. Cloth. **\$1.00**





Henley's Twentieth Century Book of

Recipes, Formulas and Processes

Edited by GARDNER D. HISCOX, M. E.

Price \$3.00 Cloth Binding

\$4.00 Half Morocco Binding

Contains over 10,000 Selected Scientific, Chemical,
Technological and Practical Recipes and
Processes, including Hundreds of
So-Called Trade Secrets
for Every Business

THIS book of 800 pages is the most complete Book of Recipes ever published, giving thousands of recipes for the manufacture of valuable articles for every-day use. Hints, Helps, Practical Ideas and Secret Processes are revealed within its pages. It covers every branch of the useful arts and tells thousands of ways of making money and is just the book everyone should have at his command.

The pages are filled with matters of intense interest and immeasurable practical value to the Photographer, the Perfumer, the Painter, the Manufacturer of Glues, Pastes, Cements and Mucilages, the Physician, the Druggist, the Electrician, the Brewer, the Engineer, the Foundryman, the Machinist, the Potter, the Tanner, the Confectioner, the Chiroprapist, the Manufacturer of Chemical Novelties and Toilet Preparations, the Dyer, the Electroplater, the Enameler, the Engraver, the Provisioner, the Glass Worker, the Goldbeater, the Watchmaker and Jeweler, the Ink Manufacturer, the Optician, the Farmer, the Dairyman, the Paper Maker, the Metal Worker, the Soap Maker, the Veterinary Surgeon, and the Technologist in general.

A book to which you may turn with confidence that you will find what you are looking for. A mine of information up-to-date in every respect. Contains an immense number of formulas that every one ought to have that are not found in any other work.

JUN 8 1912

LIBRARY OF CONGRESS



0 018 373 759 4